

FOR CAR USE ONLY/NUR FÜR AUTOMOBIL GEBRAUCH/POUR APPLICATION AUTOMOBILE UNIQUEMENT/PARA USO EN AUTOMÓVILES/SOLO PER L'UTILIZZO IN AUTOMOBILE/ENDAST FÖR BILBRUK/ALLEEN VOOR GEBRUIK IN DE AUTO/ТОЛЬКО ДЛЯ ИСПОЛЬЗОВАНИЯ В АВТОМОБИЛЯХ/DO UŻYCIA TYLKO W SAMOCHODZIE/ΓΙΑ ΧΡΗΣΗ ΜΟΝΟ ΣΕ ΑΥΤΟΚΙΝΗΤΟ



ADVANCED NAVI STATION

INE-W920R

8-INCH ADVANCED NAVI STATION

INE-W928R



DIVX MP3 AAC



- **OWNER'S MANUAL**
Please read before using this equipment.
- **BEDIENUNGSANLEITUNG**
Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- **MODE D'EMPLOI**
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL DE OPERACIÓN**
Léalo antes de utilizar este equipo.
- **ISTRUZIONI PER L'USO**
Si prega di leggere prima di utilizzare il attrezzatura.

- **ANVÄNDARHANDLEDNING**
Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- **GEBRUIKERSHANDLEIDING**
Lees deze aanwijzingen aandachtig alvorens dit toestel te gebruiken.
- **РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ**
Прочтите настоящее руководство перед началом использования оборудования.
- **INSTRUKCJA OBSŁUGI**
Prosimy zapoznać się z tą instrukcją przed przystąpieniem do użytkowania urządzenia.
- **ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ**
Παρακαλούμε διαβάστε το πριν χρησιμοποιήσετε τη συσκευή.

EN

DE

FR

ES

IT

SE

NL

RU

PL

GR

ALPINE ELECTRONICS MARKETING, INC.
1-7, Yukigaya-Otsukamachi, Ota-ku,
Tokyo 145-0067, JAPAN
Phone: 03-5499-4531

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
777 Supertest Road, Toronto,
Ontario M3J 2M9, Canada
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH
Wilhelm-Wagenfeld-Str. 1-3, 80807 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue de la Belle Etoile, Z.I. Paris Nord II,
B.P. 50016, 95945 Roissy Charles de Gaulle
Cedex, France
Phone 01-48638989

ALPINE ITALIA S.p.A.
Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

ALPINE ELECTRONICS (BENELUX) GmbH
Leuvensesteenweg 510-B6,
1930 Zaventem, Belgium
Phone 02-725-13 15

Contents

Operating Instructions

PRECAUTIONS

IMPORTANT INFORMATION, PLEASE
READ CAREFULLY BEFORE USING THIS
PRODUCT. 8

WARNING

Points to Observe for Safe Usage 8
WARNING 8
CAUTION 9
NOTICE 10
Discs Playable on This Unit 11

Features

Auto user setting change 15
My Favorites 15
Easy sound setting by car type
(i-Personalize) 16
About Dual Screen 16
Dual Screen Display Position 17

Getting Started

Accessory List 18

For INE-W920R

Location of Controls 18
Turning Power On or Off 18
Turning the System On 19
Detaching and Attaching the Front Panel 19
Initial System Start-Up 20
Inserting/Ejecting a Disc 20
 Inserting the Disc 20
 Removing the Disc 20
Adjusting the Volume 20
Lowering Volume Quickly 20

For INE-W928R

Location of Controls21
Turning Power On or Off21
Turning the System On21
Initial System Start-Up22
Inserting/Ejecting a Disc22
 Inserting the Disc22
 Removing the Disc22
Adjusting the Monitor Viewing Angle22
Adjusting the Volume22
Lowering Volume Quickly22

Common Operations

Using My Favorites23
User Registration23
Setting My Favorites24
 Adding My Favorites24
 Editing My Favorites25
 Displaying the Camera Image25
 i-Personalize Setup26
Settings When Switching Users27
How to Input Characters and Numbers
(Keypad)27
Top banner and Bottom banner Fade Out
 Setting28
Switching Sources28
 Screen Off Function28
Switching the Dual Screen Display28
Touch operation29
Selecting an Item in a List29
About the Indicator Display29

Radio

Listening to the Radio30
Presetting Stations Manually30
Presetting Stations Automatically30
Tuning to Preset Stations30

RDS

Turning AF (Alternative Frequencies)
 On or Off31
Receiving Traffic Information31
Receiving Traffic Information Manually32
PTY (Programme Type) Tuning32

Priority News	32
Displaying Radio Text	32

CD/MP3/WMA/AAC

Playback	33
Repeat Play	33
M.I.X. (Random Play)	33
Selecting Folders (Concerning MP3/WMA/AAC)	33
Searching from CD Text	34
File/Folder Name Search (Concerning MP3/WMA/AAC)	34
About MP3/WMA/AAC	34

DVD

Playing a Disc	36
If a Menu Screen Appears	37
Numeric Keypad Input Operations	37
Displaying the Top Menu Screen	37
Displaying the Menu Screen	37
Stopping Playback (PRE STOP)	38
Stopping Playback	38
Fast-forwarding/Fast-reversing	38
Finding the Beginnings of Chapters/Tracks/ Files	38
Playing Still Frames (Pausing)	38
Forward frame-by-frame Playback	38
Slow Motion Playback	38
Selecting Folders	39
Repeat Playback	39
Searching by Title Number	39
Searching Directly by Chapter Number	39
Searching for a Desired Video File	39
Switching the Angle	40
Switching the Audio Tracks	40
Switching the Subtitles (Subtitle Language)	40
About DivX®	40

Setup

Setup Operation

General Setup

General Setup Operation	41
Language Setting	41
Setting the Scroll	41
Format settings	41
Setting the Menu Language	41
Remote Sensor Setting	42
Security Code Setting	42
Setting Security code	42
Setting Top banner and Bottom banner Display	42
Screen/LED Customize	42
Setting the Brightness of the Backlighting	42
Adjusting the Minimum Level of Backlight	42
Adjusting the Dimmer of Button Lighting at Night	42
Switching the Display Colour	43
Adjusting the Touch Panel	43
Initialising the Touch Panel Corrected Values	43
Visual Setting	43
Switching Display Modes	43
Adjusting the Live Contrast	44
Selecting the Visual EQ Mode (Factory's setting)	44
Adjusting Brightness	44
Adjusting Colour of Picture	44
Adjusting Tint of Picture	44
Adjusting Image Contrast	44
Adjusting Picture Quality	44
Saving and calling the adjusted picture quality	44
About INE-W920R/INE-W928R	44
Displaying the Product Information	44
Checking the DivX® Registration	44
Initialising the System	45
Installation Setup	45

Sound Setup

Sound Setup Operation	45
Setting the Balance/Fader/Subwoofer	46
Adjusting the Balance/Fader	46
Rear Speaker Setting	46
Turning Subwoofer ON/OFF	46
Adjusting the Subwoofer Level	46

Setting the Subwoofer Phase	46
Setting the MX (Media Xpander)	46
Equalizer Presets (Bass Max EQ)	47
Adjusting the Parametric Equalizer Curve (Parametric EQ)	47
Adjusting the Time Correction (Time Correction)	48
Adjusting the Crossover Settings (X-OVER)	48
Setting Defeat	49
Volume Setting	49
Setting the Volume for Each Source	49
About Time Correction	49
About the Crossover	51

Source Setup

Source Setup Operation	52
Source Layout Setting	52
Disc Setting	52
Changing the language setting	52
Setting of the Menu Language	52
Setting of the Audio Language	52
Setting of the Subtitle Language	53
Changing the Country Code Setting	53
Setting the Rating Level (Parental Lock)	53
Setting the TV Screen Mode	53
Radio Setting	54
PI SEEK Setting	54
Receiving RDS Regional (Local) Stations	54
Switching the Display Language of PTY (Programme Type)	54
Setting PTY31 (Emergency Broadcast) Reception	54
Setting the TUNER (FM) Tone Quality (Tuner Condition)	54
AUX Setting	55
Setting the AUX Mode	55
Setting the Primary AUX Name (AUX Setup)	55
Setting the AUX3	55
Setting the AUX3 Sel. (Switching the Visual Input Signal System)	55
RSE Setting	55
Setting the Rear Seat Entertainment System	55

BLUETOOTH Setup

BLUETOOTH Setup Operation	56
BLUETOOTH Setting	56
Displaying BLUETOOTH Information	56
Registering the BLUETOOTH Device	56
Automatic Connection setting	57
Setting the Passcode	57
Changing the Character Code of the Phone Book	57
Setting Received Calls Automatically	57
Setting the time for automatic reception of a call	58
Selecting the Output Speaker	58
Adjusting the Receive Volume	58
Adjusting the Transmit Volume	58
Adjusting the Calling Volume	58
Deleting All the Histories	58

Camera Setup

Camera Setup Operation	59
Direct Camera Setting	59
Setting the Camera Input	59
AUX Camera Setting	60
Setting the Camera Input	60
Camera Interrupt Setting (Power OFF Mode)	61

BLUETOOTH Operation

Setup Before Using	62
About BLUETOOTH	62
About the Hands-Free Phone	62
Before Using BLUETOOTH	62

Hands-Free Phone Control

Connecting a BLUETOOTH Device	62
Disconnecting the BLUETOOTH Connection	62
Changing the connecting BLUETOOTH Device	63
Answering a Call	63
Adjusting ringtone volume	63
Hanging up the Telephone	63
Calling	63
Using Short Cut Dialling to Make a Call	63
Dialling a Number In Call History	63
Dialling a Number In the Phone Book	63

Entering a Phone Number to Make a Call	64
Redial Function	64
Operations During a Conversation	64
Adjusting the Speech Volume	64
Changing the Voice Output	64
DTMF (Touch-Tone) Function	64
Phone Book Function	65
Synchronising the Phone Book	65
Adding the Phone Book	65
Deleting the Phone Book Entries	65
Assigning as a Short Cut Dialling Number	65

BLUETOOTH Audio

Playback	67
Repeat Play	67
M.I.X. (Random Play)	67
Selecting Groups	67
Search Function	67

Auxiliary Device (Optional)

Operating Auxiliary Devices (Optional)	68
Operating an External DVD Player	68
Change to the External DVD Mode	68
About the DVD Operation Screen	69
Operating an External DVD Changer	69
Change to the External DVD Changer Mode	69
About the DVD Changer Operation Screen	70
Operating the Mobile Digital TV Receiver (DVB-T)	70
Changing to the Mobile Digital TV Receiver (DVB-T) Mode	70
About the DVB-T operation screen	70
Operating a TV	70
Change to the TV mode	70
About the TV operation screen	71

Camera Operation (Optional)

Rear Camera Operation	72
Displaying the rear view video while the car is in reverse	72
Switching the Image Pattern for the Rear Camera	72
Guide Display ON/OFF Setting	72
Adjusting the Caution Display Location	72
About the Rear Camera Guide	73
Front Camera Operation	74

Displaying the Front View Video Manually	74
Switching the Image Pattern for the Front Camera	75
About the adjustment of guide display ON/OFF setting and adjustment of Caution display location	75
Other Camera Operation	75
About the adjustment of the Caution display location	75

USB Memory (Optional)

Playback	76
Repeat Play	76
Random Play (M.I.X.)	77
Random Play (M.I.X. ALL)	77
Searching for a Desired Song	77
File/Folder Name Search	77
Tag Search	77
Direct Up/Down Function	78
Select the desired Folder (Folder up/down)	78

iPod/iPhone (Optional)

Playback	80
Searching for a Music File	80
Searching for a Desired Video File	80
Alphabet Skip Function	81
Direct Up/Down Function	81
Search Position Memory	81
Repeat Play	81
Random Play (Shuffle)	81
Random Play (Shuffle All)	81

Information

Product Software Update	82
About DVDs	82
List of Language Codes	83
List of Country Codes	84
In Case of Difficulty	86
If this Message Appears	87
Specifications	89
END USER LICENSE AGREEMENT (Microsoft)	90
END USER LICENSE AGREEMENT (NAVTEQ)	92

Installation and Connections

Warning 94
Caution 94
Precautions 94
Installation 95
Connections 98
System Example 102



Operating Instructions

PRECAUTIONS

IMPORTANT INFORMATION, PLEASE READ CAREFULLY BEFORE USING THIS PRODUCT.

This product is intended to safely provide turn-by-turn instructions to get you to a desired destination. Please read the following precautions to ensure that you use this navigation system correctly.

- *This product is not a substitute for your personal judgment. Any route suggestions made by this navigation system should never supersede any local traffic regulations or your personal judgment and/or knowledge of safe driving practices. Do not follow route suggestions if the navigation system instructs you to perform an unsafe or illegal manoeuvre, places you in an unsafe situation, or routes you into an area which you consider unsafe.*
- *Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, stop in a safe and legal manner and location.*
- *Do not input destinations, change settings, or access any functions requiring a prolonged view of the monitor while you are driving. Stop in a safe and legal manner and location before attempting to access the system.*
- *When using the navigation system to find/route to an emergency service, please contact the facility to validate and verify availability, prior to driving to it. Not all locations of emergency service providers such as police and fire stations, hospitals, and clinics are contained in the database. Please use your own judgment and your ability to ask for directions in these situations.*
- *The map database contained within the media (SD memory card) in which it is stored is the most recent map data available at the time of production. Because of changes in streets and neighborhoods, there may be situations where the navigation system may not be able to route you to your desired destination. In these cases, use your own personal judgment.*
- *The map database is designed to provide you with route suggestions, it does not take account of the relative safety of a suggested route, or of factors which may affect the time required to reach your destination. The system does not reflect road closures or construction, road characteristics (i.e. type of road surface, slope or grade, weight or height restrictions, etc.), traffic congestion, weather conditions, or any other factors which may affect the safety or timing of your driving experience. Use your personal judgment if the navigation system is unable to provide you with an alternate route.*
- *There may be situations where the navigation system may display the vehicle's location erroneously. Use your own driving judgment in this situation, taking into account current driving conditions. Please be aware that in this situation, the navigation system should correct the vehicle's position automatically; however, there may be times where you may have to correct the position yourself. If this is the case, stop in a safe and legal manner and location before attempting operation.*

- *Make certain that the volume level of the unit is set to a level which still allows you to hear outside traffic and emergency vehicles. Driving while unable to hear outside sounds could cause an accident.*
- *Please make certain that any other person who intends on using this navigation system reads these precautions and the following instructions carefully.*

If there is anything in the manual about the operation of the navigation system which you are uncertain about, please contact your local Alpine authorised navigation dealer before using the navigation system.

WARNING

Points to Observe for Safe Usage

- *Read this manual carefully before using this disc and the system components. They contain instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.*
- *This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are the meanings of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system properly.*



WARNING

- Operation of the system while driving is dangerous. Users should stop vehicle before operating the software.
- Road conditions and regulations take precedence over information contained on the map display: observe actual traffic restrictions and circumstances while driving.
- This software is designed for use exclusively in the INE-W920R/INE-W928R. It cannot and may not be used in conjunction with other hardware.



WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE EMERGENCY BRAKE IS APPLIED.

It is dangerous for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured.

DO NOT WATCH VIDEO WHILE DRIVING.

Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

DO NOT FOLLOW ROUTE SUGGESTIONS IF THE NAVIGATION SYSTEM INSTRUCTS YOU TO PERFORM AN UNSAFE OR ILLEGAL MANEUVER, OR PLACES YOU IN AN UNSAFE SITUATION OR AREA.

This product is not a substitute for your personal judgment. Any route suggestions by this system should never supersede any local traffic regulations or your personal judgment or knowledge of safe driving practice.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

MINIMIZE DISPLAY VIEWING WHILE DRIVING.

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.



CAUTION

**This symbol means important instructions.
Failure to heed them can result in injury or
material property damage.**

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.

KEEP FINGERS AWAY WHILE THE MOTORIZED FRONT PANEL OR MOVING MONITOR IS IN MOTION.

Failure to do so may result in personal injury or damage to the product.

NOTICE

Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

Moisture Condensation

You may notice the disc playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

Damaged Disc

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

 
Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Never Attempt the Following

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.

Do not attempt to insert a disc into the unit when the unit power is off.



Inserting Discs

Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc. "Disc error" will be displayed on your player if you insert a disc incorrectly. If "Disc error" continues to be displayed even though the disc has been inserted correctly, push the RESET switch with a pointed object such as a ballpoint pen.

Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

Irregular Shaped Discs


Be sure to use round shaped discs only for this unit and never use any special shaped discs.

Use of special shaped discs may cause damage to the mechanism.



New Discs

To prevent the disc from jamming, "Disc error" is displayed if discs with irregular surfaces are inserted or if discs are inserted incorrectly. When a new disc is ejected immediately after initial loading, use your finger to feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ballpoint pen or other such instrument, then insert the disc again.

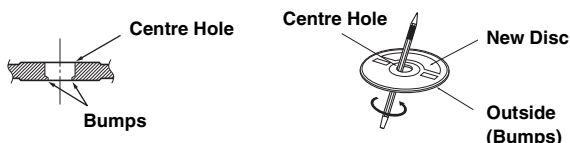


Installation Location

Make sure the INE-W920R/INE-W928R will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

Correct Handling

Do not drop the disc while handling. Hold the disc so you will not leave fingerprints on the surface. Do not affix tape, paper, or gummed labels to the disc. Do not write on the disc.

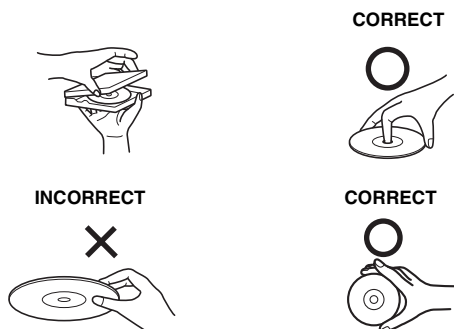


Disc Cleaning

Fingerprints, dust, or soil on the surface of the disc could cause the DVD player to skip. For routine cleaning, wipe the playing surface with a clean, soft cloth from the centre of the disc to the outer edge. If the surface is heavily soiled, dampen a clean, soft cloth in a solution of mild neutral detergent before cleaning the disc.




Disc Accessories

 There are various accessories available on the market for protecting the disc surface and improving sound quality. However, most of them will influence the thickness and/or diameter of the disc. Using such accessories can cause operational problems. We recommend not using these accessories on discs played in Alpine DVD players.



Transparent Sheet

 

Disc Stabilizer

Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the INE-W920R/INE-W928R. This has been done for the safety of the driver and passengers.

Setup operations cannot be made if the car is moving. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "Unable to operate while driving." will be displayed if any attempts are made to perform these operations while driving.

- The INE-W920R/INE-W928R draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the INE-W920R/INE-W928R is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the INE-W920R/INE-W928R. For connecting the SPST switch, refer to the "Connection Diagram of SPST Switch (sold separately)" (page 97). If the power (ignition) lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time.*

Discs Playable on This Unit

Playable Discs

The discs listed below can be played on this unit.

	Mark (logo)	Recorded Content	Disc size
DVD Video		Audio + Video	12 cm*
Music CD		Audio	12 cm
DivX®		Audio + Video	12 cm

* Two-layer DVD disc compatible

The formatted discs listed below can be played on this unit.

	CD-R/ CD-RW	DVD-R/ DVD-RW	DVD+R/ DVD+RW
CD Format	○		
MP3 Format ("mp3")	○	○	○
WMA Format ("wma")	○	○	○
AAC Format ("aac," "m4a")	○	○	○
DVD Video Format		○	○
DivX Format ("avi," "divx")	○	○	○

- Discs that are not finalised cannot be played back.

Discs that cannot be played

DVD-ROMs, DVD-RAMs, CD-ROMs (excluding MP3/WMA/AAC files), photo CDs, etc.

DualDisc

This unit is not compatible with DualDisc.

Using a DualDisc may cause unit malfunction, and may cause disc damage when the disc is inserted/ejected.

DVD region number (playable region number)

This DVD player will play back any disc whose region number is 2 (or All). DVDs with a region number other than those listed below, cannot be played on this DVD player.



Using compact discs (CD/CD-R/CD-RW)

If you use unspecified compact discs, correct performance cannot be guaranteed.

You can play CD-Rs (CD-Recordables)/CD-RWs (CD-ReWritables) which have been recorded only on audio devices. You can also play CD-Rs/CD-RWs containing MP3/WMA/AAC formatted audio files.

- Some of the following discs may not play on this unit:
Flawed discs, discs with fingerprints, discs exposed to extreme temperatures or sunlight (e.g., left in the car or this unit), discs recorded under unstable conditions, discs on which a recording failed or a re-recording was attempted, copy-protected CDs which do not conform to the audio CD industry standard.
- Use discs with MP3/WMA/AAC files written in a format compliant with this unit. For details, see pages 34 and 35.

To customers using CD-R/CD-RW

- If a CD-R/CD-RW cannot be played back, make sure the last recording session was closed (finalised).
- Finalise the CD-R/CD-RW if necessary, and attempt playback again.

Tips for making your own discs

The INE-W920R/INE-W928R plays DVD Video, DivX[®], Audio CD and has a built in MP3/WMA/AAC decoder.

The following information is designed to help you create your own music CDs (either Audio CD or MP3/WMA/AAC encoded CD-R/RW files).

What is the difference between an Audio and MP3/WMA/AAC CD?

An Audio CD is the same format as the commercial CDs you buy in the store (also known as CD-DA). MP3 (MPEG Audio Layer 3)/WMA (Windows Media Audio)/AAC (Advanced Audio Coding) is a data file that uses a compression scheme to reduce the size of the music file*.

Multisession CD-R/RW:

Once a recording has been stopped, this is considered one session. If the disc is not closed (finalised), additional data may be added. Once this additional data has been recorded, this becomes a "multisession" CD.

- * If the first session on a disc containing both CD-DA data and MP3/WMA/AAC data is a CD-DA file, only CD-DA files will be played.

Properly formatted MP3/WMA/AAC Discs:

Use ISO9660 formatting to insure proper playback. You may use standard ISO naming Level 1 (8.3 DOS standard), Level 2 (32 characters) or Joliet (Windows or Macintosh long filenames) file naming conventions*.

- * Please consult the Owner's manual for additional information.

On handling compact discs (CD/CD-R/CD-RW)

- Do not touch the surface.
- Do not expose the disc to direct sunlight.
- Do not affix stickers or labels.
- Clean the disc when it is dusty.
- Make sure that the disc is smooth and flat.
- Do not use commercially available disc accessories.

**Do not leave the disc in the car or the unit for a long time.
Never expose the disc to direct sunlight.**

Heat and humidity may damage the disc and you may not be able to play it again.

Using DVD-Rs/DVD-RWs/DVD+Rs/DVD+RWs

- This unit is compatible with discs recorded in the standard DVD-Video format.
- Note that discs not finalised (processed to enable to play on playback-only DVD players) cannot be played on this DVD player.
- Some discs may not play back, depending on the recording device and disc format.
- Discs or files utilising copy protection, may not be playable. Some recording systems may not properly format copied files to enable proper playback.
- In the following cases, the disc may not play on this unit: discs recorded by certain DVD recorders, certain irregular discs, flawed discs, dirty discs, when the pickup lens of this DVD player is dirty, or when moisture condensation has occurred inside the unit.
- Be sure to follow all cautions included with your DVD-Rs/DVD-RWs/DVD+Rs/DVD+RWs discs.
- Do not put stickers, seals, or tape on the label side of DVD-Rs/DVD-RWs/DVD+Rs/DVD+RWs.
- Compared to the regular discs, DVD-Rs/DVD-RWs/DVD+Rs/DVD+RWs are more affected by heat, moisture, and direct sunlight. If left in a car, etc., damage may occur and it might not play on this unit.
- The operable temperature range for disc playback is as follows:
DVD-R/DVD-RW: -25 ~ +70°C
DVD+R/DVD+RW: +5 ~ +55°C

Disc terminology

Title

If titles are programmed for the DVD, these are the largest units of division of the information recorded on the disc.

Chapter

Each Title may also be divided into smaller divisions, called chapters. These can be specific scenes or musical selections.

Protecting the USB connector

- Only an iPod/iPhone, USB memory or Nokia Phone can be connected to the USB connector on this unit. Correct performance using other USB products cannot be guaranteed.
- If the USB connector is used, be sure to use only the supplied connector cable with the unit. A USB hub is not supported.
- Depending on the connected USB memory device, the unit may not function or some functions may not be performed.
- The audio file format that can be played back on the unit is MP3/WMA/AAC.
- The video file format that can be played back on the unit is DivX®.
- Artist/song name, etc., can be displayed. Certain, special characters may not be correctly displayed.



CAUTION

Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product.

On Handling USB Memory

- This unit can control a memory storage device that supports the USB Mass Storage Class (MSC) protocol. Playable audio file formats are MP3, WMA and AAC.
- USB memory function is not guaranteed. Use USB memory according to the terms of agreement. Read the USB memory Owner's Manual thoroughly.
- Avoid usage or storage in the following locations:
 - Anywhere in the car exposed to direct sunlight or high temperatures.
 - Anywhere the possibility of high humidity or corrosive substances are present.
- Fix the USB memory in a location where driver operation will not be hindered.
- USB memory may not function correctly at high or low temperature.
- Use only certified USB memory. Note that even certified USB memory, may not function correctly depending on its type or state.
- Depending on the settings of the USB memory type, memory state or encoding software, the unit may not play back or display properly.
- Files protected by DRM (Digital Rights Management), cannot be played back on this unit. These include AAC formatted files purchased from the iTunes Store and WMA or other files with some form of copyright protection.
- USB memory may take time to start playback. If there is a particular file other than audio in the USB memory, it may take considerable time before the file is played back or searched.
- The unit can play back "mp3," "wma" or "m4a" file extensions.
- Do not add the above extensions to a file other than audio data. This non-audio data will not be recognised. The resulting playback may contain noise that can damage speakers and/or amplifiers.
- It is recommended to back up important data on a personal computer.
- Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, then remove the USB device to prevent possible damage to its memory.

-
- *This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.*
 - *Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.*
 - *Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.*
 - *iPhone, iPod, iPod classic, iPod nano, iPod touch, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.*
 - *“Made for iPod,” and “Made for iPhone,” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.*
 - *© 2010 Nokia. All rights reserved. Nokia and Works with Nokia are trademarks or registered trademarks of Nokia Corporation.*
 - *DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.*
 - *The BLUETOOTH[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under licence.*
 - *“MPEG Layer-3 audio coding technology licenced from Fraunhofer IIS and Thomson.”*
 - *“Supply of this product only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>”*

©1993-2011 NAVTEQ. All rights reserved.

Portions ©2011, Microsoft Corporation. All Rights Reserved.

Features


Auto user setting change

With the INE-W920R/INE-W928R, you can register up to two users.


Each user can configure their own preferred settings.

By registering their respective BLUETOOTH devices to the unit, each user can be identified automatically.

USER1

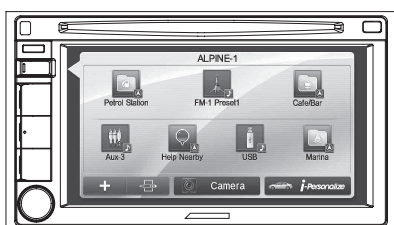

USER2

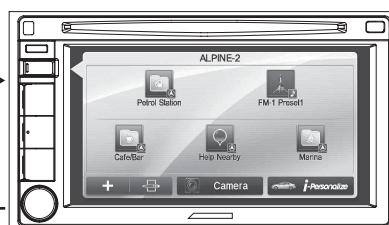

- For details of how to register a BLUETOOTH device, refer to “User Registration” (page 23).
- If USER2 is recognised while USER1 is using the system, a confirmation message is displayed.
- If no BLUETOOTH device has been registered or if you want to switch users manually, users can be switched by pressing and holding the ★ (My Favorites) button.
- For details of which settings are affected by switching users, refer to “Settings When Switching Users” (page 27).

My Favorites

Up to eight My Favorites can be registered as shortcut keys for each registered user.

Frequently used functions and handy functions can be customised for your convenience.

USER1



USER2



For details of how to register or add My Favorites, how to change the name, etc., refer to “Using My Favorites” (page 23).

Easy sound setting by car type (i-Personalize)

This function lets you set and reproduce the best audio environment for the environment in your car. On the unit, select and set the car category/steering wheel position/speaker type and size/seat material. For details of how to configure the settings, refer to “Car Specific Sound Setup” (page 26).

Display example when setting is completed



About Dual Screen

If you want to display the music playback screen while route guidance is displayed, etc., you can display the Navigation and Audio/Visual screens simultaneously.

Navigation Full screen



Audio/Visual Full screen



Touch the Navigation screen portion.

or

Press the (MAP) button.

Dual Screen



Touch

Touch *1

or


Press the (AUDIO) button.

*1 During video playback, [Dual Wide], [Dual Full] and [Full Screen] appear on the screen for selecting the screen size. For details, refer to “Switching the Dual Screen Display” (page 28).

Dual Screen Display Position

You can switch the right and left screens using drag & drop.

To switch the screens, touch the middle of the screen you want to move and drag it to the desired display position. The screens will switch positions when you remove your finger.

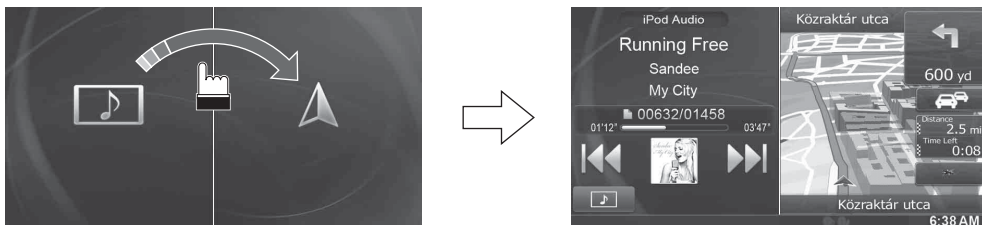

Getting Started

Accessory List


• INE-W920R/INE-W928R.....	1
• Power cable.....	1
• Flush head screw (M5×8) (INE-W920R Only).....	6
• Screw (M5×8).....	8
• GPS Antenna.....	1
• Antenna mounting plate.....	1
• Cable clamp.....	3
• AUX/PRE OUT cable.....	1
• Camera cable.....	1
• USB extension cable.....	1
• Microphone.....	1
• Mounting sleeve (INE-W920R Only).....	1
• Face plate (INE-W920R Only).....	1
• Bracket key (INE-W920R Only).....	2
• Rubber cap (INE-W920R Only).....	1
• Hex bolt (INE-W920R Only).....	1
• Carrying bag (INE-W920R Only).....	1
• Cushion (INE-W928R Only).....	1
• Owner's Manual.....	1 set

INE-W928R users

To install the INE-W928R, refer to the manual in the separately purchased installation kit for each car type.

For INE-W920R

Location of Controls

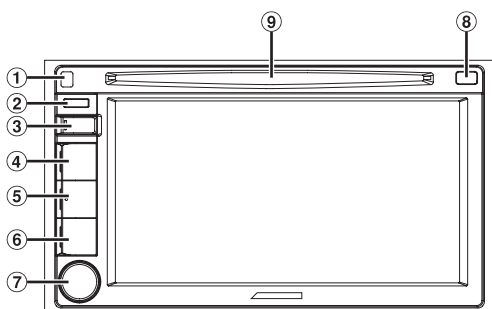

- 1 (Release) button**
Use this button to remove the front panel.
- 2 Remote Sensor**
Point the remote control transmitter towards the remote sensor within a range of 2 metres.
- 3 ★ (My Favorites) button**
The My Favorites screen for registered User 1 is displayed. Press and hold this button at least 3 seconds to switch to User 2.
- 4 (MAP) button**
Recalls the navigation map screen.
For details of navigation operations, refer to "Navigation System OM" in the CD-ROM.

- 5 (PHONE) button**
Recalls the Telephone Menu screen.
When a hands-free phone is connected, press and hold for at least 3 seconds to switch to the call history screen.
- 6 (AUDIO) button**
Displays the Audio/Visual screen. If the Audio/Visual screen is already displayed, changes the source. Press and hold AUDIO for at least 3 seconds to activate the "Setting the Balance/Fader/Subwoofer" mode.
- 7 Rotary encoder/MUTE button**
Adjust the volume by turning to the left or right.
Press to activate /deactivate the mute mode.
Press and hold for at least 3 seconds to turn the power off.
- 8 (Eject) button**
Ejects a disc.
- 9 DISC Slot**
 - For details of the RESET switch, refer to "Initial System Start-Up" (page 20).

Optional Remote Control Interface Box

This unit is operable using the vehicle's secondary radio controls. An Alpine Remote Control Interface Box (optional) is required. For details, contact your Alpine dealer.

Controllable with Remote Control

This unit can be controlled with an optional Alpine remote control. For details, consult your Alpine dealer. Point the optional remote control transmitter at the remote control sensor.

About the button descriptions used in this Owner's Manual

The buttons found on the face of the unit are expressed in bold (e.g. ★ **(My Favorites)**). The buttons found on the touch-screen display are shown in bold within brackets, [] (e.g. [X]).

Turning Power On or Off

Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

- 1 Turn the ignition key to the ACC or ON position.**
The system turns on.
 - When turned on, the system displays the last mode screen that was displayed before the ignition key was turned off. For example, if the unit is in radio mode when ignition is turned off, it will remain in radio mode when ignition is turned back on.
- 2 Press and hold the Rotary encoder for at least 3 seconds to turn the power off.**
 - The unit can be turned on by pressing any button on the unit, except (Release).
 - The INE-W920R is a precision device. Careful handling of the unit should provide you with years of trouble-free operation.

Turning the System On

With the Alpine system, when the ignition key is turned to ACC or ON, the opening screen will be automatically displayed.

- 1 When the system is used for the first time, the language selection menu is displayed. There are 21 languages to choose from. Touch [▲] or [▼] to scroll the list, and then touch the desired language.



- You can also scroll through lists by touching the screen and sliding your finger up and down.

- 2 Touch [OK].


The radio screen is displayed.

- Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake before attempting these operations.

Detaching and Attaching the Front Panel

Detaching


- 1 Turn off the unit power.
- 2 Press ▲ (Release) at the upper left side until the front panel pops out.
- 3 Grasp the up side of the front panel and pull it out.

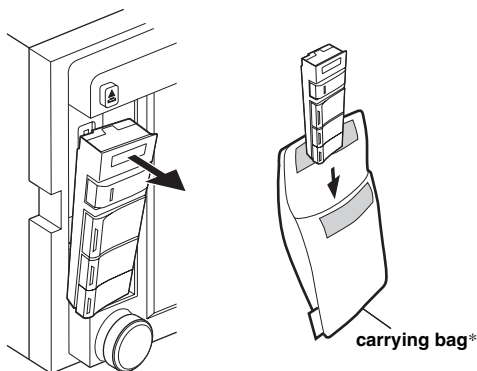

- * To protect the front panel, place it in the supplied carrying bag.
- The front panel may become hot in normal usage (especially the connector terminals on the back of the front panel.) This is not a malfunction.

Attaching

- 1 Insert the under side of the front panel into the main unit.
- 2 Push the up side of the front panel until it locks firmly into the main unit.

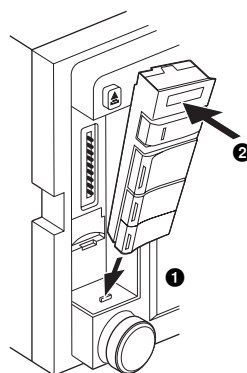


- Before attaching the front panel, make sure that there is no dirt or dust on the connector terminals and no foreign object between the front panel and the main unit.
- Attach the front panel carefully. Hold the panel by its sides to avoid pushing any buttons by mistake.


⚠ Caution

- Take care not to be injured with the edge of the Front Panel in case of detaching and attaching one.
- Do not expose the Front Panel to excessive force or grip one strongly in case of detaching, attaching and bringing one.
- Take care not to tread on the Front Panel over carrying one.
- Do not inflict on the Front Panel so it is not broken and damaged after removing from it.
- Take care not to be injured with a fragment of broken the Front Panel.
- Keep the Front Panel out of reach of children after removing from one to prevent them from putting one in their mouth.
- In case of attaching the Front Panel, turn off the unit power and take care not to be injured with the edge of one.

Initial System Start-Up

Be sure to press the RESET switch when using the unit for the first time, after changing the car battery, etc.

- 1 Turn off the unit power.
- 2 Press  (Release) to remove the front panel.
- 3 Press **RESET** with a ballpoint pen or similar pointed object.

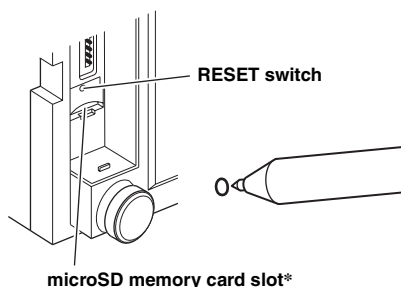


* The microSD memory card does not support Music/Video playback. For details on how to use microSD memory cards, refer to "Navigation system OM" on the supplied CD-ROM.

Inserting/Ejecting a Disc

Inserting the Disc

- 1 Insert the disc with the label side facing up.

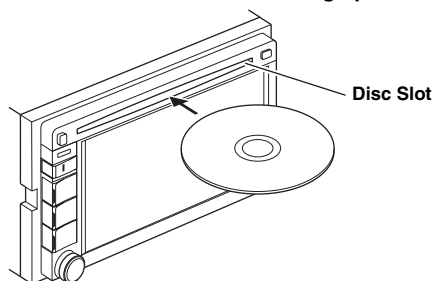



When you insert the disc up to certain point, it is automatically pulled into the unit. The unit starts to play the disc.

- Do not touch the surface of the disc directly with your fingers.
- Before inserting or removing the disc, always turn the ignition key to ACC or ON. You cannot remove or insert the disc with the ignition key turned to OFF.

Removing the Disc

- 1 Press  (Eject).

When the disc has been ejected part way, take it out.

- If the disc cannot be ejected by pressing , press and hold  again for at least 5 seconds.

Adjusting the Volume

Rotate the **Rotary encoder** until the desired sound is obtained.

Volume: 0 - 35


Lowering Volume Quickly

Activating the Audio Mute function will instantly lower the volume level by 20 dB.

- 1 Press **Rotary encoder** to activate the **MUTE mode**. The audio level will decrease by about 20 dB.
- 2 Pressing **Rotary encoder** again will bring the audio back to its previous level.

For INE-W928R

Location of Controls

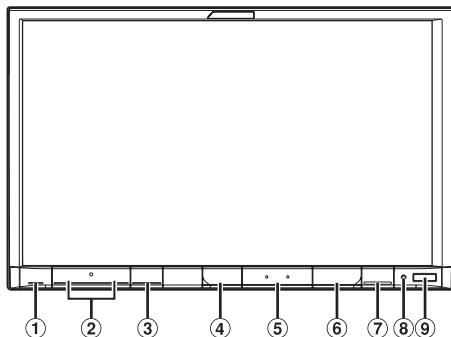

- ① **▲ (Eject) button**
- ② **∨/∧ (UP/DOWN) button**
Press to adjust the volume.
- ③ **MUTE button**
Press to activate /deactivate the mute mode.
Press and hold MUTE for at least 3 seconds to activate the "Setting the Balance/Fader/Subwoofer" mode.
- ④ **🎵 (AUDIO) button**
Displays the Audio/Visual screen. If the Audio/Visual screen is already displayed, changes the source.
Press and hold for at least 3 seconds to turn the power off.
- ⑤ **🗺️ (MAP) button**
Recalls the navigation map screen.
For details of navigation operations, refer to "Navigation System OM" in the CD-ROM.
- ⑥ **📞 (PHONE) button**
Recalls the Telephone Menu screen.
When a hands-free phone is connected, press and hold for at least 3 seconds to switch to the call history screen.
- ⑦ **★ (My Favorites) button**
The My Favorites screen for registered User 1 is displayed.
Press and hold this button at least 3 seconds to switch to User 2.
- ⑧ **RESET switch**
The system of this unit is reset.
- ⑨ **Remote Sensor**
Point the remote control transmitter towards the remote sensor within a range of 2 metres.

Optional Remote Control Interface Box

This unit is operable using the vehicle's secondary radio controls. An Alpine Remote Control Interface Box (optional) is required. For details, contact your Alpine dealer.

Controllable with Remote Control

This unit can be controlled with an optional Alpine remote control. For details, consult your Alpine dealer. Point the optional remote control transmitter at the remote control sensor.

About the button descriptions used in this Owner's Manual

The buttons found on the face of the unit are expressed in bold (e.g. ★ **(My Favorites)**). The buttons found on the touch-screen display are shown in bold within brackets, [] (e.g. [X]).

Turning Power On or Off

Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

- 1 **Turn the ignition key to the ACC or ON position.**
The system turns on.
 - When turned on, the system displays the last mode screen that was displayed before the ignition key was turned off. For example, if the unit is in radio mode when ignition is turned off, it will remain in radio mode when ignition is turned back on.
- 2 **Press and hold the 🎵 (AUDIO) button for at least 3 seconds to turn the power off.**
 - The unit can be turned on by pressing any button.
 - The INE-W928R is a precision device. Careful handling of the unit should provide you with years of trouble-free operation.

Turning the System On

With the Alpine system, when the ignition key is turned to ACC or ON, the opening screen will be automatically displayed.

- 1 **When the system is used for the first time, the language selection menu is displayed. There are 21 languages to choose from. Touch [▲] or [▼] to scroll the list, and then touch the desired language.**




- You can also scroll through lists by touching the screen and sliding your finger up and down.
- 2 **Touch [OK].**
The radio screen is displayed.
 - Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake before attempting these operations.

Initial System Start-Up

Be sure to press the RESET switch when using the unit for the first time, after changing the car battery, etc.


- 1 Turn off the unit power.
- 2 Press RESET switch with a ballpoint pen or similar pointed object.

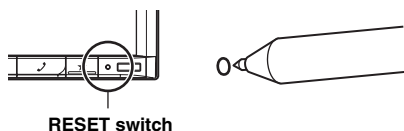

Inserting/Ejecting a Disc

Inserting the Disc

- 1 Press **▲ (Eject)**.
The Open/Tilt screen is displayed.
- 2 Touch **[Open]**.
- 3 Insert the disc with the label side facing up.

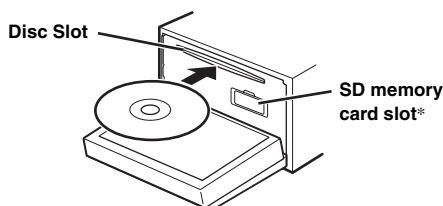

Insert the disc until it is automatically pulled into the unit.
The unit starts to play the disc.

* The SD memory card does not support Music/Video playback.
For details on how to use SD memory cards, refer to "Navigation system OM" on the supplied CD-ROM.

Removing the Disc

- 1 Press **▲ (Eject)**.
The Open/Tilt screen is displayed.
- 2 Touch **[▲ Disc]**.
The monitor will open. Then the disc is ejected.
When the disc has been ejected part way, take it out.
- 3 Touch **[Close]**, or press **▲ (Eject)**.
 - If the disc does not eject after touching **[▲ Disc]**, press and hold **▲ (Eject)** for at least 5 seconds.
 - Do not apply shock to the monitor when it is open as it may result in malfunction of the unit.
 - The monitor will stop at the set tilt angle when closing.

CAUTION

Keep hands (or any other object) away from the monitor while it is opening or closing to avoid damage or injury. The back of the monitor tends to become very warm under normal operating conditions. This is not a malfunction, but care should be taken to avoid prolonged contact with it.

USER1/USER2

Adjusting the Monitor Viewing Angle

Adjust the monitor's angle for better visibility.

- 1 Press **▲ (Eject)**.
The Open/Tilt screen is displayed.
- 2 Touch **[▲ Up]** or **[▼ Down]** of "Tilt" to adjust the desired monitor angle.
The monitor angle can be adjusted in 5 stages.
- 3 Touch **[X]** to return to the normal mode.
 - The screen colour will vary when viewed at certain angles. Adjust the screen angle for the best viewing position.
 - If the voltage of the vehicle's battery power is low, the screen may blink when the screen angle is changed. This is normal and not a malfunction.

Adjusting the Volume

Adjust the volume by pressing **▼** or **▲**.

Volume decreases/increases continuously by pressing and holding **▼** or **▲**.

Volume: 0 - 35

Lowering Volume Quickly


Activating the Audio Mute function will instantly lower the volume level by 20 dB.

- 1 Press **MUTE** to activate the MUTE mode.
The audio level will decrease by about 20 dB.
- 2 Pressing **MUTE** again will bring the audio back to its previous level.

Common Operations

Using My Favorites

Display example of My Favorites screen

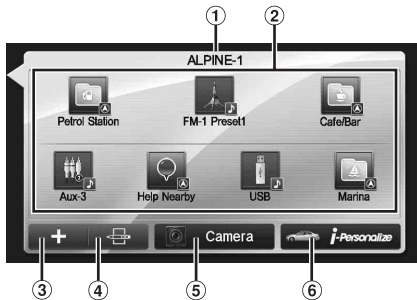

- ① User name: Displays the name of the user
- ② My Favorites icon: Touching an icon on My Favorites screen will switch to the screen for the selected application.
- ③ Add button: Use to add (register) My Favorites icons (page 24)
- ④ Edit button: Use to edit My Favorites (page 25)
- ⑤ Camera button: Use to display the camera image (page 25)
- ⑥ i-Personalize button: Use to configure the i-Personalize Setup (page 26)


USER1/USER2

User Registration

You can register up to two users. Configure the User 1 and User 2 settings for each user.

- 1 Press the ★ (My Favorites) button.
The My Favorites screen is displayed.

- 2 Touch [Start].

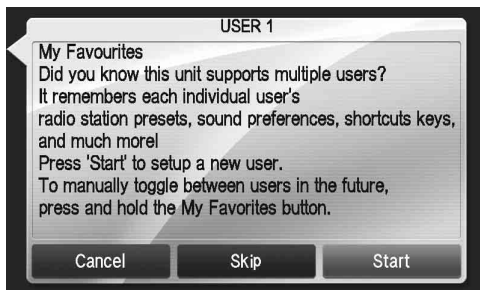

The user name input screen for the first user is displayed.

- Touching [Skip] registers the user name as "USER 1" or "USER 2" and no BLUETOOTH device is registered. In this case, the users will not be switched automatically.
- Touching [Cancel] or pressing the ★ (My Favorites) button returns to the original screen without registering a user.

- 3 Input the user name from the keypad and touch [OK].



The BLUETOOTH Device Setup screen is displayed.

- Touch [←] to edit the name.
For details of how to input characters from the keypad, refer to "How to Input Characters and Numbers (Keypad)" (page 27).

- 4 Touch [Link], then touch [OK].

The BLUETOOTH Device List is displayed.

- The BLUETOOTH devices registered here are used to automatically identify the user.
Also, a cellular phone can be used as a hands-free phone.
For details, see "BLUETOOTH Setting" (page 56).
- Touching [Do not Link] exits user registration without registering a BLUETOOTH device.

- 5 Touch [Search].




The system starts searching for BLUETOOTH devices. When the search is completed, the BLUETOOTH Device List is displayed.

- Set the BLUETOOTH setting on the preregistered BLUETOOTH device side to [ON].

- 6 Touch a registered BLUETOOTH device and touch [OK].

My Favorites screen for USER1 is displayed.

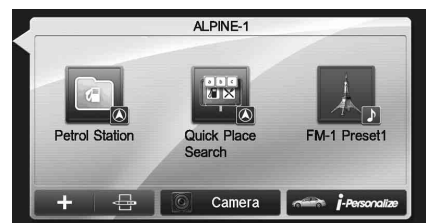

- You can edit My Favorites icons.
For details of how to add, edit, delete or set My Favorites icons, refer to "Adding My Favorites" (page 24).

Register User 2

- 7 Press the ★ (My Favorites) button.**
The My Favorites screen is exited and the display returns to the original screen.
- 8 Press and hold the ★ (My Favorites) button for at least 3 seconds.**
The My Favorites user guide is displayed. Repeat steps 2 through 6 to register USER2.

USER1/USER2

Setting My Favorites


Configure the My Favorites settings.

- 1 Press the ★ (My Favorites) button.**
My Favorites screen for USER1 is displayed.
- To configure My Favorites settings for USER2, press and hold the ★ (My Favorites) button for at least 3 seconds. The My Favorites screen is displayed.

Adding My Favorites

You can register up to eight My Favorites for each user. You cannot, however, register the same items (categories).

- 1 Touch [+].**
The addition items (categories) are displayed.
- 2 Touch the desired addition item (category).**

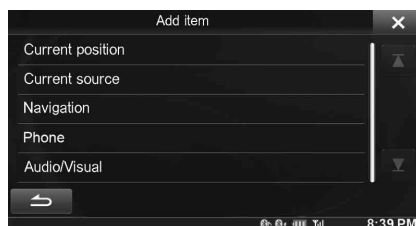

Current position : Registers your current position in My Favorites

Current source : Registers the audio source currently playing in My Favorites

Navigation : Registers the destination search category or nearby place search category in My Favorites

[Specific Place] : You can display the places registered in My Favorites and set your destination.

Search for a place registered in My Favorites by Address/Find Place/Address Book/History, then touch Add.

[Quick Place search] : Displays the address search keypad

[Help Nearby] : Displays the nearby search screen

[POI category] : Displays the selected POI category list

- For details of navigation operations, refer to “Navigation System OM” in the CD-ROM.

Phone : Lets you register phone numbers registered in the phonebook in My Favorites for shortcut dialling.

Select a name or phone number from the Phonebook list and touch [Add].

- Touch ◀ or ▶ to switch phone numbers.
- You can only select PHONE when a mobile phone is connected.

Audio/Visual : Lets you switch directly to an audio source

[Radio] : You can register presets No. 1-6 in FM1/ FM2/FM3/ MW/LW.

Select presets No. 1-6 from FM1 presets/FM2 presets/FM3 presets/MW presets/LW presets.


[Disc]/[USB/iPod]/[Aux-1]/[Aux-2]/[Aux-3]/[BT audio] : You can switch directly to any of these audio sources.

Editing My Favorites

You can delete names in My Favorites or change the layout.

Touch **[✕]**.

“✕” appears and the mode switches to the Edit mode.

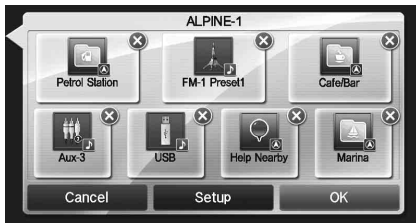

- Touching [Cancel] returns to the previous screen without executing any changes.

Changing the name

- 1 Touch the icon you want to change
The Edit Text screen (Keypad) is displayed.
- 2 Enter the name and touch **[OK]**
The mode returns to the Edit mode.
- 3 Touch **[OK]**.
The name is changed.

Deleting Icons

- 1 Touch “✕” by the icon you want to delete
The confirmation message is displayed.
- 2 Touch **[OK]**.
The mode returns to the Edit mode.
- 3 Touch **[OK]**.

My Favorites setup

You can change or delete the registered user name or change the registered phone number.

Touch **[Setup]**.

The My Favorites Setup screen is displayed.



Changing the User Name

- 1 Touch the **[Name]** of the user you want to change.
The Input User Name screen (Keypad) is displayed.
 - 2 Input the name and touch **[OK]**.
The user name is changed.
- For details of how to input characters using the keypad, refer to “How to Input Characters and Numbers (Keypad)” (page 27).

Changing a BLUETOOTH device

You can change the BLUETOOTH devices associated with a user.

- 1 Touch the user **[Phone]** you want to change.
The BLUETOOTH Device Setup screen is displayed.
- 2 Touch **[Link]**, then touch **[OK]**.
The BLUETOOTH Device list is displayed.
 - The BLUETOOTH devices set by User Registration are highlighted.
For detailed settings, touch [Search].
- 3 Select the device you want to change and touch **[OK]**.
The device is changed.


Deleting Registered Users

- 1 Touch **[Delete]** for the user name you want to delete.
The confirmation message is displayed.
- 2 Touch **[OK]**.
 - When a registered user is deleted, all the items affected by switching users are returned to the default settings.

Changing the Layout

You can change the layout of the shortcut keys.

- 1 Drag and drop the icon to the desired location.

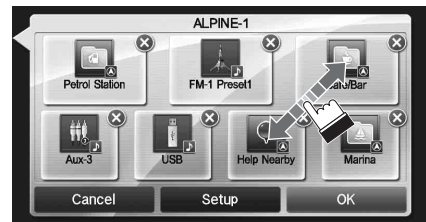

- 2 Touch **[OK]**.

USER1/USER2

Displaying the Camera Image

When a separately purchased camera is connected to the system, you can display the camera image.

Touch **[Camera]**.

The camera image is displayed.


- For details of camera operations, refer to “Camera Operation (Optional)” (page 72).
- When the front camera (direct camera) and rear camera or side camera (AUX camera) are connected simultaneously, the screen for selecting which camera image to display appears.

i-Personalize Setup

You can configure the audio settings by car type.

Touch [i-Personalize].

The i-Personalize Setup screen is displayed.

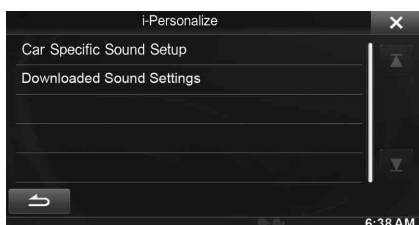


Car Specific Sound Setup

You can set and reproduce the best audio environment for the environment in your car.

1 Touch [Car Specific Sound Setup].

The vehicle type selection screen is displayed.

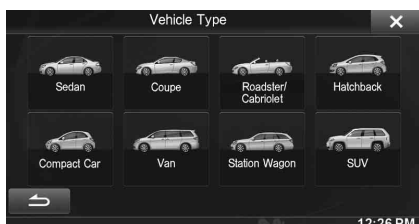

2 Touch the relevant Vehicle type.

- The selected Vehicle type is reflected in the “i-Personalize” symbol on My Favorites screen.

3 Touch the position of the driver's seat.

4 Touch the size of the front speaker.

5 Select whether or not there is a tweeter.

6 Select the installation position of the rear speaker.

If you select “No rear speaker,” you cannot adjust the rear speaker in Fader/Time Correction/X-OVER in sound setup.

7 Select whether or not there is a subwoofer.

If you select “No,” you cannot adjust the subwoofer level/subwoofer phase in sound setup.

8 Select the material of the car seats.

The settings confirmation screen is displayed.

- If the car seats are made of both leather and fabric, select [Half leather].

9 Check the settings and touch [OK].



- If Preset3 was already saved for Time Correction/X-OVER/Parametric EQ, the data will be overwritten.
- The Easy sound settings are reflected in the following Audio Setup items.

Setting the MX (Media Xpander)

- Adjusting the Parametric Equalizer Curve (Parametric EQ)
- Adjusting the Time Correction (Time Correction)
- Adjusting the Crossover Settings (X-OVER) (only when Subwoofer is set to [On])

The Equalizer Presets (Bass Max EQ) settings are disabled.


Downloaded Sound Settings

Using a USB memory device, the sound settings downloaded from the ALPINE website can be used to configure Time Correction, X-OVER and Parametric EQ settings.

Setting item: Downloaded Sound Settings

The file name of download data shall be “A_U****.MP3.”

A_U****.MP3

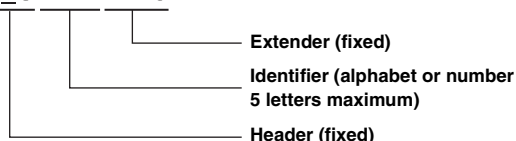

- Save the setting data in the root folder.
- For details about procedures of download, see ALPINE's web site.

1 Touch [Downloaded Sound Settings].

Setting data files are displayed in a list with a maximum of 5 items.

2 Touch the desired file.

3 Touch [OK].

The downloaded setting values are set as the Time Correction/X-OVER/Parametric EQ settings, and at the same time saved as Preset3, respectively.

- When no USB memory is connected, the “i-Personalize Setting” function is not available.
- If Preset3 was already saved for Time Correction/X-OVER/Parametric EQ, the data will be overwritten.

Settings When Switching Users

The functions/settings that are affected when switching users are as shown below.

	Item	Ref. page
My Favorites	User Registration	23
	Setting My Favorites* ¹	24
	Displaying the Camera Image* ²	25
RDS	Displaying Radio Text	32
General Setup	Setting Top banner and Bottom banner Display	42
	Switching the Display Colour	43
Sound Setup	Turning Subwoofer ON/OFF	46
	Adjusting the Subwoofer Level	46
Source setup	Source Layout Setting	52
Hands-Free Phone Control	Assigning as a Short Cut Dialling Number	65
	Redial Function	64
	Phone Book Function	65
Camera Operation	Switching the Image Pattern for the Rear Camera* ²	72
	Switching the Image Pattern for the Front Camera* ²	75
	Guide Display ON/OFF Setting	72, 75
	Adjusting the Caution Display Location	72, 75
Other	Adjusting the Monitor Viewing Angle (INE-W928R Only)	22

^{*1} Except i-Personalize Setup
^{*2} The display pattern can be set when a camera equipped with a switch function on the Camera screen is connected.

■ Items whose settings are affected when switching registered users, are indicated by “**USER1/USER2**” in this manual.
Example:


USER1/USER2

Source Layout Setting

[Source Layout] is selected on the Audio setup menu in step 3.
Refer to “Audio Setup Operation” (page 48).

How to Input Characters and Numbers (Keypad)

Character input is required for user registration, place searches, etc. The displayed screens and procedures may vary slightly depending on the function used, but the basic input method is the same.

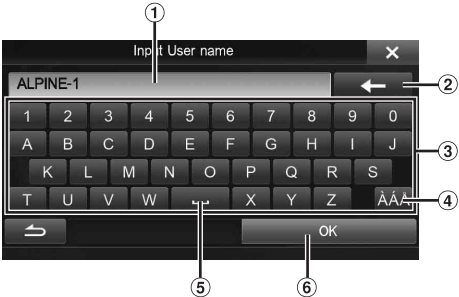

- ① Input screen area.
- ② ← (Delete)
Returns to the previous character and erases it. Touching here for more than 2 seconds will erase all input characters.
- ③ Character keypad
- ④ Special character selector switch
Character keypad → Special character keypad → Symbol keypad → Character keypad
- ⑤ → (Space)
- ⑥ Input number is confirmed.

Top banner and Bottom banner Fade Out Setting

When “Top/Bottom Banner Fade Out” is set to [ON], the Top banner and Bottom banner on the Audio/Visual Playback screen fade out after 5 seconds if no operation is performed. To display the keys again, touch the middle of the screen.



- For details of how to set Top/Bottom Banner Fade Out, refer to “Setting Top banner and Bottom banner Display” (page 42).

Switching Sources

During audio/visual playback, press the (AUDIO) button or touch a source button in the top banner to switch to the desired source.

Switching Sources Using the (AUDIO) Button

During audio/visual playback, press the (AUDIO) button repeatedly to switch to the desired source.

Radio → Disc*¹ → USB/iPod*¹ → Aux-1*² → Aux-2*² → Aux-3*³ → Bluetooth Audio → Radio...

*¹ When no disc is inserted or no USB memory/iPod is connected, this option is not available.

*² When AUX In is set to “Off”, this option is not available.

*³ When AUX3 In Sel. is set to “iPod Video,” this option is not available.

Switching Sources Using the Top banner

Touch the source button for the Top banner at the top of the Audio/Visual Playback screen and select the desired source.



If the source button is hidden, touch [<<] [>>].

- When “Source Layout Setting” (page 52) is set to “On”, you can switch sources by tracing the middle of the screen from right to left or from left to right.

Screen Off Function

This mode is useful if you feel the unit’s display is too bright at night. To cancel Screen OFF mode, touch the screen or press any button.

- Screen OFF mode is not cancelled by Volume UP/DOWN, Mute ON/OFF or DISC Eject (INE-W920R only).
- Screen OFF mode is cancelled when the power or ACC is turned off.
- When the gear lever is shifted to the reverse (R) position while the rear camera is connected, the rear camera image is displayed.
- When a call is received while a BLUETOOTH device is connected, the incoming call screen is displayed.

Switching the Dual Screen Display

When you touch on the dual screen during video playback, the screen size selection message is displayed.

Dual Wide (Initial setting)



Dual Full



■ Full Screen




Touch operation

You can operate the system by using the touch panel on the screen.

- Be sure to touch the onscreen button lightly with the pad of your finger to protect the display.
- If you touch a button and there is no reaction, remove your finger from the display once, and try again.
- Onscreen buttons that cannot be operated appear dull in colour.

Common onscreen buttons


- [↶]: Returns to the previous screen. Depending on the function, this button may cancel the operations performed on the screen.
- [X]: Closes the window.

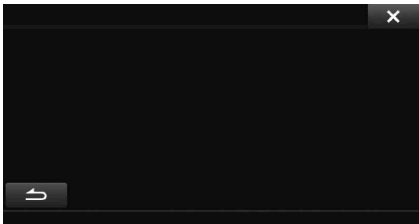

Selecting an Item in a List

To scroll through a list, perform the following operations.


Touch the screen and slide your finger up and down.
The screen will scroll along with your finger movement. Also, you can touch [▲] and [▼].

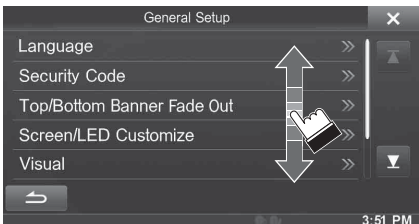

- After touching the screen, move your finger away from the screen before dragging and that item will be selected.

About the Indicator Display

The Indicator Bar at the bottom of the screen displays various types of information, like the current time.

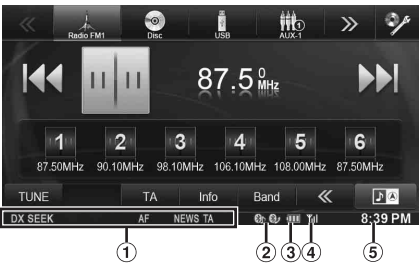

- ① The display will differ depending on the source. For details, refer to the display example of each source.
- ② Lights up when connected to a BLUETOOTH compatible device.
[Bluetooth icon]: BLUETOOTH connection to audio device
[Bluetooth icon]: BLUETOOTH connection to Hands Free Phone
Blinks while reconnecting. Does not display when connection is set to OFF.
- ③ Indicates the battery level of the connected BLUETOOTH device.

Battery Level	No Battery	Level 1	Level 2	Level 3
Icon	[No Battery Icon]	[Level 1 Icon]	[Level 2 Icon]	[Level 3 Icon]

This may not be displayed depending on the connected BLUETOOTH device.
When the battery level reaches level 1, the alarm sounds for 5 seconds.


- ④ Indicates the signal strength level of the connected BLUETOOTH compatible device.
Displayed when BLUETOOTH setting is ON.

0	1	2	3	No Service
[Signal Strength 0 Icon]	[Signal Strength 1 Icon]	[Signal Strength 2 Icon]	[Signal Strength 3 Icon]	No Service

- ⑤ The clock display
You can switch between the 12 hour display and 24 hour display options.
For details of the clock display settings, refer to "Navigation System OM" in the CD-ROM.

Radio

■ Display example for Radio main screen

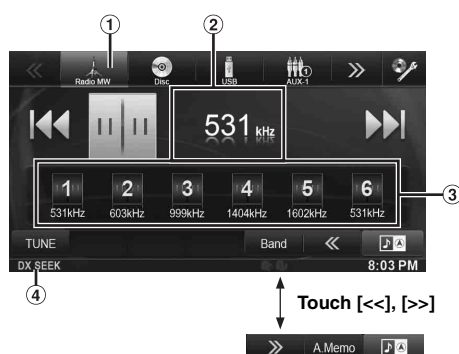

- ① Band display
- ② Frequency display
- ③ Preset button
- ④ SEEK mode

Listening to the Radio

1 Press the **AUDIO** button.

2 Touch **[Radio]** of Top banner.

The radio mode is activated and the display changes to the Radio mode screen.

- The display content varies depending on the last band selected. ([RadioFM1], etc.)

3 Touch **[Band]** of Bottom banner to select the desired radio band.

Each touch changes the bands as follows:

FM-1 → FM-2 → FM-3 → MW → LW → FM-1

4 Touch **[TUNE]** to select the tuning mode.

DX SEEK Local SEEK MANUAL PTY*



* Displays only when the PTY tuning mode is selected. For details, refer "PTY (Programme Type) Tuning" (page 32)

- There are two modes you can select for auto tuning, DX and Local:
 - DX (Distance) mode;
Both strong and weak stations will be tuned in.
 - Local mode;
Only strong stations will be tuned in.
The initial setting is DX.

5 Touch **[<<<], [>>>]** or **[<<], [>>]** to change the radio frequency up or down respectively.

In manual mode, touch and hold to change the frequency continuously.

Presetting Stations Manually

1 Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.

2 Touch and hold any one of the preset buttons for at least 2 seconds.

The selected station is stored.

3 Repeat the procedure to store up to 5 other stations onto the same band.

To use this procedure for other bands, simply select the desired band and repeat the procedure.

A total of 30 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, MW or LW).

- If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorised.

Presetting Stations Automatically

The tuner can automatically seek and store 6 strong stations in the selected band in order of signal strength.

After selecting the desired band, touch **[A.Memo]** of Bottom banner.

The tuner automatically seeks and stores 6 strong stations into the preset buttons in order of signal strength.

When automatic storing has completed, the station stored in the preset 1 is selected.

If [A.Memo] is not displayed, touch [<<] or [>>] in the bottom banner to display [A.Memo].

- If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.
- You can cancel this process by touching [A.Memo] while the tuner is automatically seeking stations. Cancelling will return the tuner preset to the previous setting.

Tuning to Preset Stations

You can tune in the preset stations in memory on either band using its preset number.


1 Touch **[Band]** of Bottom banner repeatedly until the desired band is displayed.

2 Touch any one of the preset buttons that has a station stored to it.

The preset station is received.

RDS

■ Display example for RDS Information

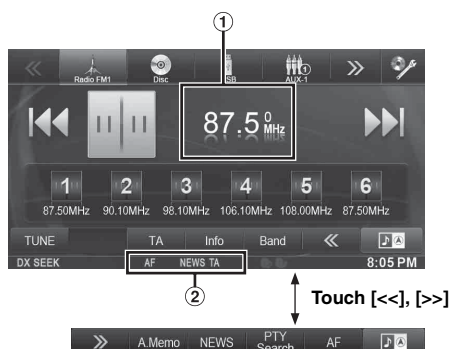

- ① Displays the Radio text (When a Radio station that transmits text messages)
- ② RDS indicator

Turning AF (Alternative Frequencies) On or Off

The RDS (Radio Data System) is a radio information system using the 57 kHz subcarrier of regular FM broadcasts. The RDS allows you to receive a variety of information such as traffic information, station names, and to automatically re-tune to a stronger transmitter that is broadcasting the same programme.

1 Press the (AUDIO) button.

2 Touch [Radio] of Top banner.

The radio mode is activated and the display changes to the Radio mode screen.

- The display content varies depending on the last band selected. (eg. [RadioFM1], etc.)

3 Touch [AF] of Bottom banner to select the AF (Alternative Frequency) ON or OFF mode.

In AF ON mode, the "AF" Indicator lights up.

If [AF] is not displayed, touch [<<] in the bottom banner to display [AF].

- RDS mode is not be displayed for the MW or LW band.
- When the AF ON mode is selected, the unit automatically tunes to a strong signal station in the AF list.
- Use the AF OFF mode when automatic re-tuning is not required.

Tips

- If the unit receives the PTY31 (Emergency Broadcast) signal, the unit will show "Alarm" in the display only when PTY31 is set to on. For operation, refer to "Setting PTY31 (Emergency Broadcast) Reception" (page 54).
- The RDS digital data includes the following:

PI	Programme Identification
PS	Programme Service Name
AF	List of Alternative Frequencies
TP	Traffic Programme
TA	Traffic Announcement
PTY	Programme Type
EON	Enhanced Other Networks
- Refer to page 54 about "PI SEEK Setting," "Receiving RDS Regional (Local) Stations," "Switching the Display Language of PTY (Programme Type)" and "Setting PTY31 (Emergency Broadcast) Reception."

Receiving Traffic Information

Touch [TA] of Bottom banner to turn on the Traffic Information mode.

The TA indicator lights up.

When the traffic information station is tuned in, the TP indicator lights up.

Traffic information is heard only when it is being broadcast. If traffic information is not being broadcast, the unit is set in the standby mode.

When a traffic information broadcast begins, the unit automatically receives it and the display shows "T.Info."

When the traffic information broadcast is over, the unit will automatically be set to the standby mode.

- If the traffic information broadcast signal falls below a certain level, the unit remains in the receiving mode for 1 minute. If the signal remains below a certain level for over 70 seconds, "TA" will blink in the display.
- If you do not want to listen to traffic information being received, touch [TA] to skip that traffic information message. The T. Info mode will remain in the ON position to receive the next traffic information message.
- If the volume level is changed while receiving traffic information, the changed volume level will be memorised. When traffic information is received next time, the volume level will be automatically adjusted to the level memorised.
- If the Traffic Information mode is activated, the unit automatically switches to radio source (even if you select another source) and receives the traffic information broadcast. When the traffic information is finished, the unit returns to the previous source.

Receiving Traffic Information Manually

- 1 **Touch [TA] of Bottom banner to turn on the Traffic Information mode.**
The TA indicator lights up.
 - 2 **Touch [◀◀] or [▶▶].**
Seeks the broadcast station which is broadcasting the traffic information.
- You can seek the traffic information in DX Seek mode or Local Seek mode.

PTY (Programme Type) Tuning

- 1 **Touch [PTY Search] of Bottom banner.**
The Select PTY list screen is displayed.
If [PTY Search] is not displayed, touch [<<] in the bottom banner to display [PTY Search].
- 2 **Touch the selected programme type to start searching for a station in the type.**
If no PTY station is found, "NO PTY." will be displayed.
- 3 **Touch [TUNE] to choose the PTY tuning mode.**
The PTY mode is activated.
- 4 **To select the station in the PTY, touch [◀] or [▶].**

Priority News

This function gives priority to the News programme. Whenever the News programme broadcasts, it will interrupt the programme you are currently listening to.

Touch [News] of Bottom banner to activate the PRIORITY NEWS mode.


The "NEWS" indicator appears in the display. Touch [News] again to deactivate the Priority News mode and return to the programme you were previously listening to.

 **USER1/USER2**

Displaying Radio Text

Text messages from a radio station can be displayed.

- 1 **Tune in a radio station that transmits text messages.**
- 2 **Touch [Info] in the bottom banner in FM radio mode repeatedly to switch to the desired display.**

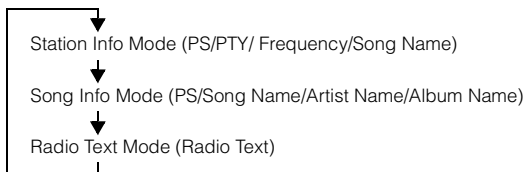

CD/MP3/WMA/AAC

■ Display example for MP3/WMA/AAC main screen

Info mode



- ① Song title
- ② Artist title
- ③ Album title
- ④ Current song no./Total song no.
- ⑤ Elapsed time

- If there is no CD text, the message "NO TEXT" appears.

Playback

1 Press the (AUDIO) button.

2 Touch [Disc] of Top banner.

The display shows the Disc mode screen.

When a disc is inserted into the disc slot of this unit, with the label side facing up, the unit starts playback of the disc.

3 Touch [] or [] to select the desired track (file).

Returning to the beginning of the current track (file):

Touch [].

Fast reverse :

Touch and hold [].

Advancing to the beginning of the next track (file) :

Touch [].

Fast forward :

Touch and hold [].

4 To pause playback, touch [/II].

[] is displayed in the middle of the screen.

Touch [/II] again or touch [] in the middle of the screen to start playback.

- The INE-W920R/INE-W928R can play back MP3/WMA/AAC files saved to CD or DVD. Use a format compliant with this unit. For further information about playing or storing MP3/WMA/AAC files, refer to pages 34 and 35 before using the unit.
- Any file protected by DRM (Digital Rights Management) copy protection, cannot be played back on this unit.
- If a disc contains both audio data and MP3/WMA/AAC data, this unit plays back only the audio data.
- The track display for CD audio data playback shows the track numbers recorded on the disc.
- If an MP3/WMA/AAC disc with many files and folders is played, it may take longer than normal to start playback.

- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.

Repeat Play

Touch [] to repeatedly play back.

The tracks (files) will be played repeatedly.

The repeat mode switches every time the button is touched.

CD:

Repeat → (OFF) → Repeat



MP3/WMA/AAC:

Repeat → Repeat Folder* → (OFF) → Repeat



- * Only files in a folder are repeatedly played back.

- If the Repeat Play mode is activated during M.I.X. playback, the M.I.X. mode will be cancelled.

M.I.X. (Random Play)

Touch [] of Bottom banner during playback.

The tracks (files) on the disc will be played back in a random sequence.

The M.I.X. mode switches every time [] is touched.

CD:

M.I.X. → (OFF) → M.I.X.



MP3/WMA/AAC:

M.I.X. Folder* → (OFF) → M.I.X. Folder*



- * Only files in a folder are played back in random sequence.

- If the M.I.X. mode is activated during Repeat playback, the Repeat Play mode will be cancelled.
- If you select a track by using the search mode, the M.I.X. play mode will be cancelled.

Selecting Folders (Concerning MP3/WMA/AAC)

Touch [] or [] of Bottom banner to select the folder.

Searching from CD Text

1 Touch [🔍 (Search)] of Bottom banner during playback.

The CD text search screen is displayed.

2 Touch the selected track name.

The selected track will be played back.

- For details on how to scroll through the list, refer to “Selecting an Item in a List” (page 29).

File/Folder Name Search (Concerning MP3/WMA/AAC)

1 Touch [🔍 (Search)] of Bottom banner during playback.

The search mode is activated.

2 Touch [MUSIC].

The folder name list screen is displayed.

Folder Name Search mode

3 Touch [▶] in the desired folder.

The first file in the selected folder is played back.

File Name Search mode

3 Touch the desired folder name.

The File name of the selected folder is displayed.

4 Touch the desired file name.

The selected file is played back.

- To return to the previous hierarchy, touch [↶].
- For details on how to scroll through the list, refer to “Selecting an Item in a List” (page 29).
- After selecting a folder via a Folder name search, touch [☰] on the main screen to display the folder search screen.
- After selecting a file via a File name search, touch [☰] on the main screen to display the file search screen.

About MP3/WMA/AAC

CAUTION

Except for private use, duplicating audio data (including MP3/WMA/AAC data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.

What is MP3?

MP3, whose official name is “MPEG Audio Layer 3,” is a compression standard prescribed by the ISO, the International Standardization Organization and MPEG which is a joint activity institution of the IEC.

MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality. The MP3 format realises such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds.

What is AAC?

AAC is the abbreviation for “Advanced Audio Coding,” and is a basic format of audio compression used by MPEG2 or MPEG4.

What is WMA?

WMA, or “Windows Media™ Audio,” is compressed audio data. WMA is similar to MP3 audio data.

Method for creating MP3/WMA/AAC files

Audio data is compressed using software with MP3/WMA/AAC codecs. For details on creating MP3/WMA/AAC files, refer to the user’s manual for that software.

MP3/WMA/AAC files that are playable on this device have the file extensions.

MP3: “mp3”

WMA: “wma” (ver. 7.x, 8.x, 9.x are supported)

AAC: “m4a”

WMA is not supported for the following files, Windows Media Audio Professional, Windows Media Audio 9 Voice or Windows Media Audio 9 Pro Lossless.

There are many different versions of the AAC format. Confirm that the software being used conforms to the acceptable formats listed above. It’s possible that the format may be unplayable even though the extension is valid.

Playback of AAC files encoded by iTunes is supported.

Supported playback sampling rates and bit rates

MP3

Sampling rates: 48 kHz, 44.1 kHz, 32 kHz, 24 kHz, 22.05 kHz, 16 kHz, 12 kHz, 11.025 kHz, 8 kHz

Bit rates: 8 - 320 kbps

WMA

Sampling rates: 48 kHz, 44.1 kHz, 32 kHz, 22.05 kHz, 16 kHz, 11.025 kHz, 8 kHz

Bit rates: 48 - 320 kbps

AAC

Sampling rates: 48 kHz, 44.1 kHz, 32 kHz, 24 kHz, 22.05 kHz, 16 kHz, 12 kHz, 11.025 kHz, 8 kHz

Bit rates: 16 - 320 kbps

This device may not play back correctly depending on sampling rates.

ID3 tags/WMA tags

This device supports ID3 tag v1.0, v1.1, v2.2, v2.3, v2.4, and WMA tag Ver.1.x. If tag data is in an MP3/WMA/AAC file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data (maximum 64 characters).

For non-supported characters, blank character, "No Title" is displayed.

The number of characters may be limited, or not correctly displayed, depending on the tag information.

Playing back MP3/WMA/AAC

MP3/WMA/AAC files are prepared, then written to a CD-R, CD-RW (DVD-R/DVD-RW/DVD+R/DVD+RW) using CD-R writing software and USB memory.

- Maximum numbers of playable files / folders
Disc: 1,000 files/folders (including Root Folder/DivX® file)
USB memory: 10,000 files/folders (including Root Folder/DivX® file)
- Largest playable file size: 512 MB

Playback may not be performed if a disc exceeds the limitations described above.

If a file/folder name is long, the maximum possible number of files may decrease.

- Both Audio and Video files are counted if their formats are playable on this unit.

Media supported

The media that this device can play back are CD-ROMs, CD-Rs, CD-RWs, DVD-Rs, DVD-RWs, DVD+Rs, DVD+RWs and USB memory.

Corresponding File Systems

This device supports discs formatted with ISO9660 Level 1 or Level 2, UDF1.02 and UDF1.02(ISO Bridge).

Under the ISO9660 standard, there are some restrictions to remember.

The maximum nested folder depth is 8 (including the root directory). File names are limited to 256 characters (including the extension).

Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '_' (underscore).

This device can play back discs in Joliet, Romeo, etc., and other standards that conform to ISO9660. However, sometimes the file names, folder names, etc., are not displayed correctly.


Formats supported

This device supports CD-ROM Mode1, CD-ROM XA Mode2(Form1&2), Mixed Mode CD and Multi-Session.

This device cannot correctly play back discs recorded with Track At Once or packet writing.

Order of files

Files are played back in the order that the writing software writes them to the disc. Therefore, the playback order may not be what's expected. Verify the writing order in the software's documentation. The playback order of the folders and files is as follows. (The following numbers may differ from actually displayed numbers.)

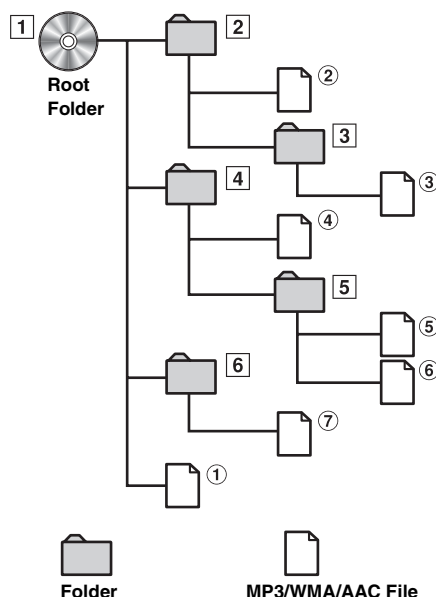

Terminology

Bit rate

This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

Sampling rate

This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

Encoding

Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format.

Tag


Song information such as track titles, artist names, album names, etc., written into MP3/WMA/AAC files.

Root folder


The root folder (or root directory) is found at the top of the file system. The root folder contains all folders and files. It is created automatically for all burned discs.

DVD

■ Display example for DVD Video main screen

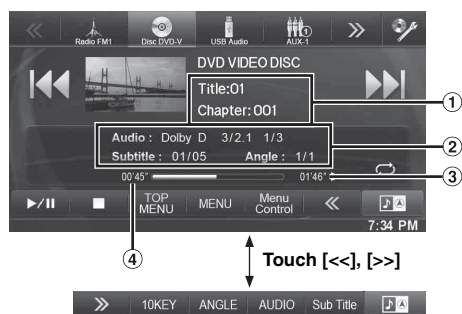

■ Display example for DivX® main screen

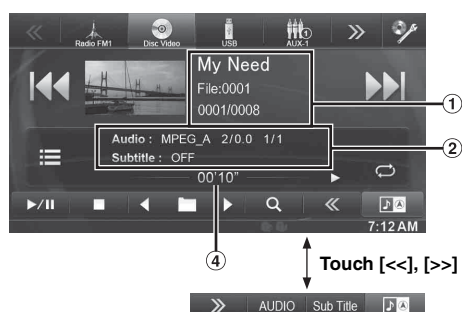

- ① Information display-1
DVD-Video:
Title name/Chapter No.
DivX®:
Title name/File No./Current File No./Total File No. in Current Folder
- ② Information display-2
DVD-Video:
Audio signal output/Subtitle/Angle
DivX®:
Audio signal output/Subtitle
- ③ Remaining time for playing
- ④ Elapsed time

Disc types that can be used for each heading are represented by the following marks.



DVD Commercial Video discs (used for the distribution of movies, etc.) or a DVD-R/DVD-RW, DVD+R/DVD+RW recorded in a video mode can be used.



CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW discs that are recorded in the DivX® mode can be used.

The DVD operation screen display

Touch the screen while the DVD playback screen is displayed.

The DVD operation screen is displayed.



- The operation screen changes to the visual screen in the DVD mode for 5 seconds after an operation has been performed.
- If you try to activate the DVD while driving, the display will show the warning-Picture off for your safety.
- Some operations cannot be carried out depending on the disc or playback screen.

Playing a Disc



⚠ WARNING

It is dangerous for the driver to watch the DVD/TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the INE-W920R/INE-W928R correctly so that the driver cannot watch DVD/TV/Video unless the vehicle is stopped and the emergency brake is applied.

If the INE-W920R/INE-W928R is not installed correctly, the driver will be able to watch the DVD/TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

⚠ Caution

- Not all functions will operate for every DVD. See the individual DVD's instructions for details on the features supported.
- Fingerprints on a disc may adversely affect playback. If a problem occurs, remove the disc and check for fingerprints on the playback side. Clean the disc if necessary.
- If you switch the power or Ignition key OFF or change sources during playback, playback will continue where you left off when you resume playback.
- If you try to perform an invalid operation (based on the type of disc being played), the following mark is displayed on the monitor screen: ⓪

- **Play Position Memory Function**
Even if you turn power off or switch the Ignition key to OFF during playback or change the source, playback will continue from the point where playback stopped when the power is turned ON again.

1 Press the (AUDIO) button.

2 Touch [Disc] of Top banner.

The display shows the Disc mode screen.

Or insert a disc with the label side facing up. The unit starts to play the disc.

- The reverse side of a double-sided DVD will not be played automatically.
Remove the disc, turn it over, and reinsert it.
- DO NOT insert discs containing maps for the navigation system.
Doing so could result in damage.
- Refer also to "Disc Setting" (page 52).
- While reading a DivX® file, the fast-forwarding/fast-reversing and repeat functions, etc. cannot be used.
- A DivX® file that exceeds 4GB cannot be played back.

If a Menu Screen Appears

On DVD mode, menu screens may appear automatically. If this happens, perform the operation described below to start playback.

Direct Menu Operations


Touch the DVD menu directly.



- Some operations cannot be performed depending on the disc.

Menu Operations

1 Touch [Key].

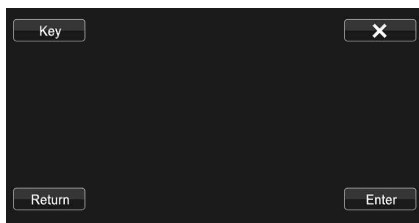The menu operation mode will be displayed.



Touch [] [] to change the Key panel location from right to left or vice-versa.

Touch [Return] to return to the previous display.

2 Select a desired menu item by touching [▼], [▲], [◀] or [▶].



- Touching [X] in the operation panel returns to the screen in step 1.
- Touching [Key] displays the Numeric Keypad Input Mode screen.
For details of the Numeric Keypad Input Mode screen, refer to "Numeric Keypad Input Operations" (page 37).

3 Touch [Enter] to confirm the selected item.


Numeric Keypad Input Operations

1 Touch [10KEY] of Bottom banner.

The numeric keypad input mode screen appears

If [10KEY] is not displayed, touch [<] in the bottom banner to display [10KEY].

2 Touch a desired number.

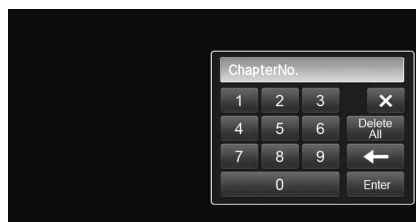

Touch [] to delete an entered number.

Touch [Delete All] to delete all entered number.

3 Touch [Enter] on the numeric keypad mode screen to confirm your selection.

Touch [X] to hide the keypad display.

Displaying the Top Menu Screen

When a DVD contains two or more titles, the top menu screen appears.

Touch [TOP MENU] of Bottom banner.

The top menu screen appears.

- To perform necessary operations, refer to "If a Menu Screen Appears" (page 37).

Displaying the Menu Screen

With a DVD having two or more menus, a menu screen will appear for the programmes available, in addition to the main programmes.

Touch [MENU] of Bottom banner.

The Root menu screen appears.

- To perform necessary operations, refer to "If a Menu Screen Appears" (page 37).

Stopping Playback (PRE STOP)

DVD-V DivX

Touch the stop button during playback to stop playback. That position is stored in the memory.

- 1 **Touch [■] during playback.**
“Pre ■” indicator and [▶] in the middle of the screen are displayed.
 - 2 **Touch [▶/II] in the PRE STOP mode or touch [▶] in the middle of the screen.**
Playback starts from the position at which it was stopped.
- For some discs, the position at which playback was stopped may not be accurate.

Stopping Playback

DVD-V DivX

Touch and hold [■] for at least 2 seconds during playback.

“■” indicator and [▶] in the middle of the screen are displayed.

- Playback starts from the beginning when [▶/II] or [▶] in the middle of the screen is touched while playback is stopped.

Fast-forwarding/Fast-reversing

DVD-V DivX

- 1 **During playback, touch and hold [◀◀] (Fast-reverse) or touch and hold [▶▶] (Fast-forward).**
DVD-Video:
Touch and hold for more than 1 second to forward/reverse at double speed.
Every time you touch [◀◀]/[▶▶] during fast- reverse/ fast- forward, the speed changes as follows: 2x → 8x → 32x → 2x.
DivX®:
Touch and hold for more than 1 second to forward/reverse at 8x speed.
Every time you touch [◀◀]/[▶▶] during fast- reverse/ fast- forward, the speed changes as follows: 8x → 16x → 32x → 8x.
 - For a DivX® file that does not contain index information, the fast forward and the reverse option is not available.

- 2 **Touch [▶/II] to return to normal playback.**
 - No sound is played back during fast-forwarding/fast-reversing.
 - On DVD mode, the menu screen may reappear during fast-forwarding/fast-reversing.
 - This operation may not be possible on certain discs.

Finding the Beginnings of Chapters/ Tracks/Files

DVD-V DivX

During playback, touch [◀◀] or [▶▶].

The chapter/track/file switches each time the button is touched, and playback of the selected chapter/track/file starts.

- ▶▶: Touch this to start playback from the beginning of the following chapter, track or file.
- ◀◀: Touch this to start playback from the beginning of the current chapter, track or file.

- Some DVDs do not have chapters.

Supplementary explanations

“Chapters” are divisions of movies or musical selections on DVDs.

Playing Still Frames (Pausing)

DVD-V DivX

- 1 **During playback, Touch [▶/II] of Bottom banner.**
- 2 **Touch [▶/II] or [▶] in the middle of the screen to resume playback.**

- No sound is played during the still frame mode.
- The image or sound may stop temporarily when playback starts from the pause mode. This is not a malfunction.

Forward frame-by-frame Playback

DVD-V

- 1 **In the pause mode, touch [▶▶].**
The picture advances by one frame each time the button is touched.
- 2 **Touch [▶/II] or [▶] in the middle of the screen to return to normal mode.**
 - No sound is output during forward frame-by-frame playback.
 - You cannot execute reverse frame-by-frame playback.

Slow Motion Playback

DVD-V DVD-VR

- 1 **When [▶▶] is touched and held while in the pause mode, the 1/8th speed slow motion playback mode is set.**
Furthermore, when touched and held [▶▶] again, the slow motion speed switches to 1/2 the normal speed.
- 2 **Touch [▶/II] of Bottom banner to play back.**
 - No sound is played during slow motion playback.
 - 1/2, 1/8 are approximate speeds. The actual speed differs from disc to disc.
 - You cannot execute reverse slow motion playback.

Selecting Folders

DivX

Touch [**◀■**] or [**■▶**] of Bottom banner to select the folder.

- Touch [**◀■**] to play from the first file of the previous folder.
Touch [**■▶**] to play from the first file of the next folder.

Repeat Playback

DVD-V


DivX

Use this function to play the disc's titles, chapters or tracks, etc., repeatedly.

Touch [**↺**] of Bottom banner.


The repeat mode switches every time the button is touched.

DVD Video

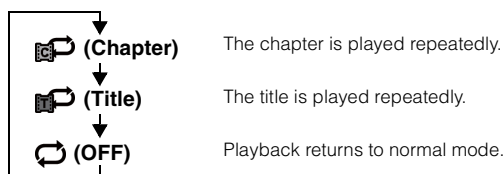

- The REPEAT mode is always turned off when [**↺**] is touched and held for at least 2 seconds.
- Only discs containing a Playlist can be displayed.

DivX®

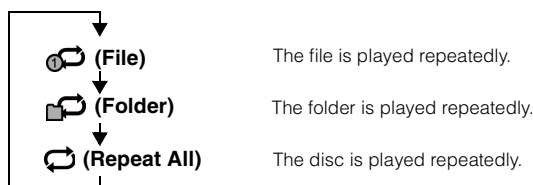

Searching by Title Number

DVD-V

Use this function to easily find positions on the DVD using the DVD's titles. Perform operations while playback is stopped.

1 Touch [10Key] of Bottom banner.

The numeric keypad input mode screen appears.
If [10KEY] is not displayed, touch [<<] in the bottom banner to display [10KEY].

- For DVD Video, the numeric keypad can also be displayed by touching [**◀▶**] on the Menu screen and then touching [Key] twice.

2 Enter a desired title by touching its number.

See page 37 for operation of the numeric keypad.

3 Touch [Enter].

Playback will start from the number selected.

4 Touch [X].

- This function cannot be used on discs on which no title numbers are recorded.
- Some disc may not accept any operation.

Searching Directly by Chapter Number

DVD-V

Use this function to easily move to the beginnings of the chapters on the disc. Perform operations during playback, during PRE-STOP or while playback is paused.

1 Touch [10Key] of Bottom banner.

The numeric keypad input mode screen will appear.

If [10KEY] is not displayed, touch [<<] in the bottom banner to display [10KEY].

2 Touch and enter the chapter number you want to play.

See page 37 for operation of the numeric keypad.

3 Touch [Enter] to confirm your selection.

Playback will start from the selected chapter.

4 Touch [X].

- This function is not available for a disc on which chapters are not stored.

Searching for a Desired Video File

DivX

You can select a video file from the list screen.

1 Touch [🔍 (Search)] of Bottom banner.

The search mode is activated.

2 Touch [Video].

The folder list screen appears.

Folder Name Search mode

3 Touch [▶] in the desired folder.

The first file in the selected folder is played back.

File Name Search mode

3 Touch the desired folder name.

The File name of the selected folder is displayed.

4 Touch the desired file name.

The selected file is played back.

- To return to the previous hierarchy, touch [**⏮**].
- For details on how to scroll through the list, refer to "Selecting an Item in a List" (page 29).
- After selecting a folder via a Folder name search, touch [**≡**] on the main screen to display the folder search screen.
- After selecting a file via a File name search, touch [**≡**] on the main screen to display the file search screen.

Switching the Angle DVD-V

On DVDs in which scenes have been filmed from multiple angles, the angle can be switched during playback.

Touch [ANGLE] of Bottom banner.

The angle switches between the angles recorded on the disc every time the button is touched.

If [ANGL] is not displayed, touch [<<] or [>>] in the bottom banner to display [ANGL].

- *Some time may be required for the angle to change.*
- *Depending on the disc, the angle may switch in one of two ways.*
 - *Seamless: The angle switches smoothly.*
 - *Non-seamless: When the angle is switched, a still picture is displayed first, after which the angle switches.*

Switching the Audio Tracks DVD-V DivX

DVDs with multiplex audio or audio languages allow switching the sound during playback.

Touch [AUDIO] of Bottom banner.

The sound switches between the alternate audio tracks recorded on the disc every time the button is touched.

If [AUDIO] is not displayed, touch [<<] or [>>] in the bottom banner to display [AUDIO].

- *The alternate track selected becomes the default setting every time the power is turned on or the disc is replaced. If the disc does not include that track, the disc's default language is selected instead.*
- *Not all discs will allow changing the alternate audio tracks during playback. In these cases, select audio tracks from the DVDs menu.*
- *There may be a delay before the selected alternate track begins to play.*

Switching the Subtitles (Subtitle Language) DVD-V DivX

With DVDs on which multiple subtitle languages are recorded, the subtitle language can be switched during playback; moreover, subtitles can be hidden.

Touch [Sub Title] of Bottom banner.

Touching this button repeatedly selects sequentially the subtitle languages recorded on the disc, and then turns the subtitles OFF.

If [Sub Title] is not displayed, touch [<<] or [>>] in the bottom banner to display [Sub Title].

- *There may be a delay before the selected subtitle appears.*
- *Not all discs will allow changing the subtitles during playback. In these cases, select subtitles from the DVDs menu.*
- *The subtitle language selected becomes the default setting every time the power is turned on or the disc is replaced. If the disc does not include that language, the disc's default language is selected instead. However, the subtitle language may differ depending on the disc.*
- *For some discs, the subtitles will be displayed even when this is set to OFF. However, the subtitle language may differ depending on the disc.*

About DivX®

DivX® is a codec (software) to compress moving images while maintaining image quality using a highly advanced compression ratio and operating speed.

- *Official DivX® Certified product*

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Media supported

The unit can play back CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW discs and USB memory device that are recorded in the DivX® mode.

Corresponding extension

"avi," "divx"

Video Codec

DivX® versions 3, 4, 5, and 6 (versions 5 handle both interlaced and progressive)

Audio Codec

MPEG1 Layer2 (MP2)	32 to 384 kbps
MPEG1 Layer3 (MP3)	32 to 320 kbps
MPEG2 Layer2 (MP2)	8 to 160 kbps
MPEG2 Layer3 (MP3)	8 to 160 kbps
Dolby Digital	32 to 448 kbps

The optimum size for DivX® playback is as follows:

Screen Size: 96 to 720 pixel (horizontal) × 96 to 576 pixel (vertical)

With an aspect ratio other than 16:9, black bars may be displayed on the left and right sides, or at the top and bottom of the screen.

Image bit rate: "average 4 Mbps, Peak 8 Mbps"
Home Theater Profile supported

Setup

Setup Operation

Touch the [SETUP] icon on the Audio/Visual Playback screen to display the Setup main screen.



General Setup

General Setup Operation

The parking brake must be engaged to access the General mode screen. Attempting to access this screen while driving will display the warning-Unable to operate while driving.

The following steps 1 to 4 are common operations to each "Setting item" of General Setup. Refer to each section for details.

1 Touch [Setup] icon of Top banner.


The Setup main screen is displayed.

2 Touch [General].



The General Setup screen appears.

3 Select the desired item.

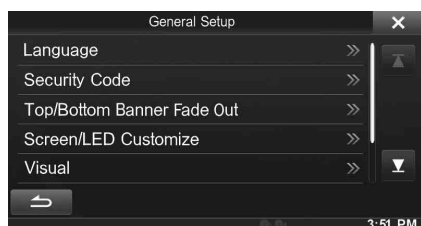

Setting items: Language / Remote Sensor / Security Code / Top/Bottom Banner Fade Out / Screen / LED Customize / Visual / About / Installation

- Depending on the item, repeat step 3.

4 Touch [◀] or [▶] etc., to change its setting.

- When the pop-up window for setup is displayed, touch [X] to close the window after setting.

5 Touch [↶] to return to the previous screen.

- Immediately after changing the settings of General Setup (While the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.

Language Setting

Touch [Language] on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

Setting the Scroll

Scroll display is available if CD text, folder name, file name or tag information is entered.

Setting item: Auto Scroll

Setting contents: Off / On (Initial setting)

Off: Turns off the scroll mode.

On: Turns on the Auto scroll mode. Scroll display is repeated as long as the mode is turned on.

Format settings

The character code to be used for tag text information displayed on the screen can be selected from 7 character codes.

Setting item: Format Sel.

Setting contents: EU1 / EU2 (Initial setting) / RUS / CHI / THA / ARA

EU1: ISO 8859-1

EU2: ISO 8859-15

RUS: ISO 8859-5

CHI: GB18030

THA: CP874

ARA: CP1256

Setting the Menu Language

The Setup menu, feedback information, etc. for this unit can be changed to appear in the selected language.

Setting item: Language Sel.

Setting contents: English / German / French / Spanish / Portuguese / Italian / Dutch / Finnish / Norwegian / Swedish / Russian / Thai / Arabic / Chinese / Other languages (Czech / Danish / Greek / Hungarian / Polish / Slovak / Turkish)

- Touch [OK] to confirm the language and display the screen in the specified language.

Remote Sensor Setting

[Remote Sensor] is selected on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

For remote control operation, the remote sensor of the external device (monitor, etc.) can be switched, as you prefer.

Setting item: Remote Sensor

Setting contents: Front (Initial setting) / Rear

- Front: The remote sensor of this unit is effective.
Rear: The remote sensor of the external monitor connected to AUX OUTPUT of this unit becomes effective. The remote control operates the source connected to the AUX OUTPUT terminals.

- If the RSE (page 55) is "Off," the setting is not displayed.

Security Code Setting

[Security Code] is selected on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

Setting Security code

You can set the system to be unusable without entering a password. When you turn this setting to "On" and set a password, password input is required when the system is connected to a battery and turned on for the first time.

Setting item: Security Code

Setting contents: Off (Initial setting) / On

Setting the password

1 Touch [◀] or [▶] of "Security Code" to set to "On."

2 After the confirmation message appears, touch [OK].

The password setting screen is displayed.

3 Enter a password, then touch [OK].

- Enter the 6-digit number.
- Input numbers are displayed as "*".

4 Enter the same password again, then touch [OK].

The password is set and the system returns to the previous screen.

- If you forget a registered password, you can not use this unit. In this case, service will be required.

Clearing the password

1 Touch [◀] or [▶] of "Security Code" to set to "Off."
The password setting screen is displayed.

2 Enter the password you have set, then touch [OK].

The password is cleared and the system returns to the previous screen.

- Input numbers are displayed as "*".

■ USER1/USER2

Setting Top banner and Bottom banner Display

[Top/Bottom Banner Fade Out] is selected on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

You can configure the display setting for the Top banner and Bottom banner for the audio/visual source.

Setting item: Top/Bottom Banner Fade Out

Setting contents: Off (Initial setting) / On

- Off: Always displayed
On: Fade out after 5 seconds if no operations performed

Screen/LED Customize

Touch [Screen/LED Customize] on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

Setting the Brightness of the Backlighting

Backlighting is provided by a fluorescent light built into the liquid crystal panel. The illumination control adjusts the brightness of the backlighting based on the car ambient lighting for easier viewing.

Setting item: Dimmer

Setting contents: Auto (Initial setting) / On / Off

- Auto: Adjust the brightness of the background illumination of the monitor automatically to the brightness of the car interior.
On: Keep the background illumination of the monitor dark.
Off: Deactivate Auto Dimmer mode to keep the background illumination of the monitor bright.

- When "Auto" or "On" is set, the setting is also applied for the button lighting in "Adjusting the Dimmer of Button Lighting at Night" (page 42), and "Adjusting the Minimum Level of Backlight" (page 42).

Adjusting the Minimum Level of Backlight

You can adjust the brightness of the backlight. This function could be used, for instance, to change the screen brightness while traveling at night.

Setting item: Screen Dimmer Level

Setting content: -15 to +15 (Initial setting: 0)

You can adjust the level between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

Adjusting the Dimmer of Button Lighting at Night

You can adjust the brightness of the button lighting at night with the dimmer.

Setting item: LED Dimmer Level

Setting level: -2 to +2 (Initial setting: 0)

Switching the Display Colour

You can choose from 5 different display colours.

Setting item: Screen Colour

Setting contents: Blue (Initial setting) / Red / Green / Amber / Black

Adjusting the Touch Panel

Adjustment becomes necessary when the display position on the LCD and the touch position on the touch panel do not match.

Setting item: Screen Alignment

1 Touch [Screen Alignment] in the Screen/LED Customize screen.

The adjustment screen appears.

2 Accurately touch the mark provided in the upper left corner of the screen.

3 Accurately touch the mark provided in the lower right corner of the screen.

This completes adjustment, and returns to the previous screen.

- If you touch [Cancel] on the adjustment screen, no adjustment is done and returns to the previous screen.

Initialising the Touch Panel Corrected Values

Initialise the corrected values adjusted by Adjusting the Touch Panel.

1 Touch [Screen Alignment Reset] in the Screen/LED Customize screen.

2 After the confirmation message appears, touch [OK].

The corrected values are initialised.

Visual Setting

[Visual] is selected on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

1 Touch the desired item.



- "Audio" can be selected while a video is playing.

2 Touch [➤] of the desired item.

Settable items differ depending on the application.

- [Audio] (Video media):
Display Mode*1 / Live Contrast / Visual EQ / Bright / Colour / Tint / Contrast / Sharp
- [Direct Camera]*2:
Live Contrast / Bright / Colour / Contrast
- [AUX Camera]*2:
Live Contrast / Bright / Colour / Contrast
- [Navigation]:
Bright / Contrast

*1 When media is set to AUX, the settings cannot be changed in the situations below.

- When "AUX In" is set to "DVB-T" is "On."

*2 The camera names set under the "Direct Camera/AUX Camera" settings are displayed. The camera names are not displayed when "Off" is set (pages 59, 60).

3 Touch [◀] or [▶] to change its setting.

4 Touch [<] to return to the previous screen.

- Immediately after changing the settings of Display Setup (While the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.

Switching Display Modes

Setting item: Display Mode


Setting contents: WIDE (Initial setting) / CINEMA / NORMAL



In WIDE mode, the monitor displays a normal picture wider to fit in a wide-screen monitor by evenly stretching out the picture horizontally.



In CINEMA mode, the monitor displays a normal picture by stretching out the picture horizontally and vertically. This mode is good for displaying a cinema type picture at the 16:9 ratio.

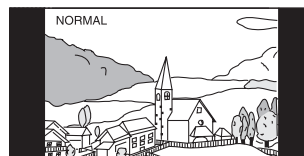

In NORMAL mode, the monitor displays a normal picture at the center of the screen with a vertical black band at each side.

Adjusting the Live Contrast

This function automatically adjusts the areas on the screen that are too bright or too dark and corrects them to natural brightness.

Setting item: *Live Contrast*

Setting contents: *OFF (Initial setting) / LOW / HIGH*

Selecting the Visual EQ Mode (Factory's setting)

You can select a mode suitable for the subject image.

Setting item: *Visual EQ*

Setting contents: *OFF (Initial setting) / NIGHT M. / SOFT / SHARP / CONTRAST*

OFF:	Initial Setting
NIGHT M.:	Suitable for movies in which dark scenes frequently appear.
SOFT:	Suitable for CGs and animated films.
SHARP:	Suitable for old movies where images are not clearly shown.
CONTRAST:	Suitable for recent movies.

- To return to the default video settings, set this function to OFF. Any Visual EQ selection or changes made are reset their initial settings.

Adjusting Brightness

Setting item: *Bright*

Setting content: *-15 to +15 (Initial setting: 0)*

You can adjust the brightness between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

Adjusting Colour of Picture

Setting item: *Colour*

Setting content: *-15 to +15 (Initial setting: 0)*

You can adjust the colour between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

Adjusting Tint of Picture

Setting item: *Tint*

Setting content: *R15 to G15 (Initial setting: 0)*

Adjust the colour from R15 to G15.

- When setting PAL, you can not adjust the TINT.

Adjusting Image Contrast

Setting item: *Contrast*

Setting content: *-15 to +15 (Initial setting: 0)*

You can adjust the contrast between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively.

Adjusting Picture Quality

Setting item: *Sharp*

Setting content: *-5 to +5 (Initial setting: 0)*

Picture quality adjustment range is -5 to +5. "SOFT" and "HARD" appear as the minimum and maximum values specified.

Saving and calling the adjusted picture quality

When adjusting audio (video media), you can store the settings made for "Adjusting Live Contrast, Brightness, Color, Tint, Contrast and Sharp."

Setting item: *Preset1 / Preset2*

- 1 After completing "Adjusting Live Contrast, Brightness, Color, Tint, Contrast and Sharp" (page 44), touch and hold [Preset1] or [Preset2] to save the settings.
- 2 Touch [Preset1] or [Preset2] to call the saved settings.

- Display Mode cannot be registered.

About INE-W920R/INE-W928R

Touch [About] on the General setup menu in step 3. Refer to "General Setup Operation" (page 41).

Displaying the Product Information

You can view the version information of this product. Make note of this information and refer to it whenever you contact Alpine Tech Support or an Alpine-authorized dealer.

Setting item: *Version Info*

Contents: *Serial No. / Firmware Version*

Checking the DivX® Registration

This unit will display the registration code required to play a DivX® VOD (Video On Demand), or you can also display the deregistration code.

Setting item: *Warranty / Copyright Info.*

Displaying the Registration Code

- 1 Touch [Warranty/Copyright Info.].
- 2 Touch [DivX(R) VOD].
- 3 Touch [Registration].
The registration code is displayed on the screen.
- 4 Touch [OK].


Displaying the Deregistration Code

- 1 Touch **[Warranty/Copyright Info.]**.
 - 2 Touch **[DivX(R) VOD]**.
 - 3 Touch **[Deregistration]**.
The confirmation dialog screen appears.
 - 4 Touch **[OK]**.
The deregistration code is displayed on the screen.
- When you have finished, touch **[Cancel]**. If you want to continue and display a new registration code, touch **[OK]**, check the registration code, and then touch **[OK]** again.

Initialising the System

You can initialise all data, to restore the factory settings. Remove the CD/DVD disc, etc. from the system before operation

Setting item: Restore Factory Setting

- 1 Touch **[Restore Factory Setting]**.
 - 2 After the confirmation message appears, touch **[OK]**.
The confirmation screen appears again.
 - 3 Touch **[OK]**.
The system starts initialisation.
- Do not turn on/off the power or change the ignition key position until system restart is completed.
 - For the INE-W920R, do not detach the front panel by pressing the  (Release) button until system restart is complete.

Installation Setup

[Installation] is selected on the General setup menu in step 3. See “General Setup Operation” (page 41).

Setting item: Installation

The Installation check screen is displayed.




Sound Setup

Sound Setup Operation

The parking brake must be engaged to access the Setup screen. Attempting to access this screen while driving will display the warning-Unable to operate while driving.


The following steps 1 to 5 are common operations to each “Setting item” of Sound Setup. Refer to each section for details.

- 1 Touch **[Setup]** icon of **Top banner**.
The Setup main screen is displayed.
- 2 Touch **[Sound]**.

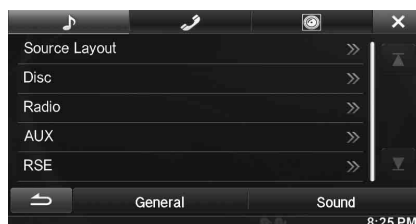

The Sound Setup screen appears.

- 3 Select the desired item.

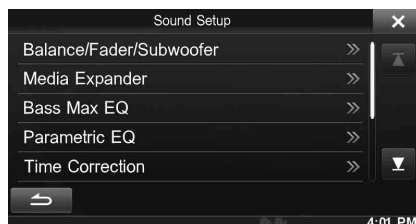

Setting items: Balance / Fader / Subwoofer / Media Xpander / Bass Max EQ / Parametric EQ / Time Correction / X-OVER / Defeat / Volume / Application Volume Setup

- 4 Touch **[◀]** or **[▶]** etc., to change its setting.
 - When the pop-up window for setup is displayed, touch **[X]** to close the window after setting.
- 5 Touch **[↶]** to return to the previous screen.
 - Immediately after changing the Sound Setup (while the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.
 - For details on how to scroll through the list, refer to “Selecting an Item in a List” (page 29).

Setting the Balance/Fader/Subwoofer

[**Balance/Fader/Subwoofer**] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

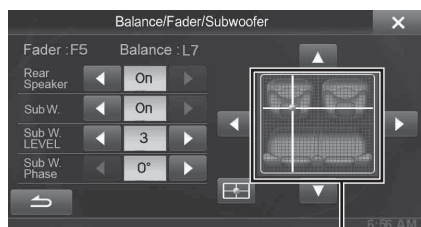


Image area

Adjusting the Balance/Fader

Touch the desired point within the image area. Or touch [▲][▼][◀][▶].

Balance: L15 to R15

Fader: F15 to R15

Rear Speaker Setting

You can set the rear speaker output to “Off.”

Setting item: Rear Speaker

Setting contents: On (Initial setting) / Off

- Note that if you select “Off” when the Rear Speaker Position in Car Specific Sound Setup is set to “Rear Deck” or “Rear Door/Panel,” the setting in Car Specific Sound Setup will be cancelled.

USER1/USER2

Turning Subwoofer ON/OFF

If an optional subwoofer is connected to the unit, make the following setting.

Setting item: SubW.

Setting contents: On / Off (Initial setting: Off)

- Note that if you select “Off” when Subwoofer Installed in Car Specific Sound Setup is set to “Yes,” the setting in Car Specific Sound Setup will be cancelled.

USER1/USER2

Adjusting the Subwoofer Level

You can set the Subwoofer level when a Subwoofer is connected.

Setting item: SubW. LEVEL

Setting contents: 0 to 15 (Initial setting: 0)

- If the Subwoofer setting is “Off,” the setting cannot be set.

Setting the Subwoofer Phase

The subwoofer output phase is toggled Subwoofer Normal (0°) or Subwoofer Reverse (180°).

Setting item: SubW. Phase

Setting contents: 0° / 180° (Initial setting: 0°)

- If the Subwoofer setting is “Off,” the setting cannot be set.

Setting the MX (Media Xpander)

[**Media Xpander**] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45). When the currently playing source is AM radio band (MW/LW), this option is not available.

MX (Media Xpander) makes vocals or instruments sound distinct regardless of the music source. The FM radio, CD, USB memory and iPod/iPhone, will be able to reproduce the music clearly even in cars with a lot of road noise.

Setting item: Media Xpander

- Touch [ON] of “ALL MX OFF/ON” in the MX setup screen.



- Touch any of [Off] [1] [2] [3].

Media	Level			
	OFF	1	2	3
FM	Off	[Bar Graph]	[Bar Graph]	[Bar Graph]
DVD	Off	Movie [Bar Graph]	Movie [Bar Graph]	DVD Music [Bar Graph]
CD	Off	[Bar Graph]	[Bar Graph]	[Bar Graph]
Compress Media	Off	[Bar Graph]	[Bar Graph]	[Bar Graph]
AUX/AUX3	Off	Compress Media [Bar Graph]	Movie [Bar Graph]	Music [Bar Graph]

- The MX setting can be performed only when a source is currently selected.
- MP3/WMA/AAC/iPod/USB Audio/DivX®/BLUETOOTH Audio correspond to MX Compress Media.

MX FM

The medium to high frequencies become more clear, and produces well balanced sound in all the bands.

MX DVD

(Movie)

The dialog portion of the video is reproduced more clearly

(DVD Music)

This disc contains a large quantity of data such as music clip. MX uses this data to reproduce the sound accurately.

MX CD

CD mode processes a large quantity of data. This data is used to reproduce the sound cleanly by making use of the data quantity.

MX Compress Media

This corrects information that was omitted at the time of compression. This reproduces a well-balanced sound close to the original.

MX AUX/AUX3

Choose the MX mode (Compress Media, Movie, or Music) that corresponds to the media connected.

- To cancel MX mode for all music applications, set MX to “Off” in step 1.
- Each music applications, such as FM radio, CD, and MP3/WMA/AAC can have its own MX setting.
- Setting to MX sets MX mode of each music applications to “Off.”
- There is no MX mode for MW, LW radio.
- The function is inoperable when Defeat is set to “On.”

Equalizer Presets (Bass Max EQ)

[Bass Max EQ] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

10 typical equalizer settings are preset at the factory for a variety of musical source material.

Setting item: Bass Max EQ

Setting contents: FLAT (Initial setting) / POPS / ROCK / NEWS / JAZZ / ELECTRICAL DANCE / HIP HOP / EASY LISTENING / COUNTRY / CLASSICAL

- Only one type can be set to ON.
- When Bass Max EQ setting is edited, a Download Sound setting is disabled.
- When Bass Max EQ is set, the interlinked Parametric EQ settings are also changed. We recommend storing Parametric EQ settings in the Preset in advance.
- The Bass Max EQ setting can be configured when Defeat is “Off.”


Adjusting the Parametric Equalizer Curve (Parametric EQ)

[Parametric EQ] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

You can modify the Equalizer settings to create a response curve more appealing to your personal taste.


Setting item: Parametric EQ

1 Adjust the Parametric EQ to your preference.

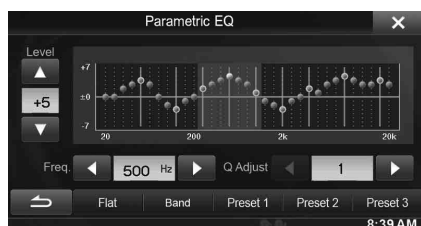

Adjusting the Band

 Touch [Band] to select the band to be adjusted.



- You can select a band directly by touching the screen.

Adjusting the Frequency

Touch [◀] or [▶] of “Freq.” to adjust the frequency of the selected band.

Adjustable frequency bands: 20 Hz to 20 kHz (in 1/3 octave steps)

- Band1: 20 Hz~100 Hz (63 Hz)
- Band2: 63 Hz~315 Hz (125 Hz)
- Band3: 125 Hz~500Hz (250 Hz)
- Band4: 250 Hz~1 kHz (500Hz)
- Band5: 500 Hz~2 kHz (1 kHz)
- Band6: 1 kHz~4 kHz (2 kHz)
- Band7: 2 kHz~7.2 kHz (4 kHz)
- Band8: 5.8 kHz~12 kHz (8 kHz)
- Band9: 9 kHz~20 kHz (16 kHz)

Adjusting the Level

Touch [▼] or [▲] of “Level” to adjust the level of selected band.

Setting contents: -7 to +7 (Initial setting: 0)

Setting the Bandwidth

Touch [◀] or [▶] of “Q Adjust” to select the bandwidth.

Setting contents: 1 (Initial setting) / 2 / 3

- 2 To adjust another band, repeat step 1, and adjust all bands.
- 3 To store the adjusted setting value, touch and hold [Preset1], [Preset2], or [Preset3] for at least 2 seconds.

- Settings exceeding the frequency of adjacent bands are not available.
- While adjusting the Parametric EQ, you should consider the frequency response of the connected speakers.
- When the parametric EQ is adjusted, the adjustment for Bass Max EQ becomes ineffective.
- When Bass Max EQ is set, the interlinked Parametric EQ settings are also changed. We recommend storing Parametric EQ settings in the Preset in advance.
- Touch [Flat] to initialise all values.
- The Parametric EQ setting can be configured when Defeat is “Off.”

Calling the Parametric EQ adjusted value

Calling the pre-set Parametric EQ adjusted value.

Touch [Preset1], [Preset2], or [Preset3] on the Parametric EQ screen.

The setting stored in the Preset will be recalled.

Adjusting the Time Correction (Time Correction)


[Time Correction] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

Before performing the following procedures, refer to “About Time Correction” (page 49).

Setting item: Time Correction

- 1 Touch **[ms]** or **[cm]** to select mode for making adjustments.

Each time you touch, the onscreen button and correction mode changes.

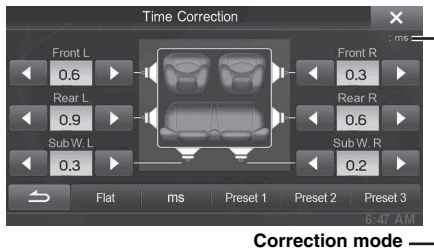

ms: Adjust time.

cm: Adjust listening position and distance from each speaker.

- 2 Touch **[◀]** or **[▶]** for each speaker to adjust the time or distance.

0.0msec to 9.9msec (0.1msec/step)

0.0cm to 336.6cm (3.4cm/step)

All speaker setting values are adjustable in the range of 20ms or 680cm.

- 3 To store the adjusted setting value, touch and hold **[Preset1]**, **[Preset2]**, or **[Preset3]** for at least 2 seconds.

- Touch **[Flat]** to set all values to 0.0.
- If the Rear Speaker setting is “Off,” the Rear Speaker setting cannot be edited (Refer to page 46).
- If the Subwoofer setting is “Off,” the Subwoofer setting cannot be edited (Refer to page 46).

Calling the Time Correction Value

Calling the pre-set time correction value.

Touch **[Preset1]**, **[Preset2]**, or **[Preset3]** on the time correction screen.

The setting stored in the Preset will be recalled.


Adjusting the Crossover Settings (X-OVER)

[X-OVER] is selected on the Audio setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

Before performing the following procedures, refer to “About the Crossover” (page 51).

Setting item: X-OVER

- 1 Touch **[Channel]** to select the channel.
Each time you touch, the channel switches.

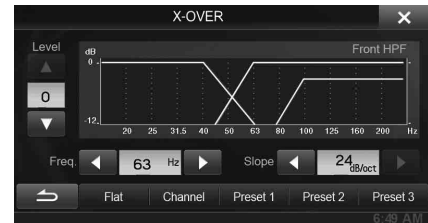

- The channel being adjusted is displayed in red.

→ Front HPF → Rear HPF → Subw. LPF

- 2 Adjust the crossover to your preference.

Selecting the Cut-Off Frequency

Touch **[◀]** or **[▶]** of “Freq.,” then select the cut-off frequency.

Setting contents: 20 / 25 / 31.5 / 40 / 50 / 63 / 80 (Initial setting) / 100 / 125 / 160 / 200 Hz

Adjusting the Slope

Touch **[◀]** or **[▶]** of “Slope,” then adjust the HPF or LPF slope.

Setting contents: 0 (Initial setting) / 6 / 12 / 18 / 24 dB/oct

Adjusting the Level

Touch **[▼]** or **[▲]** of “Level,” then adjust the HPF or LPF level.

Setting contents: -12 to 0 dB (Initial setting: 0)

- 3 Repeat steps 1 to 2 to make adjustment to the other channels.

- 4 To store the adjusted setting value, touch and hold **[Preset1]**, **[Preset2]**, or **[Preset3]** for at least 2 seconds.

- Touch **[Flat]** to initialise all values.
- If the Rear Speaker setting is “Off,” the Rear Speaker setting cannot be edited (Refer to page 46).
- If the Subwoofer setting is “Off,” the Subwoofer setting cannot be edited (Refer to page 46).
- While adjusting the X-OVER you should consider the frequency response of the connected speakers.

Calling the X-OVER adjusted value

Calling the pre-set X-OVER adjusted value.

Touch **[Preset1]**, **[Preset2]**, or **[Preset3]** on the X-OVER screen.

The setting stored in the Preset will be recalled.

Setting Defeat

[**Defeat**] is selected on the Sound setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

If Defeat is “On,” MX, Bass Max EQ, Download Sound Setting and Parametric EQ functions are turned OFF. This disables any settings made for these functions.

Setting item: Defeat

Setting content: Off (Initial setting) / On

Volume Setting

[**Volume**] is selected on the Sound setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

You can change the volume of the sound heard when a button is touched.

Setting item: Sound Feedback

Setting contents: 0 to 7 (Initial setting: 4)

Setting the Volume for Each Source

[**Application Volume Setup**] is selected on the Sound setup menu in step 3. Refer to “Sound Setup Operation” (page 45).

The volume level for each application can be adjusted.

Setting item: Radio / DVD / CD / Compress Media / iPod Music / iPod Video / AUX / AUX3 / BLUETOOTH Audio

Setting contents: -14 to +14 (Initial setting: 0)

- Settable source differ depending on the connected device and settings.


About Time Correction

The distance between the listener and the speakers in a car vary widely due to the complex speaker placement. This difference in the distances from the speakers to the listener creates a shift in the sounds image and frequency characteristics. This is caused by the time delay between the sound reaching the listener's right versus the left ear.

To correct this, this unit is able to delay the audio signal to the speakers closest to the listener. This effectively creates a perception of increased distance for those speakers. The listener can be placed at an equal distance between the left and right speakers for optimum staging. The adjustment will be made for each speaker in 3.4cm steps.

Example 1. Listening Position: Front Left Seat

Adjust the time correction level of the front left speaker to a high value and the rear right to zero or a low value.

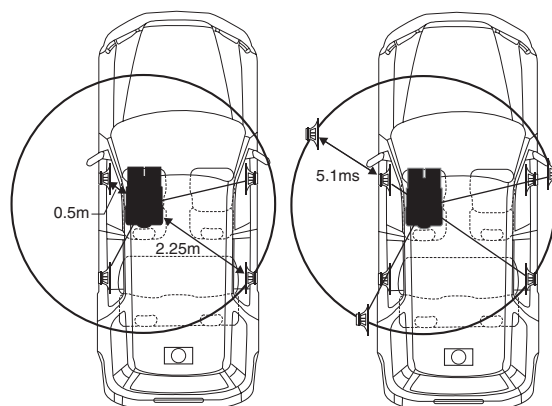

The sound is not balanced because the distance between the listening position and the various speakers is different. The difference in distance between the front left speaker and the rear right speaker is 1.75 m (68-7/8"). Here we calculate the time correction value for the front left speaker in the diagram on the above.

Conditions:

Farthest Speaker – listening position : 2.25 m (88-9/16")

Front left speaker – listening position : 0.5 m (19-11/16")

Calculation: $L = 2.25 \text{ m} - 0.5 \text{ m} = 1.75 \text{ m (68-7/8")}$

Time correction = $1.75 \div 343^{*1} \times 1000 = 5.1 \text{ (ms)}$

^{*1} Speed of sound: 343 m/s (765 mph) at 20°C

In other words, giving the front left speaker a time correction value of 5.1 ms makes it seem as if its distance from the listener is the same as the distance to the farthest speaker.

Time correction eliminates the differences in the time required for the sound to reach the listening position.

The time of the front left speaker is corrected by 5.1 ms so that its sound reaches the listening position at the same time as the sound of other speakers.

Example 2. Listening Position: All Seats

Adjust the time correction level of each speaker to almost the same level.

- 1 Sit in the listening position (driver's seat, etc.) and measure the distance (in meters) between your head and the various speakers.**
- 2 Calculate the difference between the distance correction value to the farthest speaker and the other speakers.**

$L = (\text{distance to farthest speaker}) - (\text{distance to other speakers})$

These values are the time correction values for the different speakers. Setting these values to make each sound reach the listening position at the same time as the sound of other speakers.

Time Correction Value List

Time Difference (msec)	Distance (cm)	Distance (inch)	Time Difference (msec)	Distance (cm)	Distance (inch)
0.0	0.0	0.0	5.1	173.4	68.3
0.1	3.4	1.3	5.2	176.8	69.7
0.2	6.8	2.7	5.3	180.2	71.0
0.3	10.2	4.0	5.4	183.6	72.4
0.4	13.6	5.4	5.5	187.0	73.7
0.5	17.0	6.7	5.6	190.4	75.0
0.6	20.4	8.0	5.7	193.8	76.4
0.7	23.8	9.4	5.8	197.2	77.7
0.8	27.2	10.7	5.9	200.6	79.1
0.9	30.6	12.1	6.0	204.0	80.4
1.0	34.0	13.4	6.1	207.4	81.7
1.1	37.4	14.7	6.2	210.8	83.1
1.2	40.8	16.1	6.3	214.2	84.4
1.3	44.2	17.4	6.4	217.6	85.8
1.4	47.6	18.8	6.5	221.0	87.1
1.5	51.0	20.1	6.6	224.4	88.4
1.6	54.4	21.4	6.7	227.8	89.8
1.7	57.8	22.8	6.8	231.2	91.1
1.8	61.2	24.1	6.9	234.6	92.5
1.9	64.6	25.5	7.0	238.0	93.8
2.0	68.0	26.8	7.1	241.4	95.1
2.1	71.4	28.1	7.2	244.8	96.5
2.2	74.8	29.5	7.3	248.2	97.8
2.3	78.2	30.8	7.4	251.6	99.2
2.4	81.6	32.2	7.5	255.0	100.5
2.5	85.0	33.5	7.6	258.4	101.8
2.6	88.4	34.8	7.7	261.8	103.2
2.7	91.8	36.2	7.8	265.2	104.5
2.8	95.2	37.5	7.9	268.6	105.9
2.9	98.6	38.9	8.0	272.0	107.2
3.0	102.0	40.2	8.1	275.4	108.5
3.1	105.4	41.5	8.2	278.8	109.9
3.2	108.8	42.9	8.3	282.2	111.2
3.3	112.2	44.2	8.4	285.6	112.6
3.4	115.6	45.6	8.5	289.0	113.9
3.5	119.0	46.9	8.6	292.4	115.2
3.6	122.4	48.2	8.7	295.8	116.6
3.7	125.8	49.6	8.8	299.2	117.9
3.8	129.2	50.9	8.9	302.6	119.3
3.9	132.6	52.3	9.0	306.0	120.6
4.0	136.0	53.6	9.1	309.4	121.9

4.1	139.4	54.9	9.2	312.8	123.3
4.2	142.8	56.3	9.3	316.2	124.6
4.3	146.2	57.6	9.4	319.6	126.0
4.4	149.6	59.0	9.5	323.0	127.3
4.5	153.0	60.3	9.6	326.4	128.6
4.6	156.4	61.6	9.7	329.8	130.0
4.7	159.8	63.0	9.8	333.2	131.3
4.8	163.2	64.3	9.9	336.6	132.7
4.9	166.6	65.7			
5.0	170.0	67.0			

About the Crossover

Crossover (X-OVER):


This unit is equipped with an active crossover. The crossover limits the frequencies delivered to the outputs. Each channel is controlled independently. Thus, each speaker pair can be driven by the frequencies for which they have been optimally designed.

The crossover adjusts the HPF (high pass filter) or LPF (low pass filter) of each band, and also the slope (how fast the filter rolls off the highs or lows).


Adjustments should be made according to the reproduction characteristics of the speakers. Depending on the speakers, a passive network may not be necessary. If you are unsure about this point, please consult your authorised Alpine dealer.

- Adjustment should be made according to the recommended crossover frequency of the connected speakers. Determine the recommended crossover frequency of the speakers. Adjusting to a frequency range outside that recommended may cause damage to the speakers. For the recommended crossover frequencies of Alpine speakers, refer to the respective Owner's Manual. We are not responsible for damage or malfunction of speakers caused by using the crossover outside the recommended value.

	Cut-off frequency (1/3 octave steps)		Slope		Level
	HPF	LPF	HPF	LPF	
Low range speaker	----	20 Hz - 200 Hz	----	FLAT, -6, -12, -18, -24 dB/oct.	0 to -12 dB
Rear high range speaker	20 Hz - 200 Hz	----	FLAT, -6, -12, -18, -24 dB/oct.	----	0 to -12 dB
Front high range speaker	20 Hz - 200 Hz	----	FLAT, -6, -12, -18, -24 dB/oct.	----	0 to -12 dB

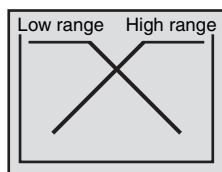

(Different from actual display)

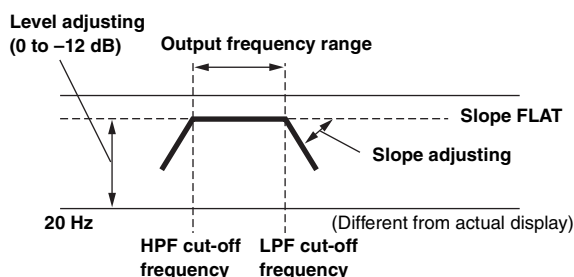

- HPF (high pass filter): Cuts the lower frequencies and allows the higher frequencies to pass.
- LPF (low pass filter): Cuts the higher frequencies and allows the lower frequencies to pass.
- Slope: The level change (in dB) for a frequency change of one octave.
- The higher the slope value, the steeper the slope becomes.
- Adjust the slope to FLAT to bypass the HP or LP filters.
- Do not use a tweeter without the HPF on or set to a low frequency, as it may cause damage to the speaker due to the low frequency content.
- You cannot adjust the crossover frequency higher than the HPF or lower than the LPF.

Source Setup

Source Setup Operation

The parking brake must be engaged to access the Source mode screen. Attempting to access this screen while driving will display the warning-Unable to operate while driving.

The following steps 1 to 5 are common operations to each “Setting item” of Audio Setup. Refer to each section for details.


1 Touch [Setup] icon of Top banner.

The Setup main screen is displayed.

2 Touch [(Source)].

The Source Setup screen appears.

3 Select the desired item.

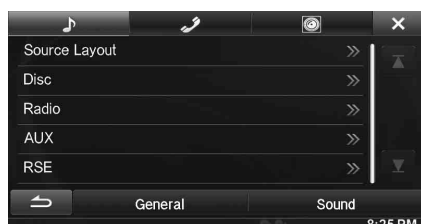

Setting items: Source Layout/Disc/Radio/AUX/RSE

4 Touch [◀] or [▶] etc., to change its setting.

- When the pop-up window for setup is displayed, touch [X] to close the window after setting.

5 Touch [↶] to return to the previous screen.

- Immediately after changing the Source Setup (while the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.

USER1/USER2

Source Layout Setting

[Source Layout] is selected on the Source setup menu in step 3. Refer to “Source Setup Operation” (page 52). You can set whether to switch sources by tracing the middle of the Audio/Visual Playback screen from right to left or from left to right. Refer to “Switching Sources” (page 28).

Setting item: Slide Source Change

Setting contents: On (Initial setting)/ Off

- On: Source is changed by tracing
- Off: Source is not changed by tracing

Disc Setting

Touch [Disc] on the Source setup menu in step 3. Refer to “Source Setup Operation” (page 52).

- You can perform DVD setup in DVD video mode.
- Touch [Stop] before performing Disc setup.

Changing the language setting

The audio language, subtitle language and menu language can be set according to your preferences.

Once set, this becomes the default language. This function is convenient if you always want to listen in English, for example. (The language setting is not effective on some discs. In this case, the default language is set at the factory.)

- When the settings are changed, old settings are overwritten. Make a note of the current settings before making changes.
- To temporarily change the language of the current disc, either do so from the DVD menu or by using the operation described in the section “Switching the Audio Tracks” (page 40).
- If the disc does not include the selected language, the disc’s default language is set.

To play in a language other than those displayed

- Touch [Menu Language Code], [Audio Language Code] or [SUBT Language Code].
The numeric keypad screen is displayed.
- Touch the 4-digit numeral of the language number.
To reference language numbers, refer to “List of Language Codes” (page 83).
- Touch [OK] to memorise the number.

- The setting content changes to “Other” if the desired language code is input.

Setting of the Menu Language

Set the language used for the menus (title menu, etc.).

Setting item: Menu Language

Setting contents: Auto (Initial setting) / EN / JP / DE / ES / FR / IT / SE / RU / CN

- When “Auto” is selected, the primary menu language among the recorded ones is played.
- As for the language abbreviation, refer to “List of Language Codes” (page 83).

Setting of the Audio Language

Set the audio language produced from the speakers.

Setting item: Audio Language

Setting contents: Auto (Initial setting) / EN / JP / DE / ES / FR / IT / SE / RU / CN

- When “Auto” is selected, the primary audio language among the recorded ones is played.
- As for the language abbreviation, refer to “List of Language Codes” (page 83).

Setting of the Subtitle Language

Set the language of the subtitles displayed on the screen.

Setting item: *SUBT. Language*

Setting contents: *Auto (Initial setting) / EN / JP / DE / ES / FR / IT / SE / RU / CN*

- When "Auto" is selected, the primary subtitle language among the recorded ones is applied.
- As for the language abbreviation, refer to "List of Language Codes" (page 83).

Changing the Country Code Setting

Set the country code of which you want to set the rating level (Parental lock).

Setting item: *Country Code*

Setting contents: *Auto / Other*

- Auto:** The primary country code among those recorded is played.
 - Other:** The setting content changes to "Other" if the desired country code is input.
- If settings are changed, the old settings are overwritten. Make a note of the current settings before making changes. The settings will be cleared if the vehicle's battery is disconnected.
 - 1 Touch [Country Code Input].
 - 2 Touch [←] or [Delete All].
Delete the displayed country number.
 - 3 Touch the 4-digit country code.
As for the country number, refer to "List of Country Codes" (page 84).
 - 4 Touch [OK] to memorise the code.

Setting the Rating Level (Parental Lock)

This function can help limit the viewing of movies to children of appropriate age levels only.

Setting item: *Parental*

- If settings are changed, the old settings are overwritten. Make a note of the current settings before making changes. The memory will be cleared if the vehicle's battery is disconnected.
- On unrated discs, playback will not be restricted even if the rating level is set.
- If you want to play back a disc with parental lock, and its use is currently restricted, change the rating level and the country number in order to play back the disc.
- Once set, this rating level remains in memory until changed. To enable playback of discs of higher rating levels, or to cancel the parental lock, the setting must be changed.
- Not all discs provide a parental lock. If you are unsure about a disc, play it first to confirm. Do not leave discs accessible to young children for whom you deem them inappropriate.
 - 1 Touch [Parental].
The numeric keypad screen is displayed.
 - 2 Touch the numeric keypad to input a 4-digit password.
The initial number is 1111. Input number are displayed as "*".
 - 3 Touch [OK] to memorise the number.
The Parental screen appears.

Set the rating level of PARENTAL

- 4 Touch [Parental].
- 5 Touch "◀" on "▶" to turn "On".
Select "Off" to cancel parental lock or if you do not want to set a rating level.
- 6 Touch [X] to return to the previous screen.
- 7 Touch [Parental Level]
- 8 Touch [◀] or [▶] to select the rating level (1 to 8).
The smaller the number, the higher the restriction.
- 9 Touch [X] to return to the previous screen.

Changing the password

- 1 Touch [Password Change].
The numeric keypad screen is displayed.
- 2 Touch the input screen to enter a new 4-digit password.
 - Keep a note of the number somewhere safe in case you should forget it.
- 3 Touch [OK] to memorise the number.
- 4 Touch [↶] to return to the previous screen.

Changing the rating level temporarily

Some discs may request that you change the rating level set in the default settings during playback. In this case, the message "Do you wish to change Parental level? [OK] [Cancel]."

If this screen appears, change the level as follows:

- **To change parental level and play, touch [OK].**
When [OK] is touched, the numeric keypad input screen is displayed. Input the 4-digit password you set in "Setting the Rating Level (Parental Lock)," then touch [OK].
- **To play without changing the parental level, touch [Cancel].**
(If [Cancel] is touched, playback will be at the parental level set in "Setting the Rating Level (Parental Lock).")

Setting the TV Screen Mode

Use the procedure described below to modify the output screen according to the type of TV monitor (rear monitor) being used. If the rear monitor is not connected, the screen setting is 16:9.

Setting item: *TV Screen*

Setting contents: *4:3LB / 4:3PS / 16:9 (Initial setting)*

- For some discs, the picture may not be set to the selected screen size. (For details, refer to the explanation on the disc's jacket.)

4:3 LETTER BOX:

Select this when connected to a conventional 4:3 size (normal TV aspect ratio) monitor. There may be black stripes visible at the top and bottom of the screen (when playing a 16:9 size movie). The width of these stripes will depend upon the original aspect ratio of the theatrical release of the movie.



4:3 PAN-SCAN:

Select this when connected to a conventional 4:3 size monitor. The picture will fill the entire TV screen. However, due to the mismatch in aspect ratio, parts of the movie at the extreme left and right sides will not be visible (when playing a 16:9 size movie).



16:9 WIDE:

Select this when connected to a wide screen TV. This is the factory setting.



Radio Setting

[Radio] is selected on the Source setup menu in step 3. Refer to "Source Setup Operation" (page 52).

PI SEEK Setting

Setting item: PI Seek

Setting contents: Auto / Off (Initial setting)

Receiving RDS Regional (Local) Stations

When Off is selected, the unit automatically keeps receiving the local RDS station.

Setting item: RDS Regional

Setting contents: On (Initial setting) / Off

Switching the Display Language of PTY (Programme Type)

Setting item: PTY Language

Setting contents: ENG (Initial setting) / GER / FRE / SPA / POR / ITA / DUT / DAN / FIN / NOR / SWE / RUS

ENG:	English
GER:	German
FRE:	French
SPA:	Spanish
POR:	Portuguese
ITA:	Italian
DUT:	Dutch
DAN:	Danish
FIN:	Finnish
NOR:	Norwegian
SWE:	Swedish
RUS:	Russian

Setting PTY31 (Emergency Broadcast) Reception

PTY31 (Emergency Broadcast) reception can be set to On/Off.

Setting item: PTY31

Setting contents: On (Initial setting) / Off

- The unit automatically gives priority to an emergency broadcast whenever it begins, and interrupts the programme you are currently listening to when PTY31 is set to "On."
- The unit will show "Alarm" in the display during PTY31 reception.

Setting the TUNER (FM) Tone Quality (Tuner Condition)

This unit can set your preferred tone quality for FM radio source.

Setting item: FM Tuner Setting

Setting contents: Normal (Initial setting) / HiFi / Stable

Normal:	Standard setting
HiFi:	High-quality setting
Stable:	Control noise

- Noise may be more noticeable when HiFi is set, depending on the reception status. In this case, the Normal setting is recommended.

AUX Setting

[AUX] is selected on the Source setup menu in step 3. Refer to "Source Setup Operation" (page 52).

Setting the AUX Mode

Setting item: AUX In

Setting contents: Off / On (Initial setting)

- Off: AUX source is not displayed.
- On: AUX source is displayed.

Setting the Primary AUX Name (AUX Setup)

When AUX In is set to "ON", this setting is available.

Setting item: Primary Name

Setting contents: AUX1(Initial setting) / DVD / GAME / EXT.DVD / DVD-CHG. / DVB-T / TV / USB Player

- When a DVB-T tuner or USB Player (sold separately) is connected, you can use it to connect one more External Input device. Setting the Secondary name can change the mode name display of this device.

Setting the Secondary AUX Name

Secondary name can be set only when Primary name is set to "DVB-T" or "USB Player."

Setting item: Secondary Name

Setting contents: Off (Initial setting) / AUX2 / DVD / GAME / EXT.DVD / DVD-CHG. / DVB-T*¹ / TV / USB Player*²

- The selected source name is displayed instead of AUX mode name.

*¹ If the Primary Name is DVB-T, DVB-T is not displayed as a Secondary Name option.

*² If the Primary Name is USB Player, USB Player is not displayed as a Secondary Name option.

Setting Direct Touch Operation

If DVB-T is set as the Primary Name or Secondary Name, this setting is available.

Setting item: Direct Touch

Setting contents: On (Initial setting) / Off

- On: Direct Touch operation is available on the DVB-T screen.
- Off: Direct Touch operation is not available on the DVB-T screen.

Switching the Visual Input Signal System

After setting to "On" in "Setting the AUX Mode," this setting can be carried out. The video input type can be changed.

Setting item: Signal

Setting contents: Auto (Initial setting) / NTSC / PAL

- Auto: The video input signal type (NTSC or PAL) will be automatically selected.
- NTSC/PAL: Choose the video input signal type manually.

Setting the AUX3

Connection with external input devices is available through the iPod VIDEO connector. An optional adapter cable is required (standard RCA to 3.5φ mini-phono plug or 3.5φ to 3.5φ mini phono plug). You can also play back video connecting with an optional AV cable (4-pole mini AV plug to 3-RCA).

Setting item: AUX3 In Sel.


Setting contents: iPod Video (Initial setting) / AUX3

iPod Video: Set when connected to an iPod or iPhone.

AUX3: Set when connected to an external input device.

■ Usable 4-pole mini AV plug

The unit accepts the following 4-pole mini AV plug pin-out:

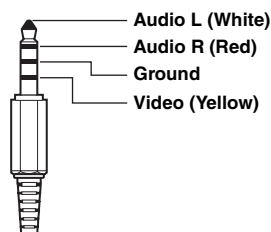

- Please check pin-out carefully before use of this product. Depending on the cable, there may be no picture and/or sound.

Setting the AUX3 Sel. (Switching the Visual Input Signal System)

After setting to "AUX3" in "Setting the AUX3 In Sel.," this setting can be carried out. The video input type can be changed.

Setting item: AUX3 Signal

Setting contents: Auto (Initial setting) / NTSC / PAL

- Auto: The video input signal type (NTSC or PAL) will be automatically selected.
- NTSC/PAL: Choose the video input signal type manually.

RSE Setting

[RSE] is selected on the Source setup menu in step 3. Refer to "Source Setup Operation" (page 52).

Setting the Rear Seat Entertainment System

Video and audio can be output to the rear monitor.

Setting item: RSE

Setting contents: Off (Initial setting) / On

- If you selected the "On" setting, set the "Remote Sensor Setting" (page 42).

BLUETOOTH Setup

BLUETOOTH Setup Operation

The parking brake must be engaged to access the Setup screen. Attempting to access this screen while driving will display the warning-Unable to operate while driving.

The following steps 1 to 5 are common operations to each “Setting item” of BLUETOOTH Setup. Refer to each section for details.

1 Touch [Setup] icon of Top banner.
The Setup main screen is displayed.


2 Touch  (BLUETOOTH).
The BLUETOOTH Setup screen appears.

3 Select the desired item.



Setting items: *BLUETOOTH / BLUETOOTH Info. / Set BLUETOOTH Device / AutoConnect / Passcode Change / Default Phonebook Encoding / Auto Answer / Auto Answer Time / Phone Speaker / Receiver Volume / Transmitter Volume / Calling Volume / Delete Call History*

4 Touch [◀] or [▶] etc., to change its setting.
• When the pop-up window for setup is displayed, touch [X] to close the window after setting.

5 Touch  to return to the previous screen.
• Immediately after changing the BLUETOOTH Setup (while the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.
• For details on how to scroll through the list, refer to “Selecting an Item in a List” (page 29).

BLUETOOTH Setting

[BLUETOOTH] is selected on the BLUETOOTH setup menu in step 3. Refer to “BLUETOOTH Setup Operation” (page 56).

Setting item: *BLUETOOTH*

Setting contents: *Off / On (Initial setting)*

- Off: BLUETOOTH function is not used.
- On: Select when you would like to pair your BLUETOOTH compatible phone with this unit.

• If the Bluetooth setting is “Off,” you cannot move to the BLUETOOTH setting screen.

Displaying BLUETOOTH Information

[BLUETOOTH Info] is selected on the BLUETOOTH setup menu in step 3.

Refer to “BLUETOOTH Setup Operation” (page 56).

You can display the BLUETOOTH device name and device address of this unit.

Setting item: *BLUETOOTH Info*

Registering the BLUETOOTH Device

[Set BLUETOOTH Device] is selected on the BLUETOOTH setup menu in step 3.

Refer to “BLUETOOTH Setup Operation” (page 56).

The BLUETOOTH device is used when a connectable BLUETOOTH compatible device is searched and connected from this unit, or a new BLUETOOTH compatible device is registered.

1 Touch [Set BLUETOOTH Device].

2 Touch [Search] of “No Device.”
The Device list displays up to 10 items.

3 Touch [Audio], [Hands-free] or [Both] of the device you want to connect from the list.

- Audio: Sets for use as an Audio device
- Hands-free: Sets for use as a Hands Free Device.
- Both: Sets for use as both an Audio device and Hands Free Device.

• You can connect (pair) up to 5 BLUETOOTH compatible mobile phones.

4 When the device registration is complete, a message appears and the device returns to normal mode.

- The BLUETOOTH registration process differs depending on the device version and SSP (Simple Secure Pairing). If a 4 or 6 character Passcode appears on this device, enter the Passcode using the BLUETOOTH compatible device.
If a 6 character Passkey appears on this device, make sure the same passkey is displayed on the BLUETOOTH compatible device and touch “Yes.”
- If all the 5 devices have been registered, you cannot register the 6th device. To register another device, you need to delete one of the devices from position 1 to 5 first.

Setting the BLUETOOTH Device

Select one of 5 paired BLUETOOTH compatible devices that you previously registered.

1 Touch [Set BLUETOOTH Device].

2 Touch [Audio] or [HFT] of the device you want to connect from the Paired Device list.

Deleting a BLUETOOTH Device from the list

You can delete the information of a previously connected BLUETOOTH compatible device.

- 1 Touch **[Set BLUETOOTH Device]**.
- 2 Touch **[Delete]** of the BLUETOOTH compatible device to delete from the Paired Device list.
- 3 Touch **[OK]**.

- Touching **[Cancel]** will cancel the setting.

Automatic Connection setting

[Auto Connect] is selected on the BLUETOOTH setup menu in step 3. Refer to “BLUETOOTH Setup Operation” (page 56).

If the Automatic Connecting setting is “On,” automatic connection is performed for the audio device registered in the Paired Device list.

Setting item: Auto Connect

Setting contents: Off / On (Initial setting)

Setting the Passcode

[Pass code Change] is selected on the BLUETOOTH setup menu in step 3.

Refer to “BLUETOOTH Setup Operation” (page 56).

You can set the code for connecting with a BLUETOOTH compatible device.

Setting item: Passcode Change

- 1 Touch **[Passcode Change]**.
A numeric keypad screen is displayed.
- 2 Enter a 4-digit passcode, and then touch **[Enter]**.

- The initial number is 0000.
- For details on how to input the numeric keypad, refer to “Numeric Keypad Input Operations” (page 37).

Changing the Character Code of the Phone Book

[Default Phonebook Encoding] is selected on the BLUETOOTH setup menu in step 3.

Refer to “BLUETOOTH Setup Operation” (page 56).

You can select the character code that is used when transferring the phone book or history from a mobile phone. If unreadable characters appear in the transferred data, select the correct character code.

Setting item: Default Phonebook Encoding

Setting contents: EU1 / EU2 (Initial setting) / Russian / Chinese / Thai / Arabic / Unicode UTF-8 / Unicode UTF-16LE / Unicode UTF-16BE

- 1 Touch **[Default Phonebook Encoding]**.
The Character code list screen is displayed.

- 2 Touch the desired character code.

EU1:	ISO 8859-1
EU2:	ISO 8859-15
Russian:	ISO 8859-5
Chinese:	GB18030
Thai:	CP874
Arabic:	CP1256
Unicode UTF-8	
Unicode UTF-16LE	
Unicode UTF-16BE	

- 3 Touch **[OK]**.

Setting Received Calls Automatically

[Auto Answer] is selected on the BLUETOOTH setup menu in step 3. Refer to “BLUETOOTH Setup Operation” (page 56).

When a call is received, you can set whether to answer it automatically or not.

Setting item: Auto Answer

Setting contents: Off (Initial setting) / On

- | | |
|------|--|
| On: | When a call is received, it will be answered automatically |
| Off: | When a call is received, it will not be answered automatically |

Setting the time for automatic reception of a call

[**Auto Answer Time**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
When “Auto Answer” is set to “On,” you can set how many seconds to let elapse before letting the Auto Answer pick up the call.

Setting item: Auto Answer Time

Setting contents: 5sec / 10sec (Initial setting) / 15sec / 20sec

1 Touch [Auto Answer Time].
The Auto Answer setting screen is displayed.

2 Touch [◀] or [▶].

Selecting the Output Speaker

[**Phone Speaker**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
You can select which speaker in the car will output the audio from the phone.

Setting item: Phone Speaker

Setting contents: All(Initial setting) / Front L / Front R / Front LR

- | | |
|-----------|---|
| All: | The sound is output from all speakers in car. |
| Front L: | The sound is only output from the front left speaker. |
| Front R: | The sound is only output from the front right speaker. |
| Front LR: | The sound is output from the front left and front right speakers. |

- The setting cannot be adjusted during a phone call. Adjust the setting before placing a call.

Adjusting the Receive Volume

[**Receiver Volume**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
You can adjust the volume of the incoming call.

Setting item: Receiver Volume

Setting contents: 1 to 11 (Initial setting: 5)

Adjusting the Transmit Volume

[**Transmitter Volume**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
You can adjust the transmit volume, during the call.

Setting item: Transmitter Volume

Setting contents: 1 to 11 (Initial setting: 5)

Adjusting the Calling Volume

[**Calling Volume**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
You can adjust the receive volume, during the call.

Setting item: Calling Volume

Setting contents: 1 to 11 (Initial setting: 5)

Deleting All the Histories

[**Delete Call History**] is selected on the BLUETOOTH setup menu in step 3.
Refer to “BLUETOOTH Setup Operation” (page 56).
Dialled/Received/Missed Incoming histories are all deleted.

Setting item: Delete Call History

- 1 Touch [Delete Call History]**
The confirmation screen is displayed.
- When there is no history, this option is not available.
- 2 Touch [OK].**
All the histories are deleted.

Camera Setup

Camera Setup Operation

With an optional camera connected, its video is output to the monitor.
When the camera is connected, set this item.

The parking brake must be engaged to access the Setup screen.
Attempting to access this screen while driving will display the warning-Unable to operate while driving.

The following steps 1 to 5 are common operations to each “Setting item” of Camera Setup. Refer to each section for details.

1 Touch [Setup] icon of Top banner.
The Setup main screen is displayed.

2 Touch [CAMERA].
The Camera Setup screen appears.

3 Select the desired item.



Setting items: Direct Camera/AUX Camera*/Camera Interrupt (Power OFF Mode)

4 Touch [◀] or [▶] etc., to change its setting.
• When the pop-up window for setup is displayed, touch [X] to close the window after setting.

5 Touch [↩] to return to the previous screen.

- Immediately after changing the Camera Setup (while the system is writing data automatically) do not turn the ignition key to OFF. Otherwise, the settings may not be changed.
- For details on how to scroll through the list, refer to “Selecting an Item in a List” (page 29).

Direct Camera Setting

[Direct Camera] is selected on the Camera setup menu in step 3.
Refer to “Camera Setup Operation” (page 59).

Setting the Camera Input

Setting item: Camera Select/ Guide Adjustment*¹
Setting contents: Off (Initial setting) / Front / Rear*²

Rear: Rear camera
Front: Front camera

^{*1} If “Camera Select” is set to “Off”, this option is not available.

^{*2} If “Camera Select” in AUX Camera Setting is set to “Rear,” “Rear” cannot be set in Direct Camera Setting.

Switching video patterns for Rear camera & Front camera

The video pattern can be changed when connected to HCE-C200R/ HCE-C200F/HCE-C210RD/HCE-C212F.

Setting item: Guide Adjustment

1 Touch [Guide Adjustment].

The camera guide adjustment screen is displayed.

2 Touch [Back], [Panorama], [Corner], or [Top].

The view will change to the selected view.

- [Back] will not appear for the Front camera.

3 Touch [↩] to return to the previous screen.

- For an explanation of video patterns, see the camera Owner’s Manual.

Adjusting the Rear/Front Camera Guide

If you select “Rear” or “Front,” you can adjust the camera guide position.

Setting item: Guide Adjustment

1 Touch [Guide Adjustment].

The camera guide adjustment screen is displayed.

- If the video pattern is set to “Corner,” the camera guide will not be displayed.


2 Touch [Adjust].

- If [Adjust] does not appear, proceed to step 3.

3 Touch the guide you intend to adjust.

Guide line can also be selected by touching [▲] [▼].

■ Display example for rear camera mode

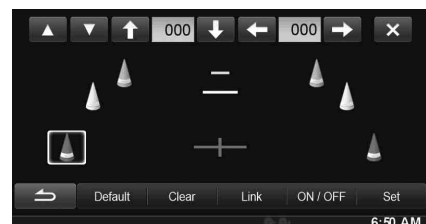

■ Display example for front camera mode



4 Touch [↑], [↓], [←] or [→] to adjust the position of the guide.


- Touching [Clear] clears adjustments and returns to the setting before guide line alteration.

5 After the adjustment is completed, touch [Set].

■ Adjusting guides simultaneously (for Rear camera only)

1 Touch [Link].

The 3 vertical guides of the currently-selected guide link together, allowing them to be adjusted simultaneously.

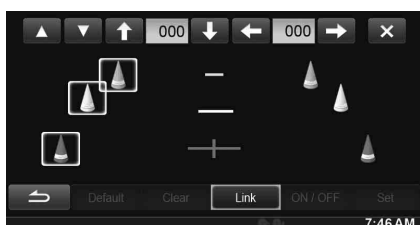

■ Turning guide display ON/OFF

Turning the selected guide off.

1 Touch [ON/OFF].

The currently selected guide will turn off.

2 To turn the guide on, touch [ON/OFF] again.

- Guides that are turned off are still adjustable.

■ Returning guides to default.

1 Touch [Default].

A message window will appear.

2 Touch [OK].

Adjusted values will return to default settings.

AUX Camera Setting

[AUX Camera] is selected on the Camera setup menu in step 3. Refer to "Camera Setup Operation" (page 59).

Setting the Camera Input

Setting item: Camera Select / Camera Signal^{*1} / Guide Adjustment^{*1}

Setting contents: Off (Initial setting) / Rear^{*2} / OTHER

Rear: Rear camera

OTHER: Side camera, Room camera, etc.

^{*1} If "Camera Select" is set to "Off", this option is not available.

^{*2} If "Camera Select" in Direct Camera Setting is set to "Rear," "Rear" cannot be set in AUX Camera Setting.

Setting the AUX Camera Signal Input

When the AUX camera is connected, the video input signal type can be chosen.

Further setting item: Camera Signal

Setting contents: NTSC (Initial setting) / PAL

Adjusting the Rear Camera Guide

If you select "Rear" you can adjust the camera guide position.

Setting item: Guide Adjustment

1 Touch [Guide Adjustment].


The camera guide adjustment screen is displayed.

2 Touch [Adjust].

- If [Adjust] does not appear, proceed to step 3.

3 Touch the guide you intend to adjust.

Guide line can also be selected by touching [▲] [▼].

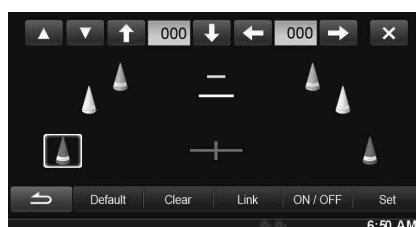

4 Touch [↑], [↓], [←] or [→] to adjust the position of the guide.


- Touching [Clear] clears adjustments and returns to the setting before guide line alteration.

5 After the adjustment is completed, touch [Set].

■ Adjusting guides simultaneously (for Rear camera only)

1 Touch **[Link]**.

The 3 vertical guides of the currently-selected guide link together, allowing them to be adjusted simultaneously.

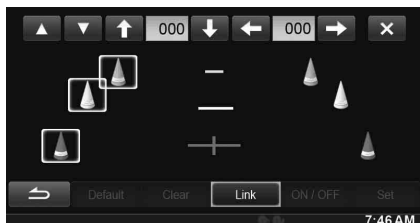

■ Turning guide display ON/OFF

Turning the selected guide off.

1 Touch **[ON/OFF]**.

The currently selected guide will turn off.

2 To turn the guide on, touch **[ON/OFF]** again.

- *Guides that are turned off are still adjustable.*

Returning guides to default.

1 Touch **[Default]**.

A message window will appear.

2 Touch **[OK]**.

Adjusted values will return to default settings.

Camera Interrupt Setting (Power OFF Mode)

[**Camera Interrupt**] is selected on the Camera setup menu in step 3. Refer to “Camera Setup Operation” (page 59).

You can set whether to display the rear camera image when the gear lever is moved to the reverse (R) position while the unit is turned off.

Setting item: Camera Interrupt (Power OFF Mode)

Setting contents: On (Initial setting) /Off

- On: The rear camera image is displayed
- Off: The rear camera image is not displayed

BLUETOOTH Operation

Setup Before Using

About BLUETOOTH

BLUETOOTH is a wireless technology allowing communication between a mobile device or personal computer over short distances. This enables a hands-free call or data transmission between BLUETOOTH compatible devices. BLUETOOTH transmission is available in the unlicensed 2.4 GHz spectrum if the distance between devices is within 10 meters. For details, refer to the BLUETOOTH website (<http://www.bluetooth.com/>).

- Depending on the BLUETOOTH version, a BLUETOOTH compatible device may not be able to communicate with this unit.
- Proper function of this unit with all BLUETOOTH compatible devices is not guaranteed. For handling of the BLUETOOTH compatible device, consult your ALPINE dealer or ALPINE website.
- Depending on the surroundings, BLUETOOTH wireless connection may be unstable.
- When you place a call, or perform setup operations, be sure to stop your car in a safe place.
- Depending on the connected BLUETOOTH compatible device(s), the function may differ. Also refer to the Owner's Manual of the connected device(s).

About the Hands-Free Phone

Hands-free calls are possible when using a HFP (Hands-Free Profile) compatible mobile phone with this unit.

- Avoid performing a hands-free call in heavy traffic or on narrow or winding streets.
- Close the windows while calling to reduce background noise.
- If both calling parties are using hands-free devices, or the call is made in a noisy location, difficulty hearing the other person's voice is normal.
- Depending on telephone line conditions or certain mobile devices used, voices may sound unnatural.
- When using a microphone, speak as directly as you can into the microphone to obtain the best sound quality.
- Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality.

All features, functionality, and other product specifications, as well as the information contained in the Owner's Manual are based upon the latest available information and are believed to be accurate at the time of printing.

Alpine reserves the right to change or modify any information or specifications without notice or obligation.

Before Using BLUETOOTH


Before using the hands-free phone/audio function, the following settings need to be made.

- 1 Set "BLUETOOTH" to "On" (see page 56).
- 2 Register a BLUETOOTH device in this unit (see page 56).

- Refer to "BLUETOOTH Setting" (page 56).
- You can search for this unit using a BLUETOOTH compatible device, and then connect that BLUETOOTH compatible device to this unit. The device name of this unit is "ALPINE NAVI" and the initial number of the passcode is "0000." Also refer to the Owner's Manual of the connected device(s).

Hands-Free Phone Control

■ Display example for Phone menu screen

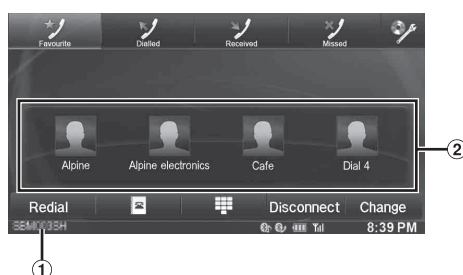

- ① BLUETOOTH devices Name
- ② Favorites Display: Short Cut icon
Dialed/Received/Missed Display: Each histories icon

Connecting a BLUETOOTH Device

Registering a BLUETOOTH device in INE-W920R/INE-W928R enables automatic connection.

If it does not connect automatically, run through the connection procedure again.

- 1 Press the (PHONE) button.
The Phone menu screen is displayed.
- 2 Touch [Connect].
BLUETOOTH connection will start.


Disconnecting the BLUETOOTH Connection

Touch [Disconnect].

The BLUETOOTH connection is disconnected.



Changing the connecting BLUETOOTH Device

If multiple BLUETOOTH devices are registered in this device, you can change the connection among the registered devices.

- 1 **Press the  (PHONE) button.**
The Phone menu screen is displayed.
 - 2 **Touch [Change].**
The Set Bluetooth Device screen is displayed.
 - 3 **Touch [Audio] or [HFT] of the selected device.**
The connection will transfer to the selected device.
- You can check registered shortcut dialing by touching the **BLUETOOTH Device List**.
For how to assign one-touch dialling, refer to “Assigning as a Short Cut Dialling Number” (page 65).

Answering a Call

Incoming calls are announced by the received call ring tone and a displayed message (PHONE No., etc.).

- 1 **An incoming call triggers the ringtone and an incoming call display.**
 - 2 **Touch [] or press  (PHONE) button.**
The call starts.
- When “Setting Received Calls Automatically” (page 57) is set to “On,” you can receive a call automatically.
 - During a call, the audio for the current mode on the unit is muted. After calling, playback will resume.
 - When the caller’s number is transmitted to the system, if the caller’s name is stored in the phone book, the name is displayed. If the name is not stored, the number is displayed. When neither the name or the number is unavailable, “Unknown” is displayed.

Adjusting ringtone volume

The ringtone volume is adjustable on the incoming call message screen.

Touch [] or [] for “Vol.”

Hanging up the Telephone



Touch [].
The call finishes.

Calling

Use the Phone menu screen to make a phone call.






Using Short Cut Dialling to Make a Call

You can assign up to 4 phone numbers for one-touch dialling to make a call easily. For how to assign one-touch dialling, refer to “Assigning as a Short Cut Dialling Number” (page 65).

- 1 **Press the  (PHONE) button.**
The phone menu screen is displayed.
 - 2 **Touch [ Favorites].**
 - 3 **Touch [Dial1], [Dial2], [Dial3] or [Dial4].**
The phone call is sent to the stored number.
- Pressing and holding [Dial1], [Dial2], [Dial3] or [Dial4] displays the Shortcut Dialling Edit screen. The only available editing operation is deletion.
 - If a name has been registered, the name is displayed on the shortcut button.




Dialling a Number In Call History

You can use 3 types of history to make a phone call. Call History saves up to 60 phone numbers. If the limit is exceeded, the oldest phone number is deleted.



- 1 **Press the  (PHONE) button.**
The phone menu screen is displayed.
- 2 **Touch [ Dialed], [ Received] or [ Missed].**
The last four histories are displayed.
- 3 **Touch the name from the call history.**
The details screen of the call history is displayed.
 - To display all the histories, touch [All]. Touching [Delete] deletes the selected histories.
- 4 **Touch [].**
The phone call is started.

Dialling a Number In the Phone Book

You can use the phone book of the mobile phone to make a phone call. Before using, you need to transfer the phone book from the mobile phone to the system. For details on how to transfer the phone book, refer to “Synchronising the Phone Book” (page 65).

- 1 **Press the  (PHONE) button.**
The phone menu screen is displayed.
- 2 **Touch [].**
- 3 **Touch the person name or the telephone number from the Phone Book list.**
- 4 **Touch [].**
The phone call is started.


Entering a Phone Number to Make a Call

- 1 **Press the  (PHONE) button.**
The phone menu screen is displayed.
- 2 **Touch .**
The number input screen appears.
- 3 **Enter the phone number you wish to call.**
 - You can enter up to 31 digits.
- 4 **Touch .**
- 5 **Touch [Call].**
The phone call is started.

 **USER1/USER2**

Redial Function

You can redial the person you have previously called.

- 1 **Press the  (PHONE) button.**
The phone menu screen is displayed.
- 2 **Touch [Redial].**
The number is redialed.
- 3 **Touch [Call].**
The phone call is started.

Operations During a Conversation

Display example





- ① Name and phone number
- ② Conversation time

Adjusting the Speech Volume

You can adjust the transmit volume and receive volume respectively.

Touch [◀] or [▶] for “Vol.”

- : Outgoing volume
- : Incoming volume

You can adjust the volume in 11 levels.

Touch [◀] to turn down the volume. Touch [▶] to turn up the volume.

Changing the Voice Output

The voice output for calls is switchable between car speakers and the mobile phone speaker.

Touch  .

- Depending on the mobile phone, this operation may not be possible.


DTMF (Touch-Tone) Function

Transmits a DTMF (Touch-Tone) during a call.

- 1 **Touch [TONE].**
The number input screen appears.
- 2 **Input number.**
 - You can transmit a Touch-Tone signal during a call.
 - Touching and holding “0” initiates “+” tone transmission.

Phone Book Function

Display example for Phone Book screen

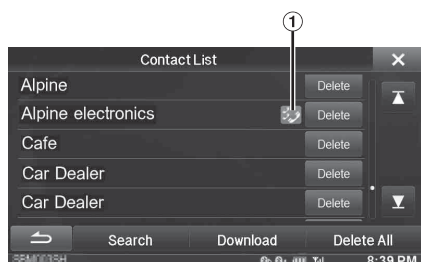

- ① An icon is displayed to indicate that multiple phone numbers are registered under an entry.

Synchronising the Phone Book

You can synchronise the system's phone book with the mobile phone's phone book.

- 1 Press the **(PHONE)** button.
The phone menu screen is displayed.
 - 2 Touch **[]**.
 - 3 Touch **[Download]**.
 - 4 Touch **[SYNC]**.
Synchronisation of the phone books starts.
- You can store up to 1,000 phone numbers in the phone book for USER1 and USER2, respectively.
 - You can store up to 5 phone numbers by one person's name.

Adding the Phone Book

- 1 Press the **(PHONE)** button.
The phone menu screen is displayed.
 - 2 Touch **[]**.
 - 3 Touch **[Download]**.
 - 4 Touch **[Add]**.
Stays on standby for connection of the mobile phone.
 - Touch **[Cancel]** to cancel the standby mode.
 - 5 The mobile phone accesses this unit and then transfers the phone book from the mobile phone to this unit.
- Mobile phone connection is cancelled while the phone book is being transferred.

Deleting the Phone Book Entries

Deleting One Entry from the Phone Book

- 1 Press the **(PHONE)** button.
The Phone menu screen is displayed.
- 2 Touch **[]**.
The Phone Book screen is displayed.
- 3 Touch the phone number you intend to delete.
- 4 Touch **[Delete]**.
The confirmation screen is displayed.
If multiple phone numbers are registered, they are all deleted.
- 5 Touch **[OK]**.
The selected number is deleted.

Deleting All Entries from the Phone Book



- 1 Press the **(PHONE)** button.
The Phone menu screen is displayed.
- 2 Touch **[]**.
The Phone Book screen is displayed.
- 3 Touch **[Delete All]**.
The confirmation screen is displayed.
- 4 Touch **[OK]**.
All entries of the phone book are deleted.

Assigning as a Short Cut Dialling Number

Assigning from Call History

- 1 Press the **(PHONE)** button.
The Phone menu screen is displayed.
- 2 Touch **[Dialled]**, **[Received]** or **[Missed]**.
The last four histories are displayed.
- 3 Touch the person name you intend to assign as the Short Cut dialling number.
The details screen of the Phone book is displayed.
 - To display all the histories, touch **[All]**. Touching **[Delete]** deletes the selected histories.
- 4 Touch **[Preset]**.
The details screen for the Short Cut is displayed.
- 5 Touch **[Save]**.
The phone number is assigned to the selected Short Cut dialling number.
 - If Dial1, Dial2, Dial3 or Dial4 is already registered, it is overwritten.
 - Touch **[Delete]** to delete an assigned short cut dialling number.

Assigning from the Phone Book

- 1 **Press the  (PHONE) button.**
The Phone menu screen is displayed.
 - 2 **Touch [].**
The Phone Book screen is displayed.
 - 3 **Touch the phone number you intend to assign as the Short Cut dialling number.**
The details screen of the Phone book is displayed.
 - 4 **Touch [Preset].**
The details screen for the Short Cut is displayed.
 - 5 **Touch [Save].**
The phone number is assigned to the selected Short Cut dialling number.
- If Dial1, Dial2, Dial3 or Dial4 is already registered, it is overwritten.
 - Touch [Delete] to delete an assigned short cut dialling number.

BLUETOOTH Audio

If a BLUETOOTH compatible mobile phone, portable player, etc. is connected by wireless, you can play back a song (operation is controllable from the unit).

■ Display example for BLUETOOTH Audio main screen



- ① Song title
- ② Artist title
- ③ Album title
- ④ Total playback time
- ⑤ Elapsed time
- ⑥ BLUETOOTH devices Name

- The displayed onscreen buttons may differ depending on the AVRCP version.
- Status Indicator/Song title/Artist title/Album title/Elapsed time do not display for AVRCP Ver. 1.0.
- To play back audio, a mobile phone or a portable player conforming to A2DP (Advanced Audio Distribution Profile) or AVRCP (Audio/Video Remote Control Profile) is required.
Not all functions work with all devices.
- During a call, sound on the BLUETOOTH audio source is muted.

Compatible AVRCP versions: 1.0, 1.3, 1.4

- Available functions may differ depending on the AVRCP version.

Playback

- 1 Press the **🎵 (AUDIO)** button.
- 2 Touch **[BLUETOOTH-AUDIO]** of Top banner.
- 3 Touch **[◀◀]** or **[▶▶]** to select the desired track (file).

Returning to the beginning of the current file:

Touch **[◀◀]**.

Fast backward the current file:

Touch and hold **[◀◀]**.

Advance to the beginning of the next file:

Touch **[▶▶]**.

Fast forward the current file:

Touch and hold **[▶▶]**.


- 4 To pause playback, touch **[▶/||]**.

Repeat Play

Available for AVRCP Ver. 1.3 and 1.4 only.

Touch [↺] during playback.

The repeat mode switches every time the button is touched.

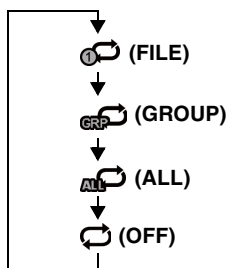


- Operations may differ depending on the connected **BLUETOOTH** compatible device.

M.I.X. (Random Play)

Available for AVRCP Ver. 1.3 and 1.4 only.

Touch [∞] during playback.

The M.I.X. mode switches every time [∞] is touched.

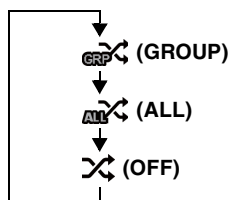

- Operations may differ depending on the connected **BLUETOOTH** compatible device.

Selecting Groups

Available for AVRCP Ver. 1.3 and 1.4 only.

Touch [◀ Group] or [Group ▶] to select the group.

Search Function

Available for AVRCP Ver. 1.4 only.

The displayed list differs with the connected **BLUETOOTH** device.

- 1 Touch **[🔍 (Search)]** of Bottom banner during playback.
Select the track, etc., you want to listen to from the displayed list.

Auxiliary Device (Optional)

Operating Auxiliary Devices (Optional)

To operate devices connected to the AUX terminals of INE-W920R/INE-W928R, follow the procedure described below.

- Set AUX In to "On." Refer to "Setting the AUX Mode" (page 55).
- Depending on the connected unit, the onscreen buttons may not work, or their operation may differ.

WARNING

It is dangerous (and illegal in many states) for the driver to watch TV/video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the INE-W920R/INE-W928R correctly so that the driver cannot watch TV/video unless the vehicle is stopped and the emergency brake is applied.

If the INE-W920R/INE-W928R is not installed correctly, the driver will be able to watch TV/video while driving the vehicle and may be distracted from looking ahead and cause an accident. The driver or other people could be severely injured.

- If you try to activate the auxiliary device while driving, the display will show the warning-Picture off for your safety.

1 Press the  (AUDIO) button.

2 Touch [AUX1]*¹, [AUX2]*¹ or [AUX3]*² of Top banner.

The AUX mode screen is displayed.

^{*1} The name which is given as the mode name in "Setting the Primary AUX Name (AUX Setup)" (page 55) and "Setting the Secondary AUX Name" (page 55) is displayed.

^{*2} When "Setting the AUX3" (page 55), AUX3 appears when setting "AUX" only.

AUX Operation Screen Display During Video File Playback

Touch the screen.

The AUX operation screen is displayed.

■ **Example for AUX1, AUX2, AUX3, DVD, Game, USB Player mode display**



- The operation screen changes to the visual screen in the AUX mode for 5 seconds after an operation has been performed. To hide the AUX operation screen, touch the video display area.

Touch the display panel to display the operation screen again.

- Setting the AUX name for EXT.DVD, DVD-CHG, DVB-T, and TV mode displays their individual operation switches and enables operation. Refer to "Setting the Primary AUX Name (AUX Setup)" (page 55) and "Setting the Secondary AUX Name" (page 55).
- The direct touch feature is available in USB Player mode. Directly touch operation switches displayed on the screen to operate.

Operating an External DVD Player

To operate an External DVD player (Optional), set "Setting the Primary AUX Name (AUX Setup)" (page 55) or "Setting the Secondary AUX Name" (page 55) to "EXT.DVD."

Change to the External DVD Mode

1 Press the  (AUDIO) button.


2 Touch [EXT.DVD] of Top banner.

The display shows the EXT. DVD mode screen.

About the DVD Operation Screen


When the external DVD player playback screen is displayed, you can touch the screen to display the operation screen. For details on how to operate, refer to the Owner's Manual of the connected DVD player.

External DVD player display example

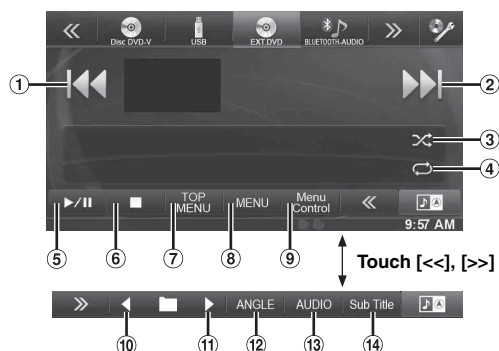

- ① [**⏮**]
Touch the switch to go back to the beginning of the current chapter/track/file. Touch the switch once more to find the beginning of the previous chapter/track/file. Touch and hold to fast reverse.
- ② [**⏭**]
Touch the switch to advance to the beginning of the next chapter/track/file. Touch and hold to fast forward.
- ③ [**⏮⏭**]
Starts/Stop M.I.X. play.
- ④ [**⏮⏭**]
Starts/Stop repeat play.
- ⑤ [**▶/⏮**]
Switches between play and pause.
- ⑥ [**■**]
Touching during play initiates a pre stop. Touching again stops play.
- ⑦ [Top Menu]
Calls up the Top Menu screen.
- ⑧ [Menu]
Calls up the Menu screen.
- ⑨ [Menu Control]
Calls up the menu operation mode.
- ⑩ [**⏮**]
Switches the programme/playlist/folder down.
- ⑪ [**⏭**]
Switches the programme/playlist/folder up.
- ⑫ [Angle]
Switches angle.
- ⑬ [Audio]
Switches audio.
- ⑭ [Sub Title]
Switches sub titles.

Menu operation mode screen display example

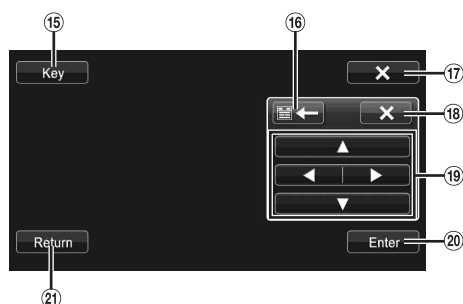

- ⑮ [Key]
The menu operation mode will be displayed.
- ⑯ [**⏮**], [**⏭**]
Moves key panel location.
- ⑰ [**✕**]
Closes menu operation mode.
- ⑱ [**✕**]
Closes key panel.
- ⑲ [**▲**], [**◀**], [**▼**], [**▶**]
Moves menu cursor.
- ⑳ [Enter]
Determines the selected item.
- ㉑ [Return]
Returns to the previous item/screen.

Operating an External DVD Changer

To operate an External DVD changer (Optional), set "Setting the Primary AUX Name (AUX Setup)" (page 55) or "Setting the Secondary AUX Name" (page 55) to "DVD-CHG.."

Change to the External DVD Changer Mode

- 1 Press the **🎵 (AUDIO)** button.
- 2 Touch [**DVD-CHG.**] of Top banner.
The display shows the DVD-CHG. mode screen.

About the DVD Changer Operation Screen

When the External DVD changer playback screen is displayed, you can touch the screen to display the operation screen. For details on how to operate, refer to the Owner's Manual of the connected DVD changer.

- The DVD-CHG. operation mode screen and the Menu operation mode screen are the same as the external DVD player operation screen. Refer to "Operating an External DVD Player."

■ External DVD changer display example 3/3 (Info mode)



- ① [Disc1]-[Disc6]
Selects a Disc.

Operating the Mobile Digital TV Receiver (DVB-T)

To operate the Mobile Digital TV Receiver (DVB-T) (Optional), set "Setting the Primary AUX Name (AUX Setup)" (page 55) or "Setting the Secondary AUX Name" (page 55) to "DVB-T."


Changing to the Mobile Digital TV Receiver (DVB-T) Mode

- 1 Press the **AUDIO** button.
- 2 Touch **[DVB-T]** of Top banner.
The display shows the DVB-T mode screen.

About the DVB-T operation screen

When you touch the screen in the DVB-T mode, the operation screen is displayed. For details on how to operate, refer to the Owner's Manual of the connected Digital TV Receiver (DVB-T).

■ Menu operation mode screen display example

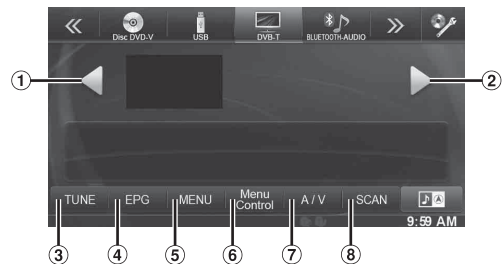

- ① [**<<**]
Switches the Channel number/ Favorite channel number down.
 - ② [**>>**]
Switches the Channel number / Favorite channel number up.
 - ③ [TUNE] (Channel or FAV)
Switches between the Channel mode and the Favorite channel mode.
 - ④ [EPG]
Call up the Electronic Programme Guide (EPG).
 - ⑤ [Menu]
Call up the menu screen.
 - ⑥ [Menu Control]
Call up the menu operation mode.
 - ⑦ [A/V]
Switches the source.
 - ⑧ [Scan]
Touch the switch to start the scan procedure.
- If the setting for "Setting Direct Touch Operation" (page 55) is set to "On," direct touch operation is possible. Directly touch operation switches displayed on the screen to operate. To display the operation screen, touch [Control].

Operating a TV


To operate a TV Receiver (TV) (Optional), set "Setting the Primary AUX Name (AUX Setup)" (page 55) or "Setting the Secondary AUX Name" (page 55) to "TV."

Change to the TV mode

- 1 Press the **AUDIO** button.
- 2 Touch **[TV]** of Top banner.
The display shows the TV mode screen.

About the TV operation screen

When the TV playback screen is displayed, you can touch the screen to display the operation screen. For details on how to operate, refer to the Owner's Manual of the connected TV.

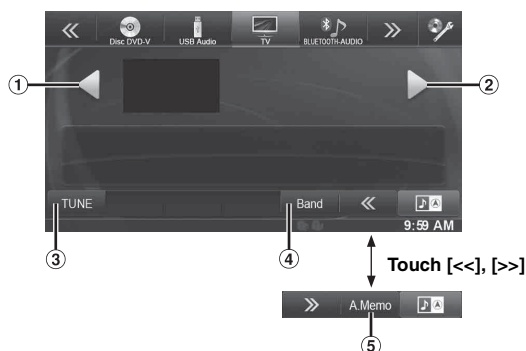

- ① [◀], [◀◀]
Switches the Channel number / Preset channel / frequency down.
- ② [▶], [▶▶]
Switches the Channel number / Preset channel / frequency up.
- ③ [TUNE] (Channel or PRESET or MANUAL)
Switches amongst Channel mode, Preset mode, and Manual mode.
- ④ [Band]
Switches the band.
- ⑤ [A.Memo]
The tuner automatically seeks and stores stations.

Camera Operation (Optional)

When an optional camera is connected, the view video of camera can be output to the monitor.

Front camera or Rear camera can be connected to this unit.

Depending on your camera, please choose the connection method (Direct or AUX) and camera type (Front, Rear or OTHER) first. For details, refer to "Camera Setup" (page 59).

Front camera:

When the HCE-C212F/HCE-C200F is connected, conditions in front of the vehicle, such as objects, people and other hazards, can be seen.

Rear camera:

If an HCE-C210RD/HCE-C200R/HCE-C117D/HCE-C107D/HCE-C115/HCE-C105 camera is connected, when the vehicle is reversed, the rear camera view (guide marks for vehicle width and available distance) is displayed automatically on the screen of this unit.

Other camera:

Set when connecting to a camera other than the Front camera or Rear camera, such as a room camera and side camera.

You can adjust the quality of the camera image.

Setting items: Live Contrast / Bright / Colour / Contrast

Refer to "Visual Setting" (page 43).

Rear Camera Operation

Set "Rear" for "Direct Camera Setting" (page 59) or "AUX Camera Setting" (page 60).

Displaying the rear view video while the car is in reverse

1 Shift the gear lever to the reverse (R) position.

The rear view image is displayed while the car remains in reverse.

2 If you shift the gear lever to a position other than reverse (R), the monitor returns to the previous screen.

- Never depend solely on the camera when backing up. Always turn and look and only use the camera for additional assistance.
- This function is effective when the reverse wire is properly connected.

■ USER1/USER2

Switching the Image Pattern for the Rear Camera

If the camera has a view switch function, the Direct Change switch is displayed.

1 Touch the screen when the image from the rear camera is displayed.

The operation screen is displayed on the screen.

- After a 5-second time-out, the operation screen returns to the camera display screen.

2 Touch [Back], [Panorama], [Corner] or [Top].

The image pattern changes.

[Back]: Rear View

[Panorama]: Panorama View

[Corner]: Corner View

[Top]: Ground View

- For detailed information about image patterns, see the camera Owner's Manual.

■ USER1/USER2

Guide Display ON/OFF Setting

1 Touch the screen when the image from the camera is displayed.

The operation screen is displayed on the screen.

- After a 5-second time-out, the operation screen returns to the camera display screen.

2 Touch [Guide OFF] on the Rear camera display screen.

The guide disappears, and then the [Guide OFF] switch changes to [Guide ON].

3 Touch [Guide ON] to turn on the guide.

■ USER1/USER2

Adjusting the Caution Display Location

1 Touch the screen when the image from the camera is displayed.

The operation screen is displayed on the screen.

- After a 5-second time-out, the operation screen returns to the camera display screen.

2 Touch [Caution ⚠].


- For each touch, the caution location moves to the top or bottom of the screen.

About the Rear Camera Guide

To display the guide, set "Guide Display ON/OFF Setting" (page 72) to On. Also, to adjust the guide, refer to "Adjusting the Rear/Front Camera Guide" (page 59). You can also turn off the guide in the Rear camera display screen.

■ Indication mark meaning

When the car is put into reverse gear, the monitor switches to the rear view camera image. Guides appear to help visualise the car's width and distance from the rear bumper.

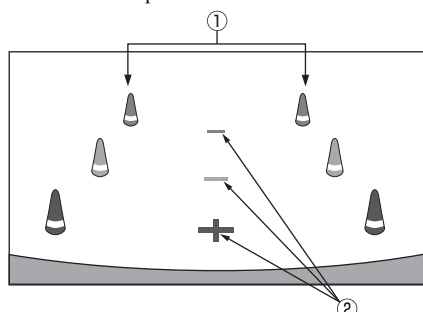

① Car width extension marks (red, yellow and green in order of distance)

If properly calibrated, the marks indicate the car's width. This helps guide the car's path when backing up in a straight line.

The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronisation with the steering wheel.

② Distance guidance marks


The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronisation with the steering wheel.
- Each centre position of the mark represents about 0.5 m (red), about 1 m (yellow) and about 2 m (green) behind.
- Depending on the condition of the car or road surface, the range of vision may vary.
- The camera has a limited range of vision. Objects at extreme angles to the camera (e.g. under the bumper or at opposite ends of the bumper) may not be in the its field-of-vision.
- The rear camera image may have a tint which is different from the actual surroundings.
- Depending on the car, the guidance may deviate to the right or left. This is not a malfunction.


■ Distance guidance mark

The distance guides represent the ground level distance from the rear bumper. It is difficult to accurately estimate the distance to objects above ground level.

<Screen>

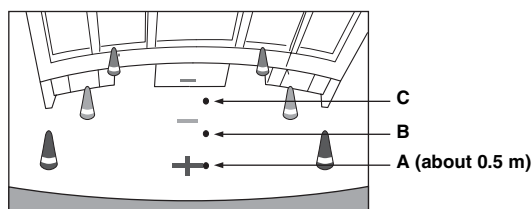

<Positions of A, B and C>

 


In the screen, according to the distance guidance marks, the truck seems to be parked about 1 m away (at the position B). In actual fact, however, if you reversed to position A, you would collide with the truck.

In the screen, positions A, B and C seem to be located in order of proximity. However, in actual fact, the position A and C are the same distance, and B is farther away than positions A and C.

- The car width extension mark represents the distance to the road surface. The distance to an object on the road is not accurately represented by the guides.
- In the following conditions, screen visibility may be impaired. This is not a malfunction.
 - When it is dark (during the night, etc.).
 - Under very high or very low temperature conditions.
 - When water drops adhere to the camera, or when the humidity is high (such as rainy weather, etc.).
 - When foreign bodies (such as mud, etc.) adhere to the camera or its peripheral area.
 - When sunlight or headlights directly strike the camera lens.
 - When a CCD camera is connected, smearing* may occur. This phenomenon is peculiar to CCD cameras.

* Smear phenomenon:

A phenomenon which occurs when a high-intensity spot (such as a reflection of the sunlight on a car body) is shot by the camera. The picture below is an example of 'vertical smear' common to CCD cameras.

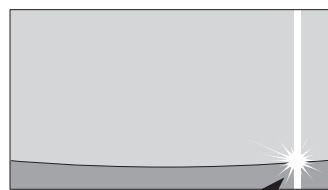


A high-intensity spot

Error between the screen and the actual road surface

In the following conditions, errors are produced between the screen guidance and the actual road surface. (The illustrations represent a case when the camera is installed in the standard position.)


■ When there is a steep upward slope behind the car (example)

<Screen>

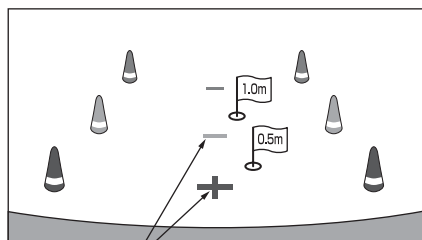

Distance guidance marks


<Situation of the car>

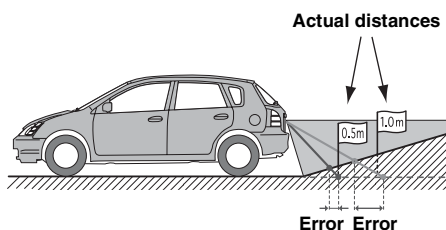


The distance guidance mark represents the distance to a flat road surface. Therefore in the case of an upward slope behind the car, the distance guides are displayed closer to the rear bumper than the actual distance. For example, if there is an obstacle on the upward slope, it may appear farther away than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

■ When there is a steep downward slope behind the car (example)

<Screen>

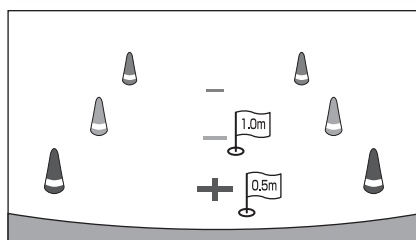

<Situation of the car>

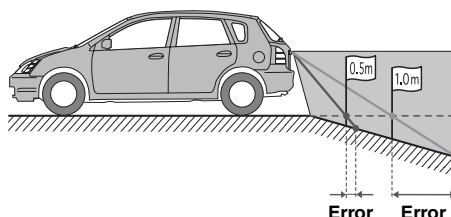

In the case of a downward slope behind the car, the distance guides are displayed farther from the rear bumper than the actual distance. If there is an obstacle on the downward slope, it seems closer than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

Front Camera Operation

Set "Front" for "Direct Camera Setting" (page 59).

Displaying the Front View Video Manually

1 Press the ★ (My Favorites) button.

The Favorites screen is displayed.

2 Touch [Camera].

The Camera mode is activated and the front view video is displayed.

When the front camera (direct camera) and rear camera or side camera (AUX camera) are connected simultaneously, the screen for selecting which camera image to display appears.

Switching the Image Pattern for the Front Camera

1 Touch the screen when the image from the front camera is displayed.

The operation screen is displayed on the screen.

- After a 5-second time-out, the operation screen returns to the camera display screen.

2 Touch **[Panorama]**, **[Corner]** or **[Top]**.

The image pattern changes.

[Panorama]: Panorama View

[Corner]: Corner View

[Top]: Ground View

- For detailed information about image patterns, see the camera Owner's Manual.

About the adjustment of guide display ON/OFF setting and adjustment of Caution display location

As with the rear camera, the front camera guide display ON/OFF setting and Caution display location can be adjusted. Refer to "Guide Display ON/OFF Setting" (page 72) and "Adjusting the Caution Display Location" (page 72) for the operations.

Other Camera Operation

Set "OTHER" for "AUX Camera Setting" (page 60).

1 Press the ★ (My Favorites) button.

The Favorites screen is displayed.

2 Touch **[Camera]**.

When the front camera (direct camera) and rear camera or side camera (AUX camera) are connected simultaneously, the screen for selecting which camera image to display appears.

About the adjustment of the Caution display location

As with the rear camera, the Caution display location for other cameras can be adjusted. Refer to "Adjusting the Caution Display Location" (page 72) for the operations.

USB Memory (Optional)


You can play back music files (MP3/WMA/AAC) and video files (DivX®) stored in a USB memory device on the internal player of this system.

This section explains music operations only. Refer to the DivX® operation section in “DVD” (page 36) for information on video.

- If the first file played is a music file, the mode will be the music play mode. If the first file played is a video file, the mode will be the video play mode. Also, the mode changes by selecting “AUDIO” or “VIDEO” in step 2 in Search Function. Refer to “Searching for a Desired Song” (page 77) and “Searching for a Desired Video File” (page 39).

■ Display example for the USB main screen (Info mode)

Audio mode

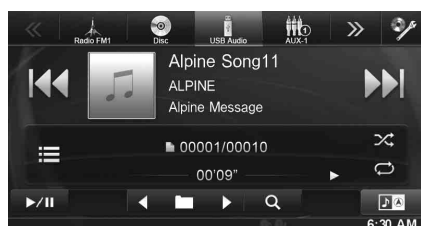

Video mode



↑ Touch [<<], [>>]



- Refer to “Display example for MP3/WMA/AAC main screen” (page 33) and “Display example for DivX® main screen” (page 36) for screen element explanations.
- You can display artwork during USB playback.

■ About creating a tag information library

You can scan music files in a USB memory device and create a library of tag information in this unit. Library creation starts when the USB memory device is connected. The time it takes to create the library depends on the number of files in the USB memory device, but it may take several minutes.

About operations during library creation

- “Tag Search” (page 77) does not work properly while a library is being created.
- The order in which songs are played during library creation may differ from the order in the USB memory device.

Playback

- Press the (AUDIO) button.
- Touch [USB] of Top banner.
The USB mode is activated and the display changes to the USB screen.
- Touch [] or [] or to select the desired track (file).
Returning to the beginning of the current track (file):
Touch [].
Fast reverse :
Touch and hold [].
Advancing to the beginning of the next track (file) :
Touch [].
Fast forward :
Touch and hold [].
- To pause playback, touch [/].
[>] is displayed in the middle of the screen.
Touch [> /] again or touch [>] in the middle of the screen to start playback.

- Any file protected by DRM (Digital Rights Management) copy protection, cannot be played back on this unit.
- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.
- If there is tag information, artist name/album name/track name is displayed.
- ID3 tag/WMA tag
If an MP3/WMA/AAC file contains ID3 tag/WMA tag information, the ID3 tag/WMA tag information is displayed (e.g., song name, artist name, and album name).
- If the combined number of files/folders in the USB memory devices reaches 10,000, the message “The system has reached its limit of recognisable files/folders from the USB device.” will be displayed. To delete the message, remove the USB memory devices.

Repeat Play

Operation differs depending on whether the most recent song search was a Tag Search or a Folder/File Search.

Touch [] during playback.

The repeat mode switches every time the button is touched.

 
Folder/File Search mode:

Repeat → Repeat Folder* → (OFF) → Repeat



Tag Search mode:

Repeat → (OFF) → Repeat



- * Only files in a folder are repeatedly played back.
- If the Repeat Play mode is activated during M.I.X. playback, the M.I.X. mode will be cancelled.

Random Play (M.I.X.)

Operation differs depending on whether the most recent song search was a Tag Search or a Folder Search.

Touch [X] during playback.

The tracks (files) on the disc will be played back in a random sequence. To cancel M.I.X. play, touch [X].

Folder Search mode:

M.I.X. Folder*¹ → (OFF) → M.I.X. Folder*¹



Tag Search mode:

M.I.X. Songs*² → (OFF) → M.I.X. Songs*²



*¹ Only files in a folder are played back in random sequence.

*² M.I.X. Songs randomly plays back songs within a selected category (playlist, album, etc.). The songs within the category are played just once until all songs have been played.

- If the M.I.X. mode is activated during Repeat playback, the Repeat Play mode will be cancelled.
- If you select a track by using the search mode, the M.I.X. play mode will be cancelled.

Random Play (M.I.X. ALL)

This operation is available only if the most recent song search was a Tag Search.

1 Touch [Q (Search)] of Bottom banner during playback.

The search mode is activated.

2 Touch [Music].

The folder name list screen is displayed.

3 Touch [Shuffle All] during playback.

The tracks (files) on the disc will be played back in a random sequence.

To cancel M.I.X. play, touch [X].

- All songs in the USB memory are played back in random sequence. Any one song does not play back again until all songs have been played back.

Searching for a Desired Song

INE-W920R/INE-W928R can carry out 2 kinds of searches.

File/Folder Name Search

1 Touch [Q (Search)] of Bottom banner during playback.

2 Touch [Music].

The search mode is activated.

3 Touch [Folder].

The folder name list screen is displayed.

Folder Name Search Mode

4 Touch [▶] of the desired folder.

The first file in the selected folder is played back.

File Name Search Mode

4 Touch the desired folder name.

The file name of the selected folder is displayed.

5 Touch the desired file name.

The selected file is played back.

- To return to the previous hierarchy, touch [↶].
- For details on how to scroll through the list, refer to "Selecting an Item in a List" (page 29).
- After selecting a folder via a Folder name search, touch [≡] on the main screen to display the folder search screen.
- After selecting a file via a File name search, touch [≡] on the main screen to display the file search screen.

Tag Search

By using file tag information and keeping these songs organised in playlists, this unit's search functions will ease song searches in large libraries.

Each music category has its own individual hierarchy. Use the Playlists/Artists/Albums/Songs/Genres/Composers search mode to narrow searches based on the table below.

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Playlists	Songs	—	—
Artists	Albums	Songs	—
Albums	Songs	—	—
Songs	—	—	—
Genres	Artists	Albums	Songs
Composers	Albums	Songs	—

For example: Searching by Artist name

The following example explains how an ARTISTS search is performed. Another search mode can be used for the same operation, although the hierarchy differs.

■ Searching by artist name

1 Touch [Q (Search)] of Bottom banner during playback.

2 Touch [Music].

The search mode screen appears.

3 Touch [Artists].

The Artists search screen is displayed.

4 Select the desired artist.

To Play Back the Artist Directly

- 1 Touch [▶] of the artist's name.
All songs of the selected artist are played back.

To Search for the Album of the Artist

- 1 Touch the selected artist name.
The Albums search screen of the selected artist is displayed.
- 2 Touch [▶] of the desired album's name.
All songs of the selected album are played back.

To Search for a Song in the Album of the Artist


- 1 Touch the desired artist's name.
All albums of the selected artist are displayed.

5 Touch the desired album's name.

All songs of the selected album are displayed.

6 Touch the desired song's name.

The selected song is played back.

- For details on how to scroll through the list, refer to "Selecting an Item in a List" (page 29).
- After selecting a file via a Tag search, touch [] on the main screen to display the search screen. The hierarchy level you selected last in the search mode is displayed.

Direct Up/Down Function

This operation is available only if the most recent song search was a Tag Search.

Playlist/Artist/Album/Genre/Composer can be easily changed.

For example, if you listen to a song from a selected album, the album can be changed.

Touch [◀] or [▶] to select the desired Playlist/Artist/Album/Genre/Composer.

- If an album is selected from an artist search, the album can be searched.
- For details on icon display, refer to "Direct Up/Down switch icon:" (page 81).
- If search selection mode is not activated, Direct Up/Down Function is not possible.
- During M.I.X. playback, this operation is not possible.

Select the desired Folder (Folder up/down)

This operation is available only if the most recent song search was a Folder/File Search.

If you listen to a file from a selected folder, the folder can be changed.

Touch [◀] or [▶] to select the folder.

- During M.I.X. playback, this operation is not possible.

iPod/iPhone (Optional)

An iPod/iPhone can be connected to this unit by using the cable KCU-461iV (sold separately). You can connect a video-capable iPod to enjoy video as well as music.

When the INE-W920R/INE-W928R is connected by the above cable, the controls on the iPod are disabled.

- *Internet or telephone functions, etc., of the iPhone or iPod touch are not controllable from the unit, but these functions can be controlled using the iPhone or iPod touch itself.*
- *To watch the video screen of the file in the iPod/iPhone, the parking brake must be engaged.*
- *For automatic transmission vehicles, place the transmission lever in the Park position.*

About iPod/iPhone models usable with this unit

- The following devices have been tested and shown to work with this unit. Correct function of earlier versions cannot be guaranteed.
 - iPod nano 6th generation 8GB/16GB: Ver.1.1
 - iPod touch 4th generation 8GB/32GB/64GB: Ver.4.3.1
 - iPod touch 3rd generation 8GB/32GB/64GB: Ver.4.3.1
 - iPod nano 5th generation(video camera) 8GB/16GB: Ver.1.0.2
 - iPod classic(Late2009) 160GB: Ver.2.0.4
 - iPod touch 2nd generation 8GB/16GB/32GB/64GB: Ver.4.2.1
 - iPod nano 4th generation(video) 8GB/16GB: Ver.1.0.4
 - iPod touch 1st generation 8GB/16GB/32GB: Ver.3.1.3
 - iPod nano 3rd generation(video) 4GB/8GB: Ver.1.1.3
 - iPod classic 80GB/160GB: Ver.1.1.2
 - iPod classic 120GB: Ver.2.0.1
 - iPod nano 2nd generation(aluminum) 2GB/4GB/8GB: Ver.1.1.3
 - iPod 5th generation(video) 60GB/80GB: Ver.1.3
 - iPod 5th generation(video) 30GB: Ver.1.3
 - iPod nano 1st generation 1GB/2GB/4GB: Ver.1.3.1
- The following devices have been tested and shown to work with this unit. Correct function of earlier versions cannot be guaranteed.
 - iPhone 4 16GB/32GB: Ver.4.3.1
 - iPhone 3GS 8GB/16GB/32GB: Ver.4.3.1
 - iPhone 3G 8GB/16GB: Ver.4.2.1
 - iPhone 4GB/8GB/16GB: Ver.3.1.3
- For clarity in identifying your model of iPod, please see Apple's own document "Identifying iPod models" at <http://support.apple.com/kb/HT1353>.

WARNING

It is dangerous for the driver to watch video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the INE-W920R/INE-W928R correctly so that the driver cannot watch Video unless the vehicle is stopped and the emergency brake is applied.


If the INE-W920R/INE-W928R is not installed correctly, the driver will be able to watch the Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.



■ Display example for USB memory main screen (Info mode)

Audio mode

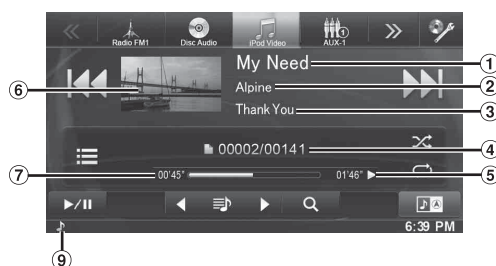

Video mode



- ① Song title/Episode title*
- ② Artist title/Release Date*
- ③ Album title/Podcast title*
- ④ Current song no./Total song no.
- ⑤ Remaining time for playing
- ⑥ Artwork display
- ⑦ Elapsed time
- ⑧ : During audio-only playback of a video file in a Playlist, the Video icon is displayed.
- ⑨ : During audio-only playback of a music file in a video Playlist, the Music icon is displayed.

* Podcast mode


The iPod/iPhone operation screen display during video file playback

Touch the screen while the iPod/iPhone playback screen is displayed.

The iPod/iPhone operation screen is displayed.

- The operation screen changes to the visual screen in the iPod mode for 5 seconds after an operation has been performed.

Playback

- 1 Press the  (**AUDIO**) button.
- 2 Touch [**iPod (Audio or Video)**] of Top banner.
The display shows the iPod mode screen.
- 3 Touch [**⏮**] or [**⏭**] to select the desired track (file).

Returning to the beginning of the current track (file):

Touch [**⏮**].

Fast reverse :

Touch and hold [**⏮**].

Advancing to the beginning of the next track (file) :

Touch [**⏭**].

Fast forward :

Touch and hold [**⏭**].

- 4 To pause playback, touch [**⏸** / **⏹**].

- If a song is playing on the iPod/iPhone when it is connected to the INE-W920R/INE-W928R, it will continue playing after the connection.
- An episode may have several chapters. The chapter can be changed by touching [**⏮**] or [**⏭**].
- If the artist, album or song name, created in iTunes, has too many characters, songs may not be played back when connected to the INE-W920R/INE-W928R. Therefore, a maximum of 64 characters is recommended. The maximum number of characters for the unit is 64.
- Some characters may not be correctly displayed.

Searching for a Music File

An iPod/iPhone can contain thousands of songs. For this reason, this unit can make various searches using the search function as shown below.

Using the Playlist/Artist/Album/Podcast/Audiobook/Genre/Composer/Song search mode's individual hierarchy, you can narrow down your search as shown in the table below.

<MUSIC Search Menu>

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Playlists	Songs	—	—
Artists	Albums	Songs	—
Albums	Songs	—	—
Songs	—	—	—
Podcasts	Episodes	—	—
Genres	Artists	Albums	Songs
Composers	Albums	Songs	—
Audiobooks	—	—	—

For example: Searching by Artist name

The following example explains how an ARTISTS search is performed. Another search mode can be used for the same operation, although the hierarchy differs.

■ Searching by artist name

- 1 Touch [**🔍 (Search)**] of Bottom banner during playback.
- 2 Touch [**Music**].
The search mode screen appears.

- 3 Touch [**Artists**].
The Artists search screen is displayed.

- 4 Select the desired artist.

To Play Back the Artist Directly

- 1 Touch [**▶**] of the artist's name.
All songs of the selected artist are played back.

To Search for the Album of the Artist

- 1 Touch the selected artist name.
The Albums search screen of the selected artist is displayed.
- 2 Touch [**▶**] of the desired album's name.
All songs of the selected album are played back.

To Search for a Song in the Album of the Artist

- 1 Touch the desired artist's name.
All albums of the selected artist are displayed.

- 5 Touch the desired album's name.
All songs of the selected album are displayed.

- 6 Touch the desired song's name.
The selected song is played back.

- Touching [**▶**] of "ALL" will play back all songs in the list.
- Touching "ALL" will display the search list in the next hierarchy.
- An alphabet skip function is available. Refer to "Alphabet Skip Function" (page 81).
- For details on how to scroll through the list, refer to "Selecting an Item in a List" (page 29).

Searching for a Desired Video File

You can select a movie, music video, etc., from the list screen.

- Video search mode depends on the iPod/iPhone. If the specification of the iPod/iPhone is changed, the search mode on this unit will also be changed.

Examples for the video search mode

- Video Playlists
- Movies
- Music Videos, etc.

For example: Searching by Movie


The following example explains how a Movie search is performed. Another search mode can be used for the same operation, although the hierarchy differs.

- 1 Touch [**🔍 (Search)**] of Bottom banner during playback.
- 2 Touch [**Video**].
The Video search mode screen appears.
- 3 Touch [**Movies**].
The Movies search screen is displayed.
- 4 Touch the desired movie.
The selected movie is played back.

- For details on how to scroll through the list, refer to "Selecting an Item in a List" (page 29).

Alphabet Skip Function

The unit is provided with a alphabet skip function for effective searching. When you use this function in the search mode, you can quickly search an artist or a song, etc.

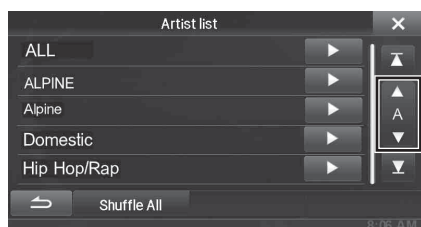

Alphabet skip function:

The alphabet skip function is skipped to the next alphabet such as from A to B, B to C by touching [ALPHABET ▼]. You can also skip in reverse order such as from B to A by touching [▲ ALPHABET].

Direct Up/Down Function

If you touch [▶] of the album name in the search mode, this album will be played back repeatedly. To go to the previous or next Album, use the Direct Up/Down Function.

Touch [◀] or [▶] to select the desired Playlist/Artist/Album/Genre/Podcast/Composer.



Direct Up/Down switch icon

Direct Up/Down switch icon:

	Playlist
	Artist
	Album
	Podcast
	Genre
	Composer

- You can use the Direct Up/Down Function during video file playback. The Direct Up/Down Function switches in the video mode are [◀] [▶].
- If you are searching for a song, this operation cannot be performed.
- If an album is selected from an artist search, the album can be searched.
- During shuffle playback, this operation is not possible.

Search Position Memory

During iPod/iPhone playback, you can quickly move back up the selected hierarchy, a level at time.

Touch [≡]. (ex. [< Playlists])

The hierarchy level you selected last in the search mode is displayed. Repeated touches return to each previous level up to the highest.

Repeat Play

Touch [↺] to repeatedly play back the currently track.

The tracks (files) will be played repeatedly.

Touch [↺] again to deactivate Repeat play.

Repeat → (OFF) → Repeat



Random Play (Shuffle)

Touch [⌵] during playback.

The files will be played back in a random sequence.

The Shuffle mode switches every time [⌵] is touched.

Shuffle Songs → Shuffle Albums → (OFF) → Shuffle Songs



Shuffle Albums: The songs on each album are played back in proper order. Upon completing of all the songs on the album, the next album is selected randomly. This continues until all albums have been played.

Shuffle Songs: Song shuffle randomly plays back songs within a selected category (playlist, album, etc.). The songs within the category are played just once until all songs have been played.

- For details on the search mode, refer to "Searching for a Music File" (page 80).

Random Play (Shuffle All)

All files in the iPod are played back in random sequence.

1 Touch [🔍 (Search)] of Bottom banner during playback.

2 Touch [Music].
The search mode screen appears.

3 Touch [Shuffle All] of Bottom banner during playback.

The indicator "ALL" lights, and the songs will be played back in random sequence.

- To cancel, set the Shuffle mode to Off. Refer to "Random Play (Shuffle)" (page 81).

Information

Product Software Update

This product uses software that can be updated through a USB memory device. Download the software from the Alpine website and update the product using the USB memory device.

Updating this product


Check the Alpine website for details on updating.

<http://www.alpine-europe.com>


About DVDs

Music CDs and DVDs have grooves (tracks) in which the digital data is recorded. The data is represented as microscopic pits recorded into the track – these pits are read by a laser beam to play the disc. On DVDs, the density of the tracks and pits is twice that of CDs, so DVDs can contain more data in less space.

CDs

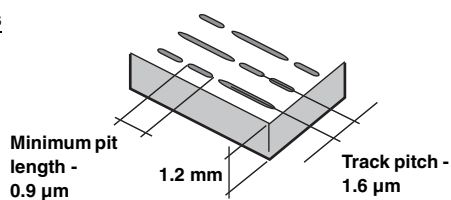

DVDs

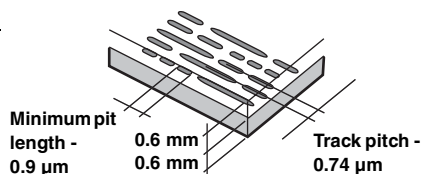

A 12 cm disc can contain one movie or about four hours of music. In addition, DVDs provide sharp picture quality with vivid colours thanks to a horizontal resolution of over 500 lines (compared to less than 300 for VHS tape).

In addition, DVDs offer a variety of functions.

Multiple audio* (page 40)

Movies can be recorded in up to eight languages. The desired language can be selected from the unit.

Subtitles function* (page 40)

Movies can include subtitles in up to 32 languages. The desired subtitle language can be selected from the unit.

Multi angle function* (page 40)

When the DVD contains a movie shot from multiple angles, the desired angle can be selected from the unit.

Multi story function*

With this function, a single movie includes various story lines. You can select different story lines to view various versions of the same movie.

Operation differs from disc to disc. Story line selection screens including instructions appear during the movie. Just follow the instructions.

* *These functions differ from disc to disc. For details, refer to the disc's instructions.*

List of Language Codes

(For details, see page 52.)

Abbreviation	Code	Language	Abbreviation	Code	Language	Abbreviation	Code	Language
AA	6565	Afar	IE	7369	Interlingue	RN	8278	Kirundi
AB	6566	Abkhazian	IK	7375	Inupiak	RO	8279	Romanian
AF	6570	Afrikaans	IN	7378	Indonesian	RU	8285	Russian
AM	6577	Amharic	IS	7383	Icelandic	RW	8287	Kinyarwanda
AR	6582	Arabic	IT	7384	Italian	SA	8365	Sanskrit
AS	6583	Assamese	IW	7387	Hebrew	SD	8368	Sindhi
AY	6589	Aymara	JP	7465	Japanese	SG	8371	Sangho
AZ	6590	Azerbaijani	JI	7473	Yiddish	SH	8372	Serbo-Croatian
BA	6665	Bashkir	JW	7487	Javanese	SI	8373	Singhalese
BE	6669	Byelorussian	KA	7565	Georgian	SK	8375	Slovak
BG	6671	Bulgarian	KK	7575	Kazakh	SL	8376	Slovenian
BH	6672	Bihari	KL	7576	Greenlandic	SM	8377	Samoan
BI	6673	Bislama	KM	7577	Cambodian	SN	8378	Shona
BN	6678	Bengali, Bangla	KN	7578	Kannada	SO	8379	Somali
BO	6679	Tibetan	KO	7579	Korean	SQ	8381	Albanian
BR	6682	Breton	KS	7583	Kashmiri	SR	8382	Serbian
CA	6765	Catalan	KU	7585	Kurdish	SS	8383	Siswati
CO	6779	Corsican	KY	7589	Kirghiz	ST	8384	Sesotho
CS	6783	Czech	LA	7665	Latin	SU	8385	Sundanese
CY	6789	Welsh	LN	7678	Lingala	SV	8386	Swedish
DA	6865	Danish	LO	7679	Laothian	SW	8387	Swahili
DE	6869	German	LT	7684	Lithuanian	TA	8465	Tamil
DZ	6890	Bhutani	LV	7686	Latvian, Lettish	TE	8469	Telugu
EL	6976	Greek	MG	7771	Malagasy	TG	8471	Tajik
EN	6978	English	MI	7773	Maori	TH	8472	Thai
EO	6979	Esperanto	MK	7775	Macedonian	TI	8473	Tigrinya
ES	6983	Spanish	ML	7776	Malayalam	TK	8475	Turkmen
ET	6984	Estonian	MN	7778	Mongolian	TL	8476	Tagalog
EU	6985	Basque	MO	7779	Moldavian	TN	8478	Setswana
FA	7065	Persian	MR	7782	Marathi	TO	8479	Tonga
FI	7073	Finnish	MS	7783	Malay	TR	8482	Turkish
FJ	7074	Fiji	MT	7784	Maltese	TS	8483	Tsonga
FO	7079	Faroese	MY	7789	Burmese	TT	8484	Tatar
FR	7082	French	NA	7865	Nauru	TW	8487	Twi
FY	7089	Frisian	NE	7869	Nepali	UK	8575	Ukrainian
GA	7165	Irish	NL	7876	Dutch	UR	8582	Urdu
GD	7168	Scots Gaelic	NO	7879	Norwegian	UZ	8590	Uzbek
GL	7176	Galician	OC	7967	Occitan	VI	8673	Vietnamese
GN	7178	Guarani	OM	7977	(Afan) Oromo	VO	8679	Volapuk
GU	7185	Gujarati	OR	7982	Oriya	WO	8779	Wolof
HA	7265	Hausa	PA	8065	Punjabi	XH	8872	Xhosa
HI	7273	Hindi	PL	8076	Polish	YO	8979	Yoruba
HR	7282	Croatian	PS	8083	Pashto, Pushto	ZH	9072	Chinese
HU	7285	Hungarian	PT	8084	Portuguese	ZU	9085	Zulu
HY	7289	Armenian	QU	8185	Quechua			
IA	7365	Interlingua	RM	8277	Rhaeto-Romance			

List of Country Codes

(For details, see page 53.)

Abbreviation	Code	Country	Abbreviation	Code	Country	Abbreviation	Code	Country
AD	6568	Andorra	DM	6877	Dominica	KI	7573	Kiribati
AE	6569	United Arab Emirates	DO	6879	Dominican Republic	KM	7577	Comoros
AF	6570	Afghanistan	DZ	6890	Algeria	KN	7578	Saint Kitts and Nevis
AG	6571	Antigua and Barbuda	EC	6967	Ecuador	KP	7580	Korea, Democratic People's Republic of
AI	6573	Anguilla	EE	6969	Estonia			
AL	6576	Albania	EG	6971	Egypt	KR	7582	Korea, Republic of
AM	6577	Armenia	EH	6972	Western Sahara	KW	7587	Kuwait
AN	6578	Netherlands Antilles	ER	6982	Eritrea	KY	7589	Cayman Islands
AO	6579	Angola	ES	6983	Spain	KZ	7590	Kazakhstan
AQ	6581	Antarctica	ET	6984	Ethiopia	LA	7665	Lao People's Democratic Republic
AR	6582	Argentina	FI	7073	Finland			
AS	6583	American Samoa	FJ	7074	Fiji	LB	7666	Lebanon
AT	6584	Austria	FK	7075	Falkland Islands	LC	7667	Saint Lucia
AU	6585	Australia	FM	7077	Micronesia, Federated States of	LI	7673	Liechtenstein
AW	6587	Aruba	FO	7079	Faroe Islands	LK	7675	Sri Lanka
AZ	6590	Azerbaijan	FR	7082	France	LR	7682	Liberia
BA	6665	Bosnia and Herzegovina	GA	7165	Gabon	LS	7683	Lesotho
BB	6666	Barbados	GB	7166	United Kingdom	LT	7684	Lithuania
BD	6668	Bangladesh	GD	7168	Grenada	LU	7685	Luxembourg
BE	6669	Belgium	GE	7169	Georgia	LV	7686	Latvia
BF	6670	Burkina Faso	GF	7170	French Guiana	LY	7689	Libyan Arab Jamahiriya
BG	6671	Bulgaria	GH	7172	Ghana	MA	7765	Morocco
BH	6672	Bahrain	GI	7173	Gibraltar	MC	7767	Monaco
BI	6673	Burundi	GL	7176	Greenland	MD	7768	Moldova, Republic of
BJ	6674	Benin	GM	7177	Gambia	MG	7771	Madagascar
BM	6677	Bermuda	GN	7178	Guinea	MH	7772	Marshall Islands
BN	6678	Brunei Darussalam	GP	7180	Guadeloupe	MK	7775	Macedonia, The former Yugoslav Republic of
BO	6679	Bolivia	GQ	7181	Equatorial Guinea			
BR	6682	Brazil	GR	7182	Greece	ML	7776	Mali
BS	6683	Bahamas	GS	7183	South Georgia and the South Sandwich Islands	MM	7777	Myanmar
BT	6684	Bhutan				MN	7778	Mongolia
BV	6686	Bouvet Island	GT	7184	Guatemala	MO	7779	Macau
BW	6687	Botswana	GU	7185	Guam	MP	7780	Northern Mariana Islands
BY	6689	Belarus	GW	7187	Guinea-Bissau	MQ	7781	Martinique
BZ	6690	Belize	GY	7189	Guyana	MR	7782	Mauritania
CA	6765	Canada	HK	7275	Hong Kong	MS	7783	Montserrat
CC	6767	Cocos (Keeling) Islands	HM	7277	Heard Island and McDonald Islands	MT	7784	Malta
CD	6768	Congo, the Democratic Republic of the				MU	7785	Mauritius
CF	6770	Central African Republic	HN	7278	Honduras	MV	7786	Maldives
CG	6771	Congo	HR	7282	Croatia	MW	7787	Malawi
CH	6772	Switzerland	HT	7284	Haiti	MX	7788	Mexico
CI	6773	Cote d'Ivoire	HU	7285	Hungary	MY	7789	Malaysia
CK	6775	Cook Islands	ID	7368	Indonesia	MZ	7790	Mozambique
CL	6776	Chile	IE	7369	Ireland	NA	7865	Namibia
CM	6777	Cameroon	IL	7376	Israel	NC	7867	New Caledonia
CN	6778	China	IN	7378	India	NE	7869	Niger
CO	6779	Colombia	IO	7379	British Indian Ocean Territory	NF	7870	Norfolk Island
CR	6782	Costa Rica	IQ	7381	Iraq	NG	7871	Nigeria
CU	6785	Cuba	IR	7382	Iran, Islamic Republic of	NI	7873	Nicaragua
CV	6786	Cape Verde	IS	7383	Iceland	NL	7876	Netherlands
CX	6788	Christmas Island	IT	7384	Italy	NO	7879	Norway
CY	6789	Cyprus	JM	7477	Jamaica	NP	7880	Nepal
CZ	6790	Czech Republic	JO	7479	Jordan	NR	7882	Nauru
DE	6869	Germany	JP	7480	Japan	NU	7885	Niue
DJ	6874	Djibouti	KE	7569	Kenya	NZ	7890	New Zealand
DK	6875	Denmark	KG	7571	Kyrgyzstan	OM	7977	Oman
			KH	7572	Cambodia	PA	8065	Panama

Abbreviation	Code	Country	Abbreviation	Code	Country	Abbreviation	Code	Country
PE	8069	Peru	SJ	8374	Svalbard and Jan Mayen	TW	8487	Taiwan, Province of China
PF	8070	French Polynesia	SK	8375	Slovakia	TZ	8490	Tanzania, United Republic of
PG	8071	Papua New Guinea	SL	8376	Sierra Leone	UA	8565	Ukraine
PH	8072	Philippines	SM	8377	San Marino	UG	8571	Uganda
PK	8075	Pakistan	SN	8378	Senegal	UM	8577	United States Minor Outlying Islands
PL	8076	Poland	SO	8379	Somalia	US	8583	United States
PM	8077	Saint Pierre and Miquelon	SR	8382	Suriname	UY	8589	Uruguay
PN	8078	Pitcairn	ST	8384	Sao Tome and Principe	UZ	8590	Uzbekistan
PR	8082	Puerto Rico	SV	8386	El Salvador	VA	8665	Holy See (Vatican City State)
PT	8084	Portugal	SY	8389	Syrian Arab Republic	VC	8667	Saint Vincent and the Grenadines
PW	8087	Palau	SZ	8390	Swaziland	VE	8669	Venezuela
PY	8089	Paraguay	TC	8467	Turks and Caicos Islands	VG	8671	Virgin Island, British
QA	8165	Qatar	TD	8468	Chad	VI	8673	Virgin Islands, U.S.
RE	8269	Reunion	TF	8470	French Southern Territories	VN	8678	Viet Nam
RO	8279	Romania	TG	8471	Togo	VU	8685	Vanuatu
RU	8285	Russian Federation	TH	8472	Thailand	WF	8770	Wallis and Futuna
RW	8287	Rwanda	TJ	8474	Tajikistan	WS	8783	Samoa
SA	8365	Saudi Arabia	TK	8475	Tokelau	YE	8969	Yemen
SB	8366	Solomon Islands	TM	8477	Turkmenistan	YT	8984	Mayotte
SC	8367	Seychelles	TN	8478	Tunisia	YU	8985	Yugoslavia
SD	8368	Sudan	TO	8479	Tonga	ZA	9065	South Africa
SE	8369	Sweden	TP	8480	East Timor	ZM	9077	Zambia
SG	8371	Singapore	TR	8482	Turkey	ZW	9087	Zimbabwe
SH	8372	Saint Helena	TT	8484	Trinidad and Tobago			
SI	8373	Slovenia	TV	8486	Tuvalu			

In Case of Difficulty

If you encounter a problem, please turn the power off, then on again. If the unit is still not functioning normally, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected, or then consult your authorised Alpine dealer.

Basic

No function or display.

- Vehicle's ignition is off.
 - If connected according to the instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
 - Check power lead connections.
- Blown fuse.
 - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.
- Internal micro-computer malfunctioned due to interference noise, etc.
 - Press the RESET switch with a ballpoint pen or other pointed article.

No sound or unnatural sound.

- Incorrect setting of volume/balance/fader controls.
 - Readjust the controls.
- Connections are not properly or securely made.
 - Check the connections and firmly connect.

Screen not displayed.

- Brightness/Contrast control is set at the minimum position.
 - Adjust the Brightness/Contrast control.
- Temperature in the vehicle is too low.
 - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the DVD are not securely made.
 - Check the connections and firmly connect.
- The Parking Brake Lead is not connected.
- The Parking Brake is not engaged.
 - Connect the Parking Brake Lead, then engage the Parking Brake. (See page 98)

Movement of displayed picture is abnormal.

- Temperature in the vehicle is too high.
 - Allow the vehicle's interior temperature to cool.

The optional remote control is inoperative.

- The remote control sensor setting of "Remote Sensor Setting" (page 42) is not set to this unit ("Front").
 - Set for "Front."

Radio

Unable to receive stations.

- No antenna, or open connection in the antenna cable.
 - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

Unable to tune stations in the seek mode.

- You are in a weak signal area.
 - Make sure the tuner is in DX mode.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
 - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
 - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

Broadcast is noisy.

- The antenna is not the proper length.
 - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
 - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
 - If above solution does not work, tune in another station.

Disc

Disc playback sound is wavering.

- Moisture condensation in the disc Module.
 - Allow enough time for the condensation to evaporate (about 1 hour).

Disc insertion not possible.

- A disc is already in this unit.
 - Eject the disc and remove it.
- The disc is being improperly inserted.
 - Insert the disc correctly. (See page 22)

Unable to fast forward or backward the disc.

- The disc has been damaged.
 - Eject the disc and discard it; using a damaged disc in your unit can cause damage to the mechanism.

Disc playback sound skips due to vibration.

- Improper mounting of the unit.
 - Securely re-mount the unit.
- Disc is very dirty.
 - Clean the disc.
- Disc has scratches.
 - Change the disc.
- The pick-up lens is dirty.
 - Do not use a commercially available lens cleaner disc. Consult your nearest Alpine dealer.

Disc playback sound skips without vibration.

- Dirty or scratched disc.
 - Clean the disc; a damaged disc should be replaced.

CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW playback not possible.

- Close session (finalisation) has not been performed.
 - Perform finalisation and attempt playback again.

Error displays.

- Mechanical error.
 - Touch [▲ Disc] on the Open/Tilt screen. After the error indication disappears, insert the disc again. If the above-mentioned solution does not solve the problem, consult your nearest Alpine dealer.

MP3/WMA/AAC is not played back.

- Writing error occurred. The CD format is not compatible.
 - Make sure the CD has been written in a supported format. Refer to "About MP3/WMA/AAC" (pages 34 to 35), then rewrite in the format supported by this device.

Unit does not operate.

- Condensation.
 - Wait a while (about 1 hour) for the condensation to dry.

Playback does not start.

- Disc is loaded upside-down.
 - Check the disc and load it with the labelled side facing upward.
- Disc is dirty.
 - Clean the disc.
- A disc not able to play back with this unit is loaded.
 - Check if the disc is able to be played back.
- Parental lock is set.
 - Cancel the parental lock or change the rating level.

Picture is unclear or noisy.

- Disc is being fast-forwarded or fast-reversed.
 - The picture may be slightly disturbed, but this is normal.
- Vehicle's battery power is weak.
 - Check the battery power and wiring.
(The unit may malfunction if the battery power is under 11 volts with a load applied.)

Image stops sometimes.

- Disc is scratched.
 - Replaced with a non-scratched disc.

If this Message Appears

Various messages are displayed on the screen during operation. In addition to the messages telling you the current status or providing guidance for the next operation, there are also the following error messages. If one of these error messages is displayed, carefully follow the instructions in the solution column.

System**If you are driving, please pull over before using this function.**

- A setup operation, etc., was carried out while the vehicle was running.
 - Move the vehicle to a safe location, stop, and engage the parking brake, then carry out this operation.

USB current error.

- Abnormal current is run to the USB connector device.
 - Turn the ignition key off, and then set to ON again.
 - Attempt to connect another iPod/iPhone/USB memory device.

 
Unable to access the DVD drive.**The system will reset.**

- An access error to DVD drive occurred for some reasons.
 - The unit is rebooted automatically.

Unable to access the DVD drive.**Please inquire details from the service center.**

- An access error to DVD drive occurred for some reasons.
 - Please ask Service Centre for help.

Audio/Visual**Read error.****Please check the Disc.**

- Scratched disc, contaminated disc/poor recording/disc incompatible with this unit.
 - Touch [ Disc] on the Open/Tilt screen.
 - Change the disc.

USB device error.

- An iPod/iPhone that is not supported by the unit is connected.
 - Connect an iPod/iPhone that is supported by the unit.
 - Reset the iPod.
- A USB device that is not supported by the unit is connected.
 - Attempt to connect another USB memory device.
- Communication error.
 - Turn the ignition key off, and then set to ON again.
 - Check the display by reconnecting between the iPod/iPhone and the unit, using the iPod/iPhone cable.
 - Check the display by reconnecting between the USB memory device and the unit.
- Caused by the iPod/iPhone Software Version not being compatible with this unit.
 - Update the iPod/iPhone Software Version to be compatible with this unit.
- The iPod/iPhone is not verified.
 - Change another iPod/iPhone.

Region Code Violation.

- Disc does not match regional code number.
 - Load a disc that matches the regional code number.

No data.

- There are no data in the iPod/iPhone.
 - Download data to the iPod/iPhone and connect to the INE-W920R/INE-W928R.
- There are no data in the USB memory.
 - Download data to the USB memory and connect to this unit.

Un-readable song was skipped.

- A copy-protected WMA file has been detected.
 - You can only play back non-copy-protected files.
- A sampling rate/bit rate not supported by the unit is used.
 - Use a sampling rate/bit rate supported by the unit.

BLUETOOTH**Please check BLUETOOTH audio device.**

- The BLUETOOTH audio device was not connected correctly.
 - Check the settings for INE-W920R/INE-W928R and the BLUETOOTH audio device and reconnect.

Please check mobile device.

- The mobile phone was not connected correctly.
 - Check the settings for INE-W920R/INE-W928R and the mobile phone and reconnect.

Unable to download phonebook.

- Phonebook failed to read due to mobile phone disconnection, etc.
 - Check the mobile phone connection, and then conduct synchronising and adding again. (See page 65)
 - The connected mobile phone does not support synchronising of its phone book.
 - Connect the mobile phone that supports synchronising the phone book, then synchronise again. (See page 65)
-

Navigation**The vehicle's position is erroneous.**

- The GPS reception is poor.
 - Drive the vehicle in an area of good GPS reception to allow the unit to recalibrate itself. Move to a location where strong GPS reception is possible.

No operation

- Moisture condensation
 - Allow enough time for the condensation to evaporate (about 1 hour).
- Ambient Temperature
 - Make sure the temperature inside the vehicle is between 0°C and 45°C (32°F and 113°F).

Playing back a DRM protected DivX File

Some operations cannot be performed while displaying the following message.

Authorization Error.**This player is not authorised to play this video.**

- The version of the DRM protected DivX® File is not supported by this unit.
 - Play the supported DivX® File.
-

Rental Expired.

- The file being attempted to play has a limited number of viewings. The viewing limit has been reached and can no longer be played on this device. After the message has been displayed, the beginning of the next file will automatically be played back.
-

This DivX rental has used XX out of YY views.**Continue?**

- If the total number of viewings for this file has not been exceeded, the views remaining is displayed.
 - To play back, select [OK]. If the next file is to be played back, select [Cancel].
-

Do you wish to stop playing rental file?

- While playing back a rental file, "Do you wish to stop playing rental file?" is displayed when the following operations are performed. Selecting [OK], reduces the number of views by 1.
 - Folder Up/Down
 - STOP
 - Search operation
 - Move to the first/last DivX® file by Chapter Up/Down
 - To interrupt the playback, touch [OK], or touch [Cancel] to not interrupt.
-

Audio format not supported.

- The file being played is a DivX® file with an unsupported audio format, so only the video data is played.
 - Play a DivX® file with a supported audio format.
-

Video frame rate not supported.

- The file being played is a DivX® file with an unsupported frame rate.
 - Play a DivX® file with a supported frame rate.
-

Video resolution not supported.

- The file being played is a DivX® file with an unsupported resolution.
 - Play a DivX® file with a supported resolution.
-

Specifications

MONITOR SECTION

Screen Size	6.1" (INE-W920R) 8.0" (INE-W928R)
LCD Type	Transparent type TN LCD
Operation System	TFT active matrix
Number of Picture Elements	1,152,000 pcs. (800 × 3 × 480)
Effective Number of Picture Elements	99% or more
Illumination System	LED

FM TUNER SECTION

Tuning Range	87.5 – 108.0 MHz
Mono Usable Sensitivity	8.1 dBf (0.7 μ V/75 ohms)
50 dB Quieting Sensitivity	12 dBf (1.1 μ V/75 ohms)
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB
Capture Ratio	2.0 dB

MW TUNER SECTION

Tuning Range	531 – 1,602 kHz
Usable Sensitivity	25.1 μ V/28 dBf

LW TUNER SECTION

Tuning Range	153 – 281 kHz
Sensitivity (IEC Standard)	31.6 μ V/30 dBf

USB SECTION

USB requirements	USB 1.1/2.0
Max. Power Consumption	1,000 mA
USB Class	USB (Play From Device)/ USB (Mass Storage Class)
File System	FAT12/16/32
MP3 Decoding	MPEG-1/2 AUDIO Layer-3
WMA Decoding	Windows Media™ Audio
AAC Decoding	AAC-LC format “.m4a” file
Number of Channels	2-Channel (Stereo)
Frequency Response*	5-20,000 Hz (\pm 1 dB)
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Signal-to-Noise Ratio	100 dB
Channel Separation	85 dB (at 1 kHz)

* Frequency response may differ depending on the encoder software/bit rate.

CD/DVD SECTION

Frequency Response	5 – 20,000 Hz (\pm 1 dB)
Wow & Flutter (% WRMS)	Below measurable limits
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Channel Separation	85 dB (at 1 kHz)
Signal system	NTSC/PAL
Horizontal resolution	500 lines or greater
Video output level	1Vp-p (75 ohms)
Video S/N ratio	DVD: 60 dB

Audio S/N ratio	100 dB
-----------------	--------

PICKUP

Wave length	DVD: 666 nm CD: 785 nm
Laser power	CLASS II

GPS SECTION

GPS Reception frequency	1575.42 \pm 1 MHz
GPS Reception sensitivity	-130 dB max.

BLUETOOTH SECTION

BLUETOOTH Specification	Bluetooth V2.1+EDR
Output Power	+4 dBm Max. (Power class 2)
Profile	HFP (Hands-Free Profile) OPP (Object Push Profile) PBAP (Phone Book Access Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)

GENERAL

Power Requirement	14.4 V DC (11–16 V allowable)
Operating temperature	-4°F to +140°F (-20°C to + 60°C)
Maximum Power Output	50 W \times 4
Output Voltage	2,000 mV/10k ohms (INE-W920R) 4,000 mV/10k ohms (INE-W928R)
Weight	2.26 kg (INE-W920R) 2.76 kg (INE-W928R)
Audio output level (INE-W920R/INE-W928R)	
Preout (Front, Rear):	2V/10k ohms (max.)/4V/10k ohms (max.)
Preout (Subwoofer):	2V/10k ohms (max.)/4V/10k ohms (max.)
AUX OUT:	1.2V/10k ohms/1.2V/10k ohms

CHASSIS SIZE (INE-W920R/INE-W928R)

Width	178 mm / 178 mm
Height	100 mm / 100 mm
Depth	164.4 mm / 152.2 mm

NOSE SIZE (INE-W920R/INE-W928R)

Width	170 mm / 197 mm
Height	95 mm / 124.4 mm
Depth	18.5 mm / 30.2 mm

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.

CAUTION

**CLASS 1
LASER PRODUCT**

(Bottom side of player)

CAUTION-Laser radiation when open, DO NOT STARE INTO BEAM

(Bottom side of player)

END USER LICENSE AGREEMENT (Microsoft)

You have acquired a device ("DEVICE") that includes software licensed by Alpine Electronics, Inc. (collectively "ALPINE") from an affiliate of Microsoft Corporation (collectively "MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE INSTEAD, PROMPTLY CONTACT ALPINE FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE,

This EULA grants you the following license: You may use the SOFTWARE only on the DEVICE.

NOT FAULT TOLERANT.

THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON ALPINE TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.

NO WARRANTIES FOR THE SOFTWARE,

THE SOFTWARE is provided "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR SOFTWARE THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.

NO LIABILITY FOR CERTAIN DAMAGES.

EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S. \$250.00).

LIMITATIONS ON REVERSE ENGINEERING, DECOMPILE, AND DISASSEMBLY

You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

ADDITIONAL SOFTWARE/SERVICES.

The SOFTWARE may permit ALPINE, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet – base service components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE (“Supplemental Components”).

- If ALPINE provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.
- If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be licensor of the Supplemental Component(s).
- ALPINE, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

RECOVERY MEDIA.

If SOFTWARE is provided by ALPINE on separate media and labelled “Recovery Media” you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.

UPGRADES.

If the SOFTWARE is provided by ALPINE separate from the DEVICE on separate media or via web download or other means, and is labelled “For Upgrade Purposes Only” you may install one (1) copy of such SOFTWARE onto the DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

TERMINATION.

Without prejudice to any other rights, ALPINE or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

INTELLECTUAL PROPERTY RIGHTS.

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or suppliers. The SOFTWARE is licensed, not sold.

You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

TRADEMARKS.

This EULA does not grant you any rights in connection with any trademarks or service marks of ALPINE, MS, Microsoft Corporation, their affiliates or suppliers.

PRODUCT SUPPORT.

Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to ALPINE support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact ALPINE for any other reason, please refer to the address provided in the documentation for the DEVICE.

SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS.

You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

EXPORT RESTRICTION.

You acknowledge that SOFTWARE is of US-origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>

END USER LICENSE AGREEMENT (NAVTEQ)

PLEASE READ THIS END USER LICENSE AGREEMENT
CAREFUL BEFORE USING THE NAVTEQ DATABASE

NOTICE TO THE USER

THIS IS A LICENSE AGREEMENT - AND NOT AN AGREEMENT FOR SALE - BETWEEN YOU AND NAVTEQ B.V. FOR YOUR COPY OF THE NAVTEQ NAVIGABLE MAP DATABASE, INCLUDING ASSOCIATED COMPUTER SOFTWARE, MEDIA AND EXPLANATORY PRINTED DOCUMENTATION PUBLISHED BY NAVTEQ (JOINTLY "THE DATABASE"). BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT ("AGREEMENT"). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE DATABASE, ALONG WITH ALL OTHER ACCOMPANYING ITEMS, TO YOUR SUPPLIER FOR A REFUND.

OWNERSHIP

The Database and the copyrights and intellectual property or neighboring rights therein are owned by NAVTEQ or its licensors. Ownership of the media on which the Database is contained is retained by NAVTEQ and/or your supplier until after you have paid in full any amounts due to NAVTEQ and/or your supplier pursuant to this Agreement or similar agreement(s) under which goods are provided to you.

LICENSE GRANT

NAVTEQ grants you a non-exclusive license to use the Database for your personal use or, if applicable, for use in your business' internal operations. This license does not include the right to grant sub-licenses.

LIMITATIONS ON USE

The Database is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws (e.g. national laws based on the European Software Directive (91/250) and the Database Directive (96/9)), you may not extract or reutilize substantial parts of the contents of the Database nor reproduce, copy, modify, adapt, translate, disassemble, decompile, reverse engineer any portion of the Database. If you wish to obtain interoperability information as meant in (the national laws based on) the European Software Directive, you shall grant NAVTEQ reasonable opportunity to provide said information on reasonable terms, including costs, to be determined by NAVTEQ.

TRANSFER OF LICENSE

You may not transfer the Database to third parties, except when installed in the system for which it was created or when you do not retain any copy of the Database, and provided that the transferee agrees to all terms and conditions of this Agreement and confirms this in writing to NAVTEQ. Multi-disc sets may only be transferred or sold as a complete set as provided by NAVTEQ and not as subset thereof.

LIMITED WARRANTY

NAVTEQ warrants that, subject to the warnings set out below, for a period of 12 months after acquisition of your copy of the Database, it will perform substantially in accordance with NAVTEQ's Criteria for Accuracy and Completeness existing on the date you acquired the Database; these criteria are available from NAVTEQ at your request. If the Database does not perform in accordance with this limited warranty, NAVTEQ will use reasonable efforts to repair or replace your non-conforming copy of the Database. If these efforts do not lead to performance of the Database in accordance with the warranties set out herein, you will have the option to either receive a reasonable refund of the price you paid for the Database or to rescind this Agreement. This shall be NAVTEQ's entire liability and your sole remedy against NAVTEQ. Except as expressly provided in this section, NAVTEQ does not warrant nor make any representations regarding the use of results of the use of the Database in terms of its correctness, accuracy, reliability, or otherwise. NAVTEQ does not warrant that the Database is or will be error free. No oral or written information or advice provided by NAVTEQ, your supplier or any other person shall create a warranty or in any way increase the scope of the limited warranty described above. The limited warranty set forth in this Agreement does not affect or prejudice any statutory legal rights that you may have under the legal warranty against hidden defects.

If you did not acquire the Database from NAVTEQ directly, you may have statutory rights against the person from whom you have acquired the Database in addition to the rights granted by NAVTEQ hereunder according to the law of your jurisdiction. The above warranty of NAVTEQ shall not affect such statutory rights and you may assert such rights in addition to the warranty rights granted herein.

LIMITATION OF LIABILITY

The price of the Database does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the Database. Accordingly, in no event shall NAVTEQ be liable for any consequential or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the Database, whether in an action in contract or tort or based on a warranty, even if NAVTEQ has been advised of the possibility of such damages. In any event NAVTEQ's liability for direct damages is limited to the price of your copy of the Database.

THE LIMITED WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

WARNINGS

The Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results. The Database does not include or reflect information on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNING LAW

This Agreement shall be governed by the laws of the jurisdiction, in which you reside at the date of acquisition of the Database. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Database shall apply. In all other cases, or if the jurisdiction where you acquired the Database cannot be defined, the laws of the Netherlands shall apply. The courts competent at your place of residence at the time you acquired the Database shall have jurisdiction over any dispute arising out of, or relating to this Agreement, without prejudice to NAVTEQ's right to bring claims at your then current place of residence.

Installation and Connections

Before installing or connecting the unit, please read the following and pages 8 to 13 of this manual thoroughly for proper use.

Warning

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR SHIFT LEVER.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

Caution

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

Precautions

- Be sure to disconnect the cable from the (–) battery post before installing your INE-W920R/INE-W928R. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the colour coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the INE-W920R/INE-W928R to the fuse box, make sure the fuse for the intended circuit of the INE-W920R/INE-W928R has the appropriate amperage. Failure to do so may result in damage to the unit and/or the vehicle. When in doubt, consult your Alpine dealer.
- The INE-W920R/INE-W928R uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorised Alpine dealer for assistance.
- Be sure to connect the speaker (–) leads to the speaker (–) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.
- The Display must be completely retracted in the casing when installing. If it is not, problems may occur.
- When installing in automobiles, make sure the Display can open/close without coming in contact with the gear shift.

IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number plate is located on the bottom of the unit.

SERIAL NUMBER: _____
INSTALLATION DATE: _____
INSTALLATION TECHNICIAN: _____
PLACE OF PURCHASE: _____

Installation


INE-W928R users

To install the INE-W928R, refer to the manual in the separately purchased installation kit for each car type.

Caution


Do not block the unit's fan or heat sink, thus preventing air circulation. If blocked, heat will accumulate inside the unit and may cause a fire.

<example>

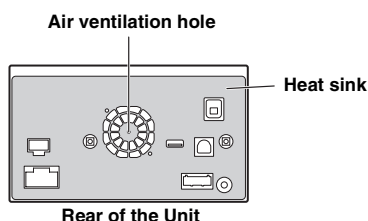


Caution concerning the installation location

- 1 Before installing, make sure that the opening and closing of the display will not interfere with operation of the gear shift. (INE-W928R only)

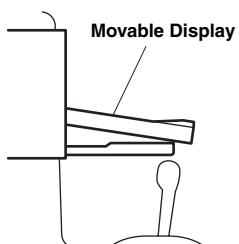


2 Angle of installation

Install at an angle between horizontal and 30°. Note that installing at an angle outside of this range will result in a loss of performance and possibly damage.

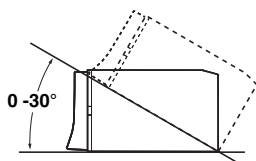

3 Mounting the GPS Antenna inside the vehicle.

- 1 Clean the mounting location.
- 2 Put on the GPS Antenna mounting plate.
- 3 Mount the GPS Antenna.

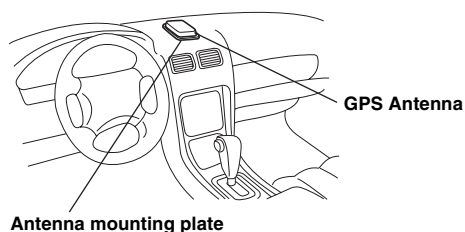


- Mount the GPS Antenna on a flat plane of the dash board or rear tray.
- Some thermal reflection type or thermal absorption type glass may interrupt high frequency waves. If reception is poor with the antenna installed inside the car, try to mount the antenna outside the car.
- Make sure the GPS Antenna is not covered (obstructed) by any metallic surface or object.

4 Mounting the Microphone.

For safe use, make sure of the following:


- location is stable and firm.
- driver's view and operations are not obstructed.
- microphone is located where the driver's voice can be easily picked up (on the sun visor, etc.).

When you speak into the microphone, you should not have to change your driving posture. This may cause a distraction, taking your attention away from safely driving your vehicle. Carefully consider direction and distance while mounting the microphone. Confirm that the driver's voice can be easily picked up at the selected location.

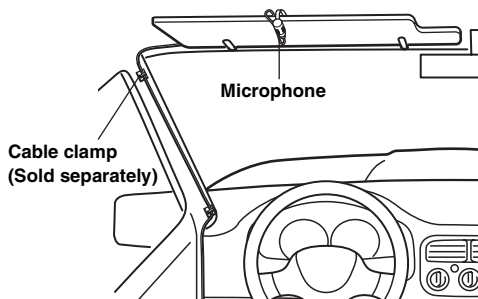

■ For INE-W920R


- 5 Remove the mounting sleeve from the main unit (see "Removal" on page 96). Slide the unit into the mounting sleeve and secure it.

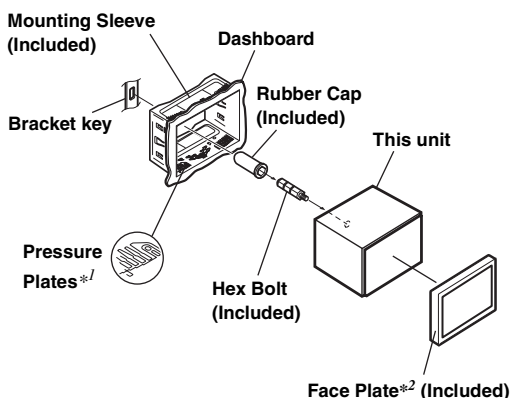

*1 If the installed mounting sleeve is loose in the dashboard, the pressure plates may be bent slightly to remedy the problem.

*2 The supplied face plate may be mounted.

- 6 When your vehicle has the Bracket, mount the long hex bolt onto the rear panel of the INE-W920R and put the Rubber Cap on the hex bolt. If your vehicle does not have the Mounting Support, reinforce the head unit with the metal mounting strap (not supplied). Secure the ground lead of the unit to a clean metal spot using a screw (*1) already attached to the vehicle's chassis. Connect all the leads of the INE-W920R according to details described in the CONNECTION section.

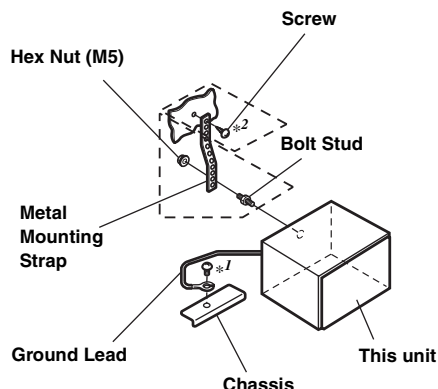


- For the screw marked "*2," use an appropriate screw for the chosen mounting location.

- 7 Slide the INE-W920R into the dashboard until it clicks. This ensures that the unit is properly locked and will not accidentally come out from the dashboard.

Removal


1. Insert the bracket keys into the unit, along the guides on either side. The unit can now be removed from the mounting sleeve.

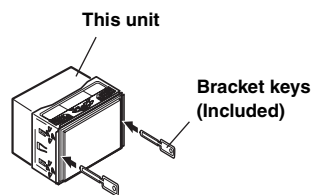

2. Pull the unit out, keeping it unlocked as you do so.

Connection Diagram of SPST Switch (sold separately)

(If the ACC power supply is not available)

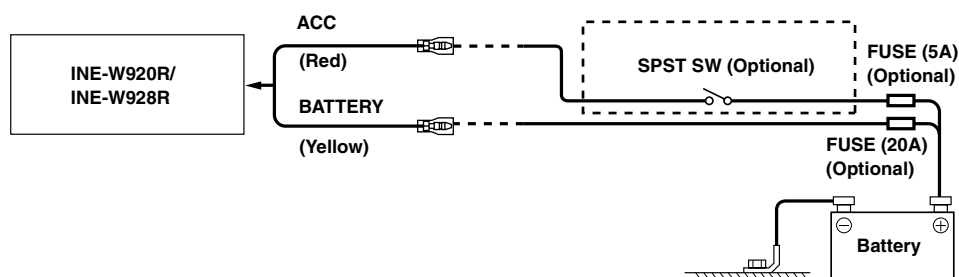


- If your vehicle has no ACC power supply, add an SPST (Single-Pole, Single-Throw) switch (sold separately) and fuse (sold separately).
- The diagram and the fuse amperage shown above are in the case when INE-W920R/INE-W928R is used individually.
- If the switched power (ignition) lead of the INE-W920R/INE-W928R is connected directly to the positive (+) post of the vehicle's battery, the INE-W920R/INE-W928R draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.

To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


Connections

■ For INE-W920R

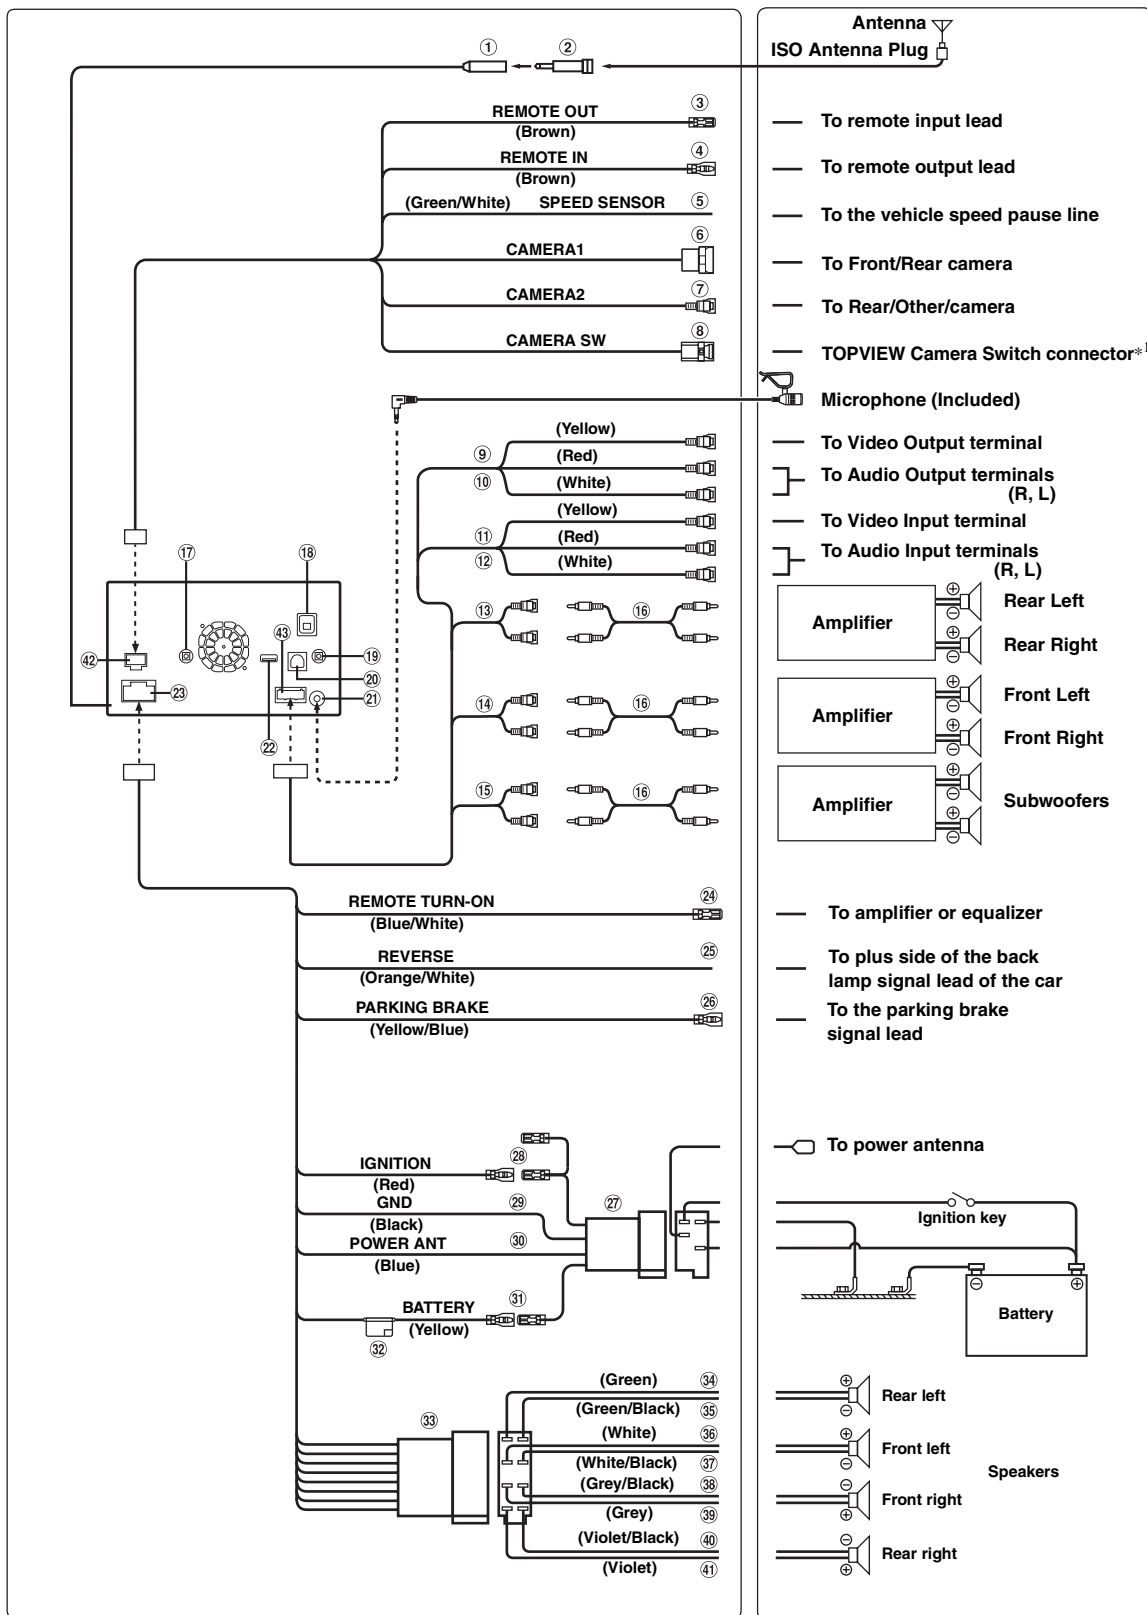

*¹ Currently, TOPVIEW is not being used.

- ① **Radio Antenna Receptacle**
- ② **ISO/JASO Antenna Adapter (sold separately)**
ISO/JASO Antenna Adapter may be required, depending on the vehicle.
- ③ **Remote Control Output Lead (Brown)**
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ④ **Remote Control Input Lead (Brown)**
Connect the external Alpine product to the remote control output lead.
- ⑤ **Speed Sensor Lead (Green/White)**
Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorised Alpine dealer.
- ⑥ **Direct CAMERA Input Connector**
Use when the optional direct camera is connected.
- ⑦ **CAMERA Input RCA Connector (Yellow)**
Use when connecting a camera with RCA Output Connector.
- ⑧ **Camera Switch Lead**
- ⑨ **Video Input Connector (AUX INPUT) (Yellow)**
Input the video.
- ⑩ **Audio Input Connectors (AUX INPUT)**
RED is right and WHITE is left input the audio.
- ⑪ **Video Output Connector (AUX OUTPUT) (Yellow)**
Output the video.
- ⑫ **Audio Output Connectors (AUX OUTPUT)**
RED is right and WHITE is left output the audio.
- ⑬ **Rear Output RCA Connectors**
It can be used as Rear Output RCA Connectors. RED is right and WHITE is left.
- ⑭ **Front Output RCA Connectors**
It can be used as Front Output RCA Connectors. RED is right and WHITE is left.
- ⑮ **Subwoofer RCA Connectors**
RED is right and WHITE is left.
- ⑯ **RCA Extension Cable (sold separately)**
- ⑰ **Steering Remote Control Interface Connector**
To steering remote control interface box.
For details about connections, consult your nearest Alpine dealer.
- ⑱ **GPS antenna Receptacle**
Connect to separately sold GPS antenna (included).
- ⑲ **iPod VIDEO Input Connector**
Input the iPod/ iPhone video signal or AUX video/audio signal.
 - Set "AUX3 In Sel." (page 55) to "iPod Video" when an iPod/iPhone is connected.
 - Set "AUX3 In Sel." (page 55) to "AUX3" when AUX video/ audio is input.
- ⑳ **Vehicle Display Interface Connector**
Outputs Vehicle Display Interface control signals. Connect this to the optional Vehicle Display Interface box.
For details about connections, consult your nearest Alpine dealer.
- ㉑ **MIC Input Connector**
To Microphone (Included).
- ㉒ **USB Connector**
To USB Memory or iPod/iPhone or Nokia Phone.
- ㉓ **Power Supply Connector**
- ㉔ **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ㉕ **Reverse Lead (Orange/White)**
Connect to the plus side of the car's reverse lamp. This lamp illuminates when the transmission is shifted into reverse (R).
With this lead properly wired, the video picture automatically switches to the rear camera whenever the car is put into reverse (R).
- ㉖ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of the parking brake switch to transmit the parking brake status signals to the INE-W920R/INE-W928R.
- ㉗ **ISO Power Supply Connector**
- ㉘ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.
- ㉙ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ㉚ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
 - *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*
- ㉛ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.
- ㉜ **Fuse Holder (15A)**
- ㉝ **ISO Connector (Speaker Output)**
- ㉞ **Left Rear (+) Speaker Output Lead (Green)**
- ㉟ **Left Rear (-) Speaker Output Lead (Green/Black)**
- ㊱ **Left Front (+) Speaker Output Lead (White)**
- ㊲ **Left Front (-) Speaker Output Lead (White/Black)**
- ㊳ **Right Front (-) Speaker Output Lead (Grey/Black)**
- ㊴ **Right Front (+) Speaker Output Lead (Grey)**
- ㊵ **Right Rear (-) Speaker Output Lead (Violet/Black)**
- ㊶ **Right Rear (+) Speaker Output Lead (Violet)**
- ㊷ **CAMERA Connector**
- ㊸ **AUX/PRE OUT Connector**

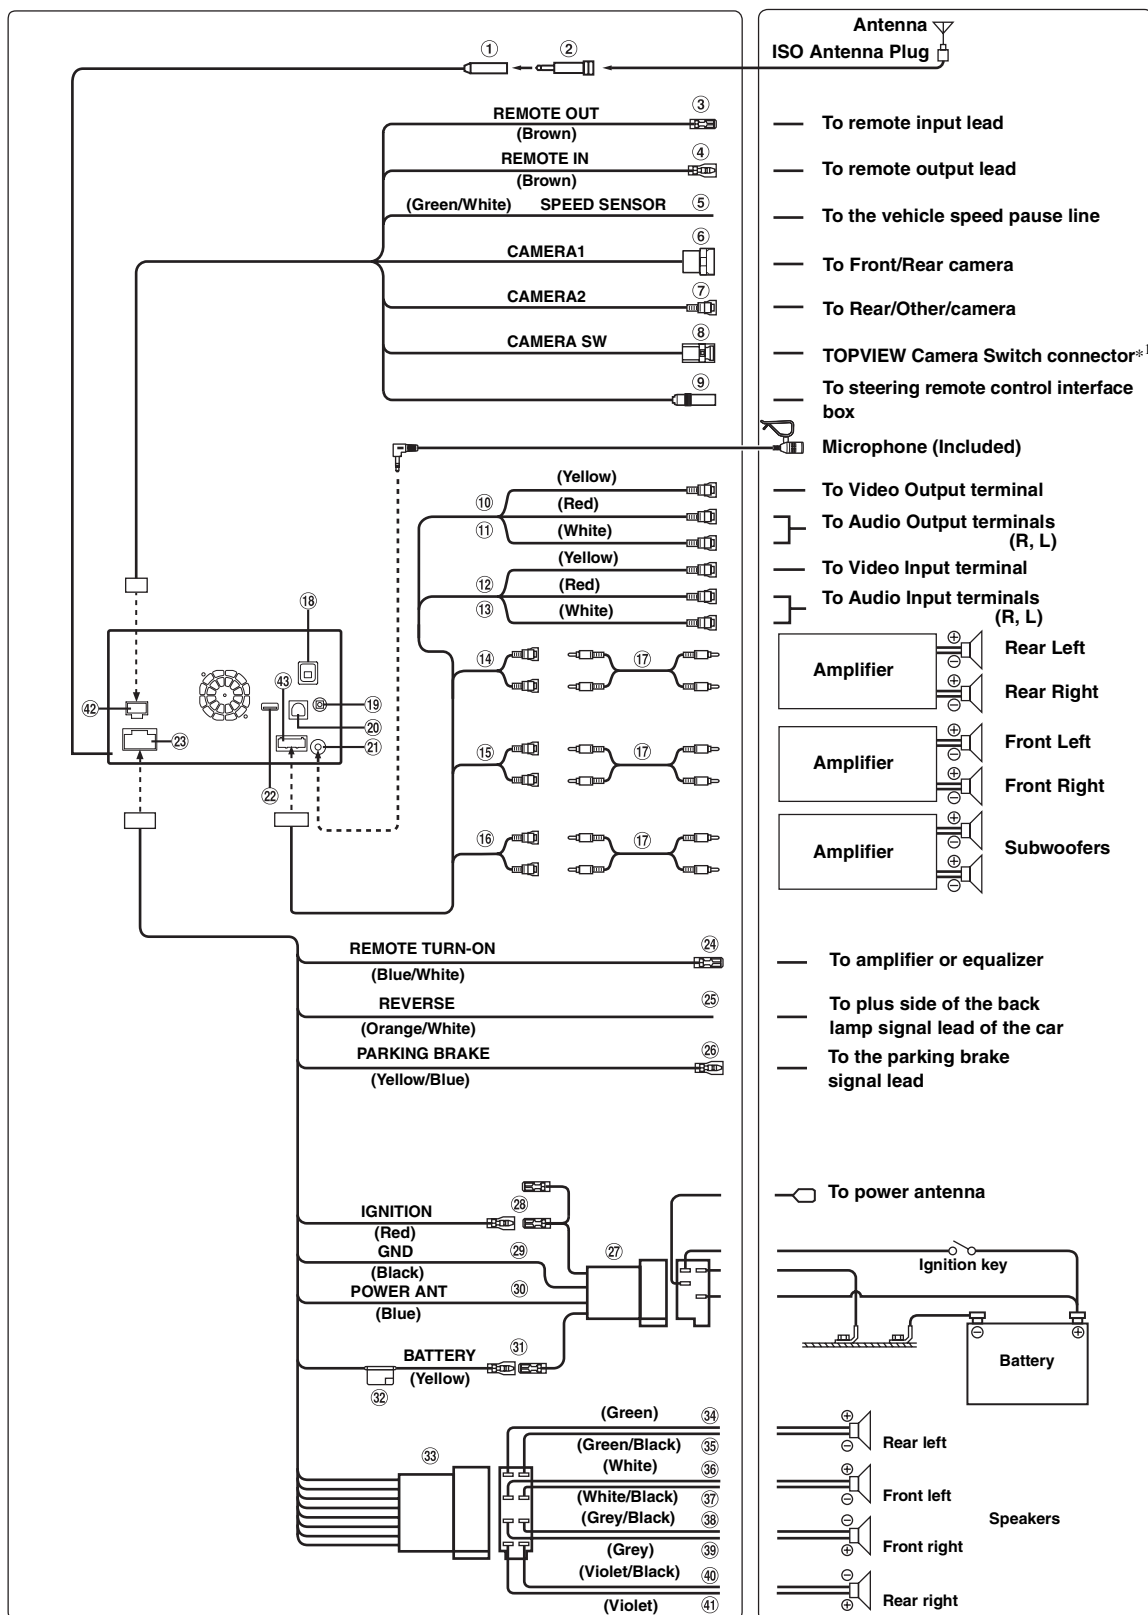


^{*1} Currently, TOPVIEW is not being used.

- ① **Radio Antenna Receptacle**
- ② **ISO/JASO Antenna Adapter (sold separately)**
ISO/JASO Antenna Adapter may be required, depending on the vehicle.
- ③ **Remote Control Output Lead (Brown)**
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ④ **Remote Control Input Lead (Brown)**
Connect the external Alpine product to the remote control output lead.
- ⑤ **Speed Sensor Lead (Green/White)**
Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorised Alpine dealer.
- ⑥ **Direct CAMERA Input Connector**
Use when the optional direct camera is connected.
- ⑦ **CAMERA Input RCA Connector (Yellow)**
Use when connecting a camera with RCA Output Connector.
- ⑧ **Camera Switch Lead**
- ⑨ **Steering Remote Control Interface Connector**
To steering remote control interface box.
For details about connections, consult your nearest Alpine dealer.
- ⑩ **Video Input Connector (AUX INPUT) (Yellow)**
Input the video.
- ⑪ **Audio Input Connectors (AUX INPUT)**
RED is right and WHITE is left input the audio.
- ⑫ **Video Output Connector (AUX OUTPUT) (Yellow)**
Output the video.
- ⑬ **Audio Output Connectors (AUX OUTPUT)**
RED is right and WHITE is left output the audio.
- ⑭ **Rear Output RCA Connectors**
It can be used as Rear Output RCA Connectors. RED is right and WHITE is left.
- ⑮ **Front Output RCA Connectors**
It can be used as Front Output RCA Connectors. RED is right and WHITE is left.
- ⑯ **Subwoofer RCA Connectors**
RED is right and WHITE is left.
- ⑰ **RCA Extension Cable (sold separately)**
- ⑱ **GPS antenna Receptacle**
Connect to separately sold GPS antenna (included).
- ⑲ **iPod VIDEO Input Connector**
Input the iPod/ iPhone video signal or AUX video/audio signal.
 - Set "AUX3 In Sel." (page 55) to "iPod Video" when an iPod/iPhone is connected.
 - Set "AUX3 In Sel." (page 55) to "AUX3" when AUX video/ audio is input.
- ⑳ **Vehicle Display Interface Connector**
Outputs Vehicle Display Interface control signals. Connect this to the optional Vehicle Display Interface box.
For details about connections, consult your nearest Alpine dealer.
- ㉑ **MIC Input Connector**
To Microphone (Included).
- ㉒ **USB Connector**
To USB Memory or iPod/iPhone or Nokia Phone.
- ㉓ **Power Supply Connector**
- ㉔ **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ㉕ **Reverse Lead (Orange/White)**
Connect to the plus side of the car's reverse lamp. This lamp illuminates when the transmission is shifted into reverse (R).
With this lead properly wired, the video picture automatically switches to the rear camera whenever the car is put into reverse (R).
- ㉖ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of the parking brake switch to transmit the parking brake status signals to the INE-W920R/INE-W928R.
- ㉗ **ISO Power Supply Connector**
- ㉘ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.
- ㉙ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ㉚ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
 - *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*
- ㉛ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.
- ㉜ **Fuse Holder (15A)**
- ㉝ **ISO Connector (Speaker Output)**
- ㉞ **Left Rear (+) Speaker Output Lead (Green)**
- ㉟ **Left Rear (-) Speaker Output Lead (Green/Black)**
- ㊱ **Left Front (+) Speaker Output Lead (White)**
- ㊲ **Left Front (-) Speaker Output Lead (White/Black)**
- ㊳ **Right Front (-) Speaker Output Lead (Grey/Black)**
- ㊴ **Right Front (+) Speaker Output Lead (Grey)**
- ㊵ **Right Rear (-) Speaker Output Lead (Violet/Black)**
- ㊶ **Right Rear (+) Speaker Output Lead (Violet)**
- ㊷ **CAMERA Connector**
- ㊸ **AUX/PRE OUT Connector**


System Example

Connection of a USB Memory or NOKIA Phone

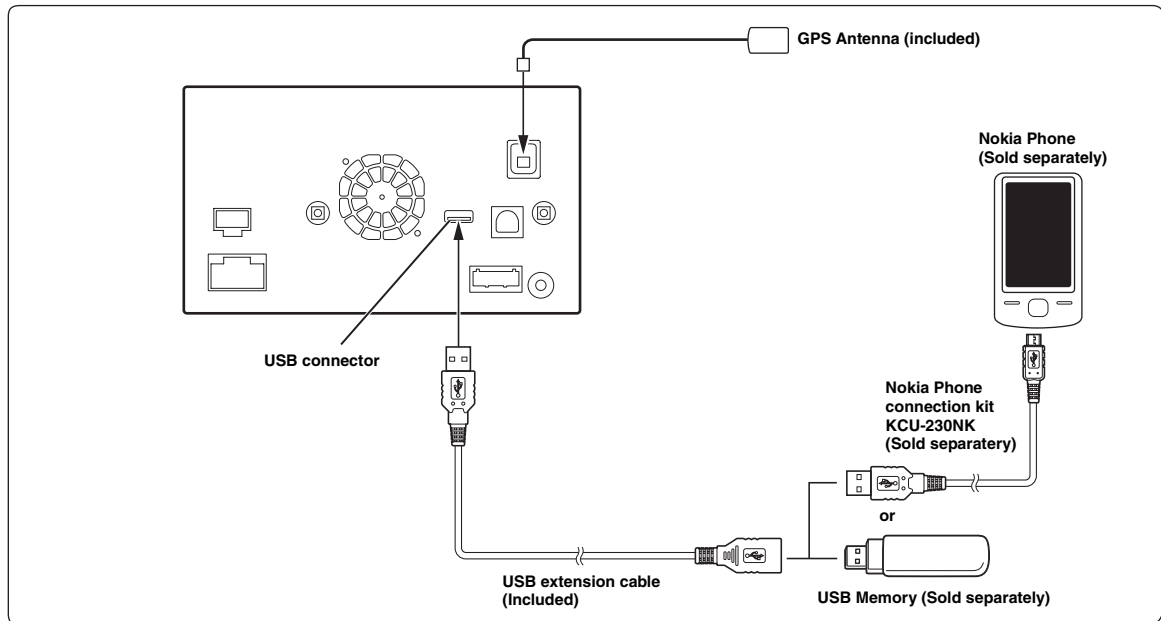

- Do not leave USB memory, in a vehicle for a long time. Heat and humidity may damage the USB memory.


Connection of an iPod/iPhone

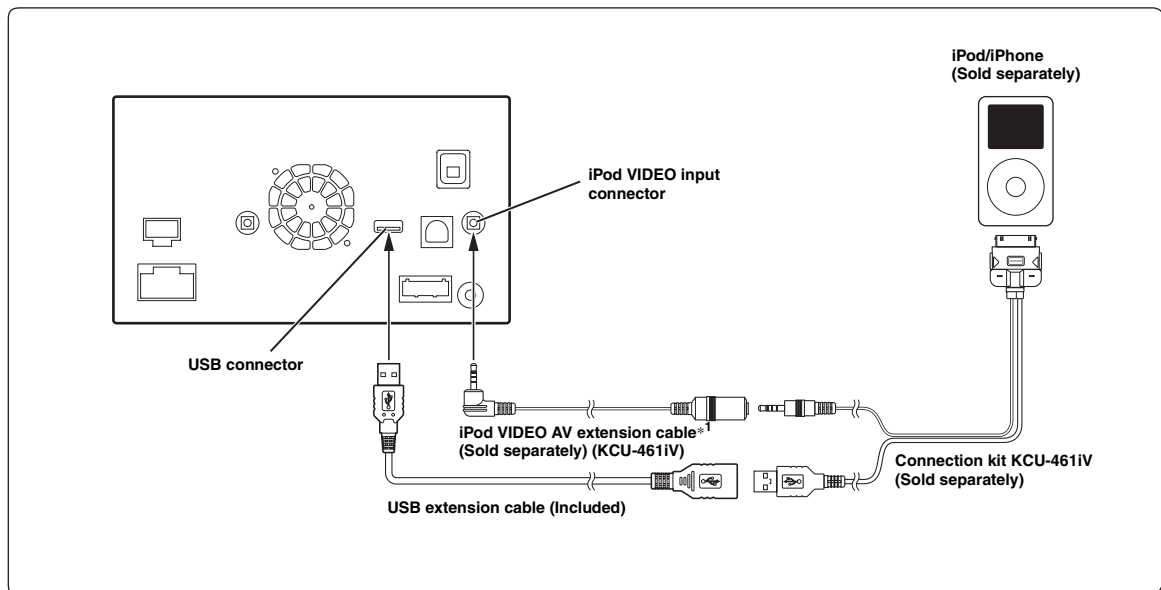

*1 If iPod VIDEO is supported, use the iPod VIDEO extension cable.

- To connect an iPod/iPhone, an optional connection kit KCU-461iV is required.
- Do not leave a iPod/iPhone in a vehicle for a long time. Heat and humidity may damage the iPod/iPhone and you may not be able to play it again.

Connection of an External device

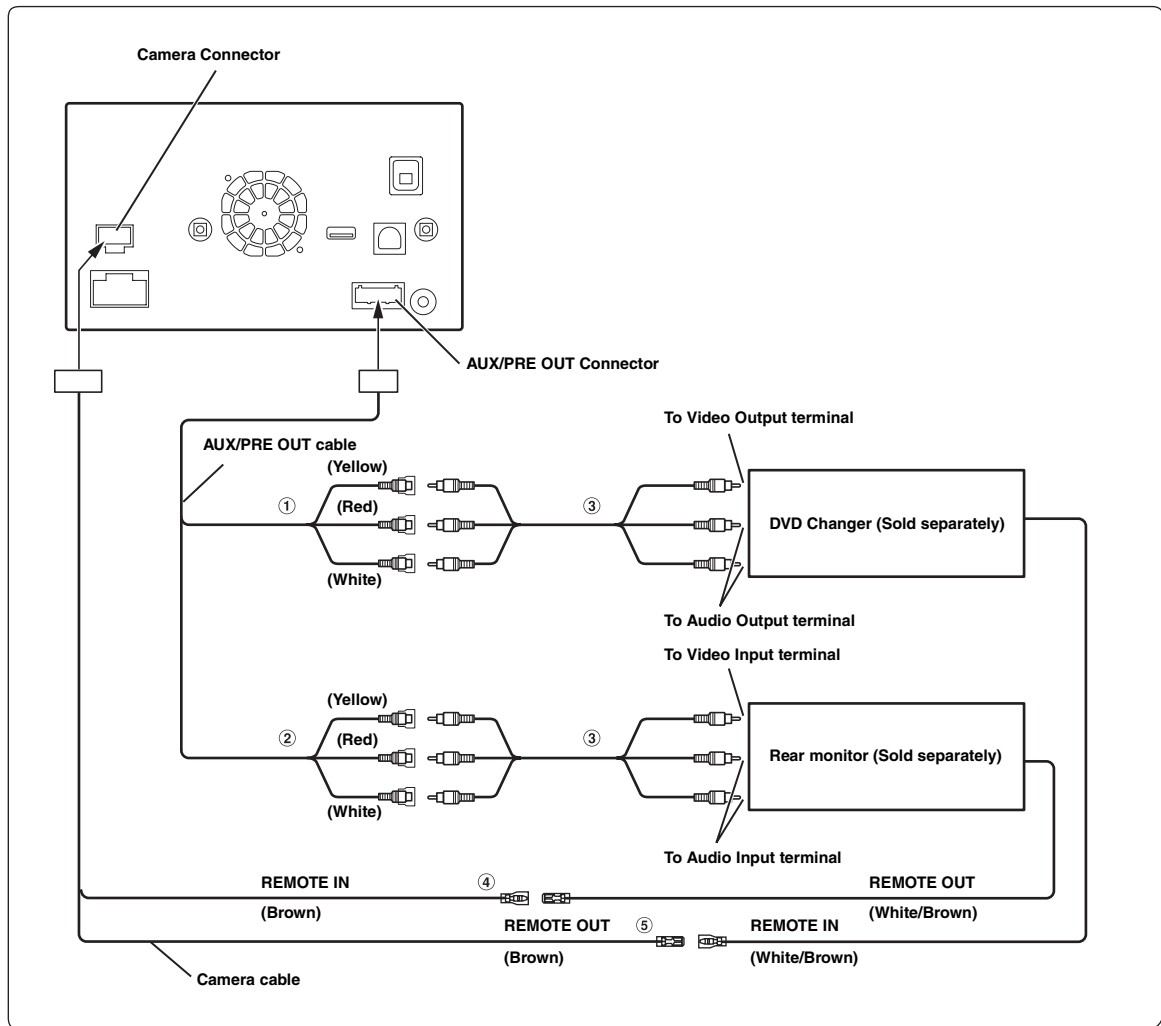

① **Video/Audio Input Connectors (AUX INPUT)**

② **Video/Audio Output Connectors (AUX OUTPUT)**
Use when connecting an optional monitor etc.

③ **RCA Extension Cable (Sold Separately)**

④ **Remote Control Input Lead (Brown)**


Connect this lead to the remote control output lead. This lead inputs the controlling signals from the remote control.

⑤ **Remote Control Output Lead (Brown)**

Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.

- You can change the name of an external device. Refer to "Setting the AUX Mode" (page 55).

Connection of a Mobile Digital TV Receiver/USB Player and DVD Changer

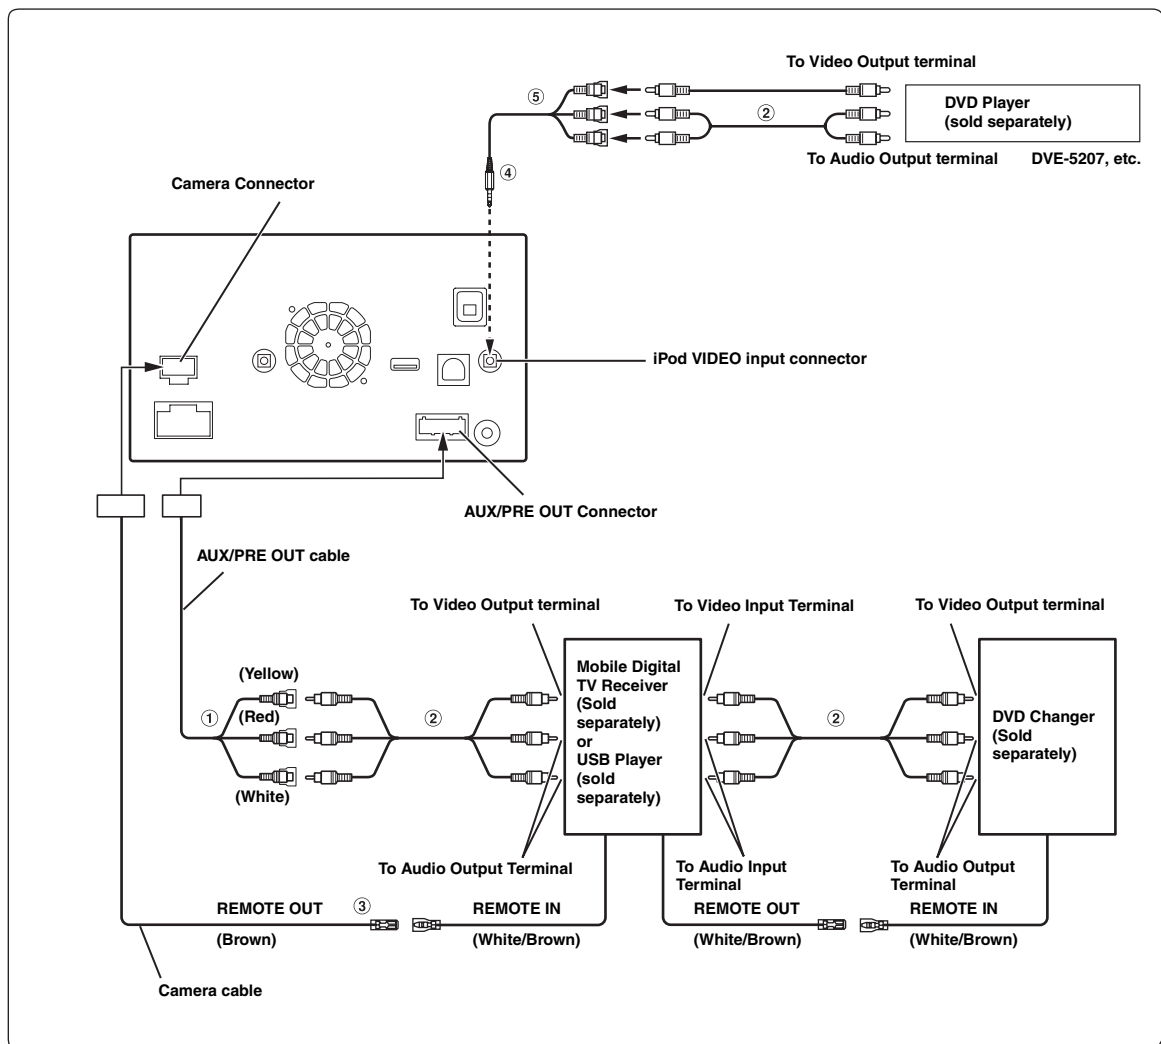

① Video/Audio Input Connectors (AUX INPUT)

② RCA Extension Cable (Sold Separately)

③ Remote Control Output Lead (Brown)

Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.


④ AV/RCA interface cable (4-pole mini AV plug to 3-RCA) (sold separately)

⑤ Video/Audio Input Connectors

YELLOW is for input video, RED is right and WHITE is left input the audio.

- You can connect one more external input device only when the "Primary Name" is set to "DVB-T" or "USB Player." Refer to "Setting the Primary AUX Name (AUX Setup)" (page 55).
- To connect an external input device to the iPod VIDEO connector, set "AUX3 In Sel." to "AUX3." Refer to "Setting the AUX3" (page 55).

Connection of an External Amplifier

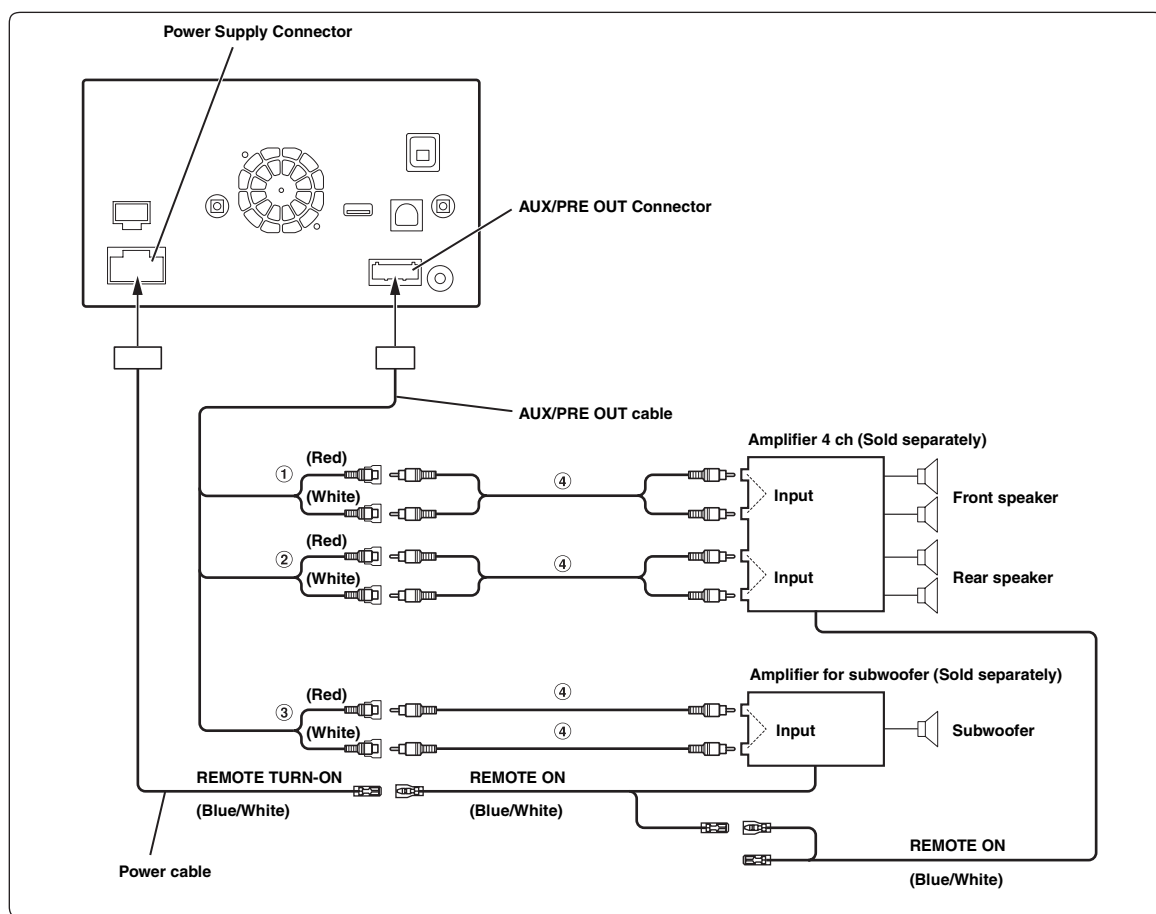

① **Front Output RCA Connectors**

RED is right and WHITE is left.


② **Rear Output RCA Connectors**

RED is right and WHITE is left.

③ **Subwoofer RCA Connector**

④ **RCA Extension Cable (Sold separately)**

Connection of cameras (Direct camera and AUX camera)

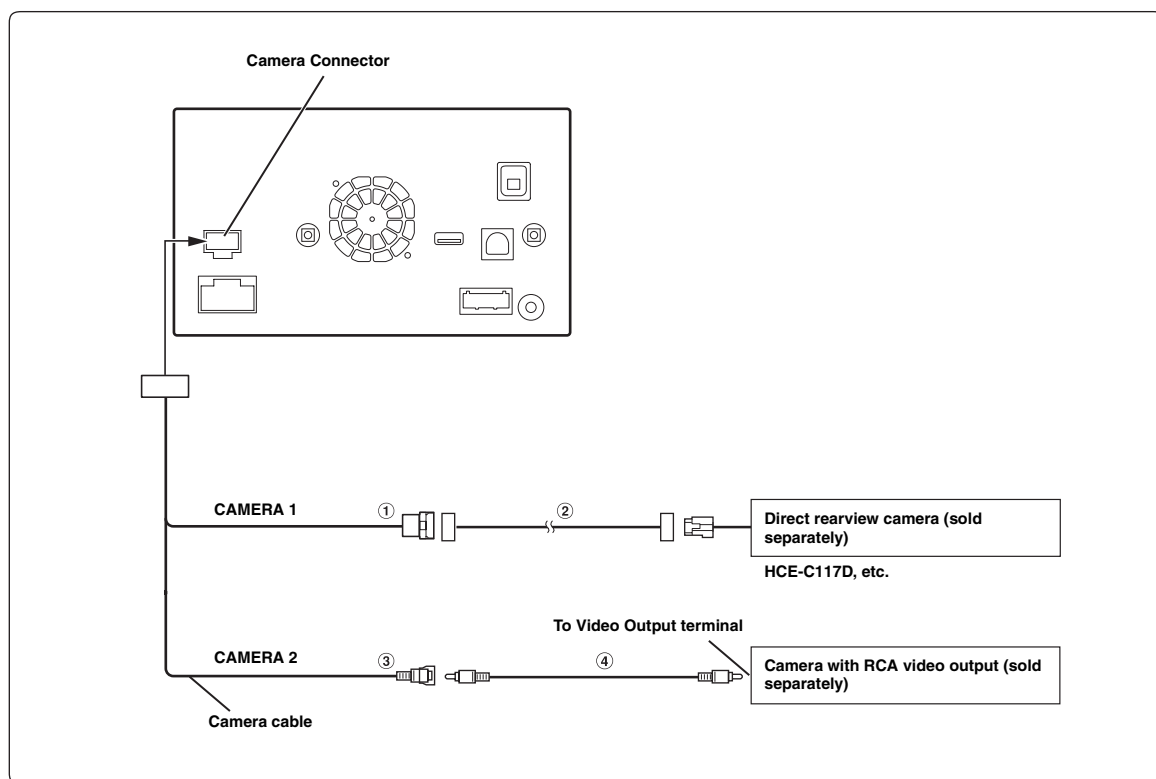


① Direct CAMERA Input Connector

② Camera extension cable (Included with direct rearview camera)

③ CAMERA Input RCA Connector

④ RCA Extension Cable (sold separately)

Connection of cameras (HCE-C212F + HCE-C210RD or HCE-C200F + HCE-C200R)

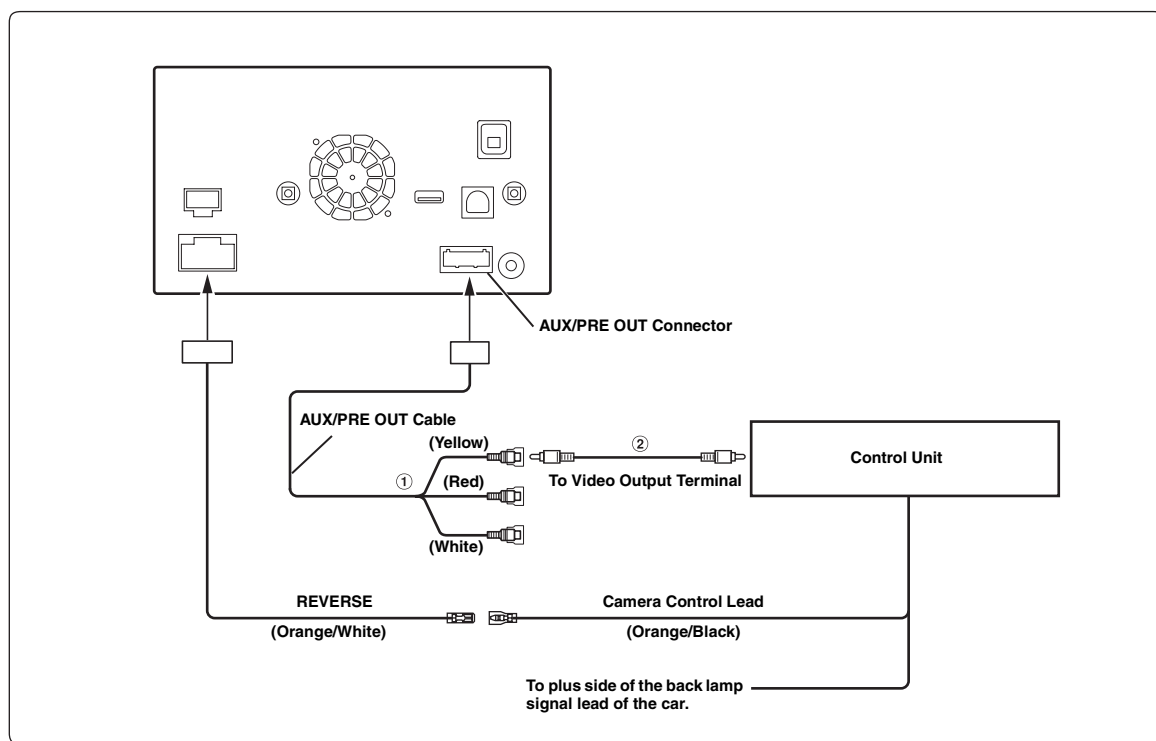

① Video/Audio Input Connectors (AUX INPUT)

② RCA Extension Cable (sold separately)

- When the screen switches from the front view camera image to the Navigation screen, the location of your vehicle may not be displayed correctly.